HONDA Quick Reference Guide for Maintenance

Honda EU30 i

Maintenance Schedule

: Check : Change : Clean : Check-adjust

Regular Service Period	Each use	First month or 20 Hours	Every 3 months or 50 Hours	Every 6 months or 100 Hours	Every year or 300 Hours
Engine oil	✓	●		●	
Air cleaner	✓		■		●
Spark plug				■	●
Sediment cup				■	
Valve clearance	Take the generator to a Honda servicing dealer.				■
Fuel tank & filter					■
Combustion chamber	Every 500 Hours				
Fuel tube	✓ Every 2 years (Replace if necessary)				

✳ Clean the air cleaner more frequentry when used in dusty areas every.

✳ Read and understand the Owner's Manual before operating the generator.


Air Cleaner Element

1 2 Replace 3 Clean 4 Squeeze 5 Oil 6 Squeeze




Spark Plug

1

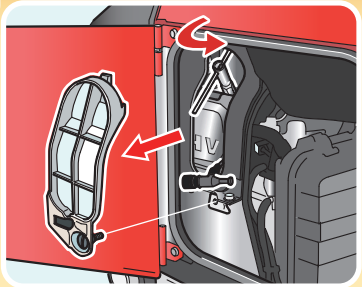


2 0.7 - 0.8mm

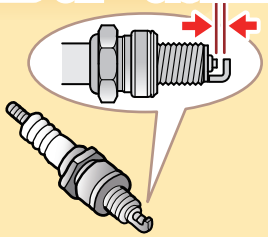


BPR6ES (NGK)

Engine Oil

1 2

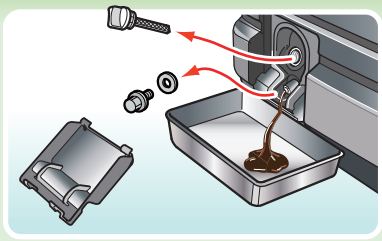

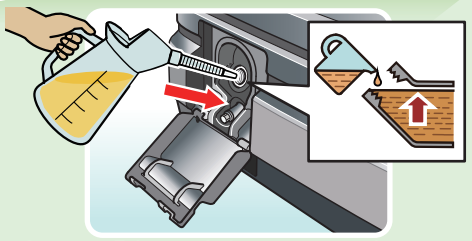


SAE 10W-30 MAX 0.55 ℓ


Prolonged storage

1



2

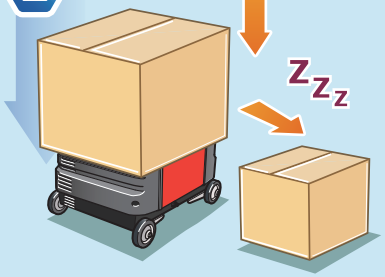

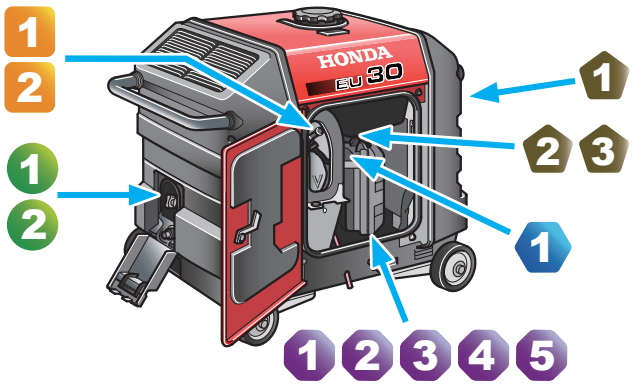


Sediment Cup

1 Fuel valve OFF



2

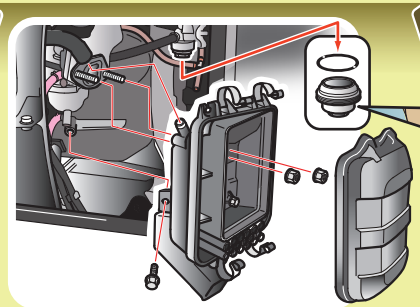

3 Clean



©Honda Motor Co., Ltd.2016
S2Z35201