HONDA Quick Reference Guide for Maintenance


WL20XH/30XH
WB20XH2/30XH2
WB20XT/30XT/,WR30XT

Maintenance Schedule

: Check : Change : Clean : Check-Readjust



Regular Service Period	Before each use	First month or 20 Hours	Every 3 months or 50 Hours	Every 6 months or 100 Hours	Every year or 300 Hours
Engine oil	◁				
		○		○	
Air cleaner			▽		
Spark plug				▽	
					○
Sediment cup				▽	
Valve clearance	Take the engine to a Honda servicing dealer.				▽
Combustion chamber	Every 500 Hours				
Fuel tank & filter					▽
Fuel line	Every 2 years (Replace if necessary)				
Idle speed					▽


* Clean the air cleaner when used in dusty areas every 10 hours or once a day

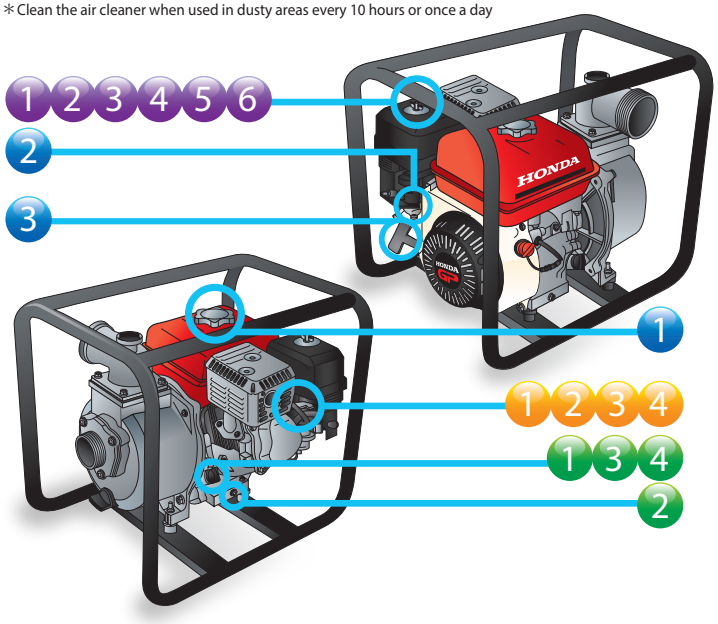




* Read and understand the Owner's Manual before operating the engine.


Spark Plug


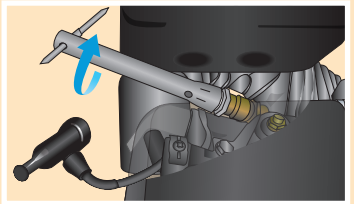
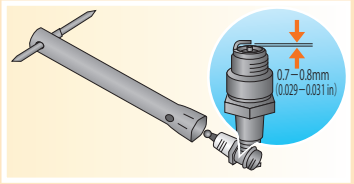


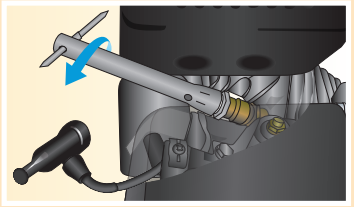
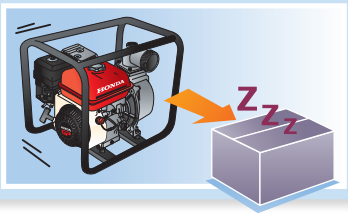
Engine Oil

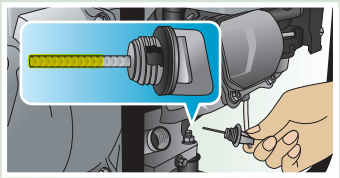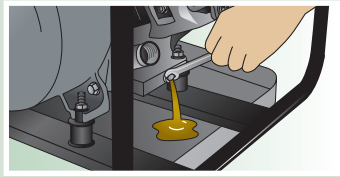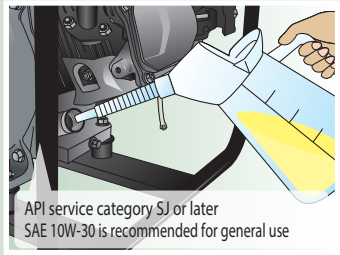

Prolonged storage

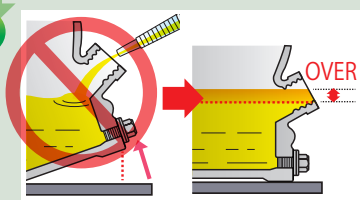

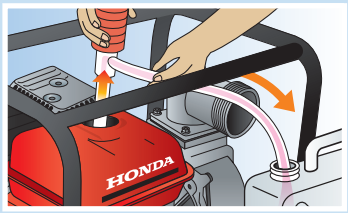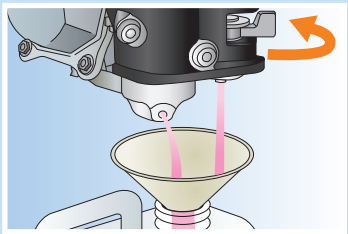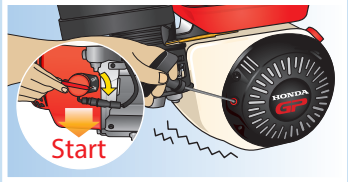Air Cleaner Element

1 2 3 Soak 4 Squeeze 5 Oil 6 Squeeze



©Honda Motor Co., Ltd. 2013
S2YG4201