HONDA

GENERAL PURPOSE ENGINE

GX270H
GX270H2

PARTS CATALOGUE

3

13Z7B803

© Honda Motor Co., Ltd. 2019

FOREWORD INDEX 1

ENGINE GROUP 2

PART NUMBER INDEX 3

PART NAME INDEX 4

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of December 10, 2019.**
  - See the parts catalogue news for any revision that is made after December 10, 2019.
- **Always specify the part number when ordering a part.**
  - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
  - Note that the illustrations (part drawings) can differ from the actual parts in shape.
    They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**

Initial version issue date May 18, 2007
Honda Motor Co., Ltd.


CONTENTS

Page

- Instruction for use of parts catalogue 1 **1**
- How to refer to the part information 2
- Part catalogue structure 3
- When the parts were revised 4
- Abbreviations used in the parts catalogue 4
- How to check the part block and serial numbers 5
- Models, parts catalogue codes and applicable serial numbers 6
- Features of each type 9
- Fuel hose, general purpose hoses and vinyl hose 14
- FLAT RATE SERVICE TIME 15
- Illustrated index 20
- ENGINE GROUP 25 **2**
- PART NO. INDEX 93 **3**
- PART NAME INDEX 97 **4**

How to refer to the part information

Ⓐ Reference with “Illustrated index”

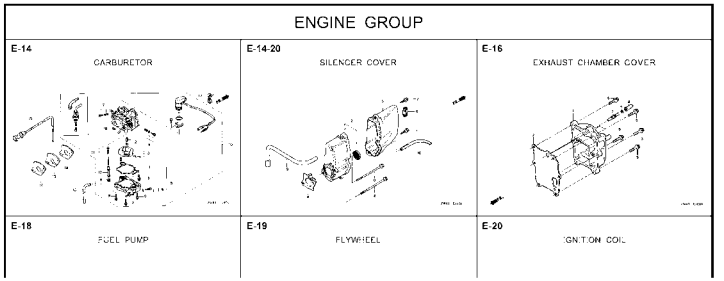

Ⓑ Reference with “Part number index”

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Pa
06000			15212-ZW9-000	49	7	17583
			15220-ZW9-003	49	8	17583
06316-ZW9-000	104	1	15332-ZW9-000	74	2	17611
			15332-ZW9-A30	76	2	17611
11000			15400-PFB-004	46	5	17612
			15422-ZW9-000	49	9	17620
11300-ZW9-000	46	1	15473-881-000	49	10	17620
11300-ZW9-800	46	1	15474-ZW9-000	49	11	17624
11340-ZW9-000	46	2	15611-921-000	45	6	17650
11342-ZW9-000	46	3	15655-ZW9-000	46	6	
11381-ZW9-003	47	1				17660
			16000			17661
12000						
			16010-ZV4-005	55	1	17665
12000-ZW9-000ZA	46	4	16011-ZV4-005	55	2	17670
12155-ZV4-A00	48	1	16013-ZW9-003	55	3	17680
12166-ZW9-000	45	1	16016-ZW9-003	55	4	
12209-GB4-681	51	1	16016-ZW9-721	55	4	17701
12210-ZW9-000ZA	45	2	16023-ZW9-003	55	5	17701
12216-ZE2-300	74	1	16024-ZV4-650	55	6	17701
	76	1	16028-ZV4-650	55	7	17702


Ⓒ Reference with “Part name index”

PART NAME INDEX

Part name	Page	Ref.	
[A]			BOLT,
ABSORBER, FUEL	80	5	
ARMATURE COMP.	62	7	BOLT,
ARM COMP., LINK JOINT	102	18	BOLT,
ARM COMP., SHIFT LINK	102	14	BOLT,
ARM COMP., TILT	97	20	
ARM, FUEL PUMP ROCKER	51	4	
ARM, REVERSE LOCK	97	18	
ARM, SHIFT LINK	92	7	
ARM, STOPPER	52	12	BOLT,
ARM, THROTTLE REMOTE	92	6	
ARM, VALVE ROCKER	51	3	
[B]			
BAG, TOOL, 160MM	101	10	
BAND	103	37	
BAND B1, WIRE	87	1	
BAND, CORD	85	18	BOLT,
BAND, TUBE CLIP, 11MM	81	20	
BAND, TUBE CLIP, 12.5MM	81	19	BOLT,

E-2 CYLINDER HEAD

Block No.

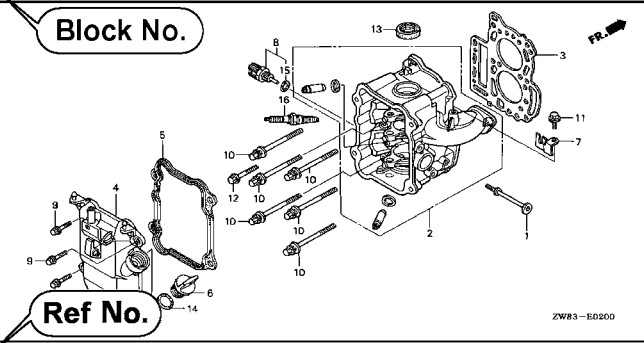

Service item	F.R.T.
O-RING, 26X2.7	0.1
.PLUG, SPARK	
O-RING, 9.5X1.5	0.2
.SENSOR ASSY., WATER TEMPERATURE	
COVER COMP., HEAD	0.3
.PACKING, HEAD COVER	
GASKET, CYLINDER HEAD	1.8
OIL SEAL, 20X32X6	2.4
HEAD COMP., CYLINDER	3.1

Ref. No. Part No. Description — Reqd. QTY: BF 9.9D1, BFP 9.9D1, BF 10D1, BFP 10D1, BF 10B1, BFP 10B1 — Serial No. — Parts catalogue code

Ref. No.	Part No.	Description	BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	Serial No.	Parts catalogue code
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*.....DARK GRAY	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1		
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1	-------- --------	SC,SG
	16617-ZW9-010		1	1	1	1	1	1	-------- 1001800	LHC,LHD
			1	1	1	1	1	1	1001801 --------	LHC,LHD
8	35673-ZW5-003	SENSOR ASSY., WATER TEMPERATURE	1	1	1	1	1	1		
9	90003-ZW9-000	BOLT, FLANGE, 6X22	4	4	4	4	4	4		
10	90007-ZW9-003	BOLT, FLANGE, 8X83	6	6	6	6	6	6		
11	90011-ZW9-000	BOLT, FLANGE, 6X14(CT200)	1	1	1	1	1	1		
12	90020-ZW9-000	BOLT, FLANGE, 8X40	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7	1	1	1	1	1	1		
15	91307-PK2-005	O-RING, 9.5X1.5(HONDA KIKAKI)	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16FER9)	2	2	2	2	2	2		


44


2000.09.20 E

Ref No.

Page No.

Part catalogue structure

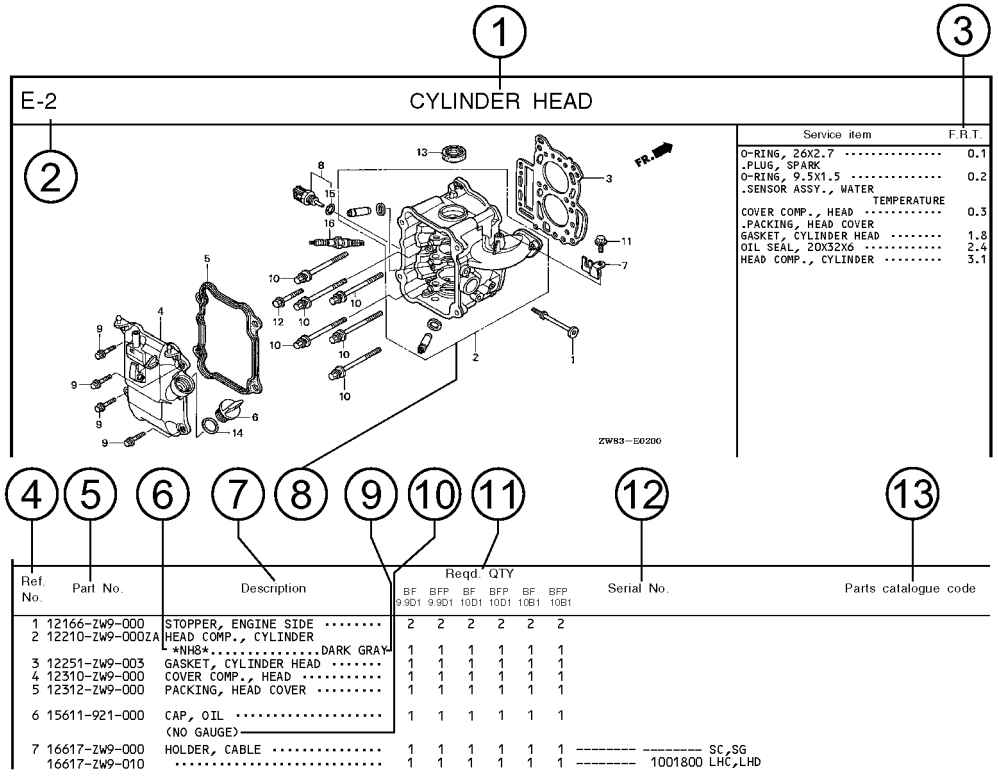

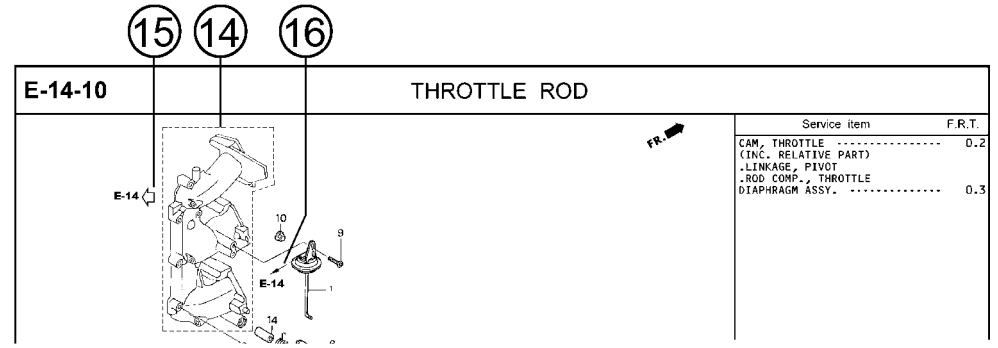

①Block title ②Block number

③Service item/Flat rate time

④Reference number

- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑤Part number ⑥Honda color code

⑦Description

⑧Assemblies

- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑨Color description

⑩Note

- Notes are shown with the parentheses in the part name column.

⑪Required quantity

- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with “N” Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑫Serial number

⑬Type

- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the “parts catalogue, type” please refer to “Models, types and applicable serial numbers” for confirmation.

⑭ [ ]

- Parts enclosed within a dotted line [ ] are covered in a different block.

⑮⇦

- A hollow arrow ⇦ indicates the block No. for the parts enclosed within a dotted line [ ] .

⑯←

- A solid arrow ← indicates the block No. the part in question is connected to.

When the parts were revised



Ref. No.	Part No.	Description	Reqd. QTY BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	Serial No.
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*.....DARK GRAY	1	1	1	1	1	1	
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1	
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1	
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1	
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1	
7	16617-ZW9-000	HOLDER, CABLE (###)	1	1	1	1	1	1	SC,SG
	16617-ZW9-010		1	1	1	1	1	1	-------- 1001800 LHC,LHD
			1	1	1	1	1	1	1001801 -------- LHC,LHD

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.

- The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).


Abbreviations used in the parts catalogue

- **The following abbreviations are used in the parts name column.**


A ..... Ampere
A.C. ..... Alternating current
ASSY. .... Assembly
AT. ..... Automatic transmission
C.D.I. ..... Capacitive discharge ignition
COMP. ... Complete
D.C. ..... Direct current
EX. ..... Exhaust
G.F.C.I ... Ground fault circuit interruptor
HEX. ..... Hexagonal
H.S.T. .... Hydrostatic transmission
FR. .....Front
IN. .....Inlet
L (100L) .Link (100 Links)
L. .....Left
MM .....Millimeter
MT. .....Manual Transmission
P.T.O. .....Power take off
R. .....Right
RR. .....Rear
STD. .....Standard
T (22T) ...Tooth (22 Teeth)
V .....Volt
W .....Watt

How to check the part block and serial numbers

Part block	Engine parts E-2~	Carburetor parts E-14~
Numbers needed	Stamped engine number	Stamped carburetor identification number
Check point	①	②

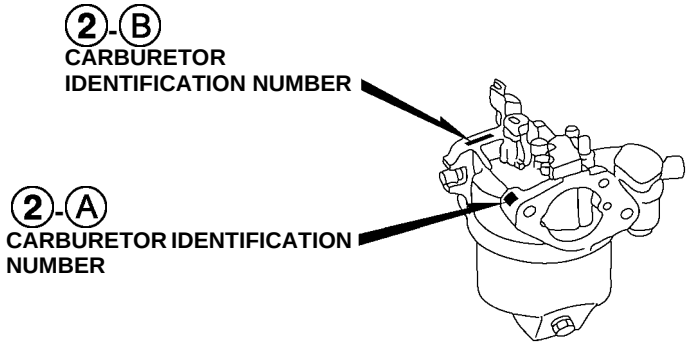

D30Z7B8CA0

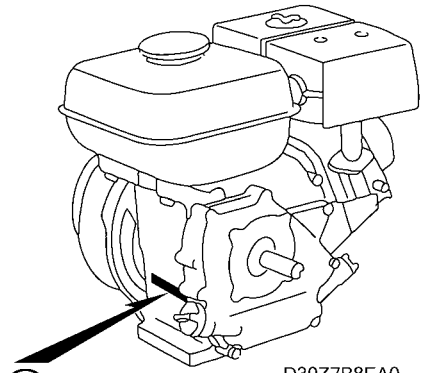
D30Z7B8EA0

① TYPE
ENGINE SERIAL NUMBER

Models, parts catalogue codes and applicable serial numbers

• **Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.**

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270H	LH	LH	GCADH-0000001~	BE70L A
	LH1	LH1		
	LH2	LH2	GCADH-0000001~9999999	
	LHB5	LHB5		
	LW	LW		BE75H A
	PX	PX	GCADH-0000001~	BE70L A
	QBE1	QBE1	GCADH-0000001~9999999	BE75H A
	QD	QD	GCADH-0000001~	
	QD1	QD1		
	QDBR	QDBR		
	QH	QH		BE70L A
	QHB1	QHB1		BE75H A
	QHB5	QHB5	GCADH-0000001~9999999	BE70L A

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270H	QHP1	QHP1	GCADH-0000001~	BE70L A
	QMH	QMH		
	QN	QN		BE75H A
	QP	QP	GCADH-0000001~9999999	
	QX	QX	GCADH-0000001~	BE70L A
	QXBR	QXBR		
	QXC9	QXC9	GCADH-0000001~9999999	BE70M A
	QXCK	QXCK		
	QXE9	QXE9	GCADH-0000001~	BE70L A
	QXHQ	QXHQ		BE75H A
	QXK	QXK	GCADH-0000001~9999999	BE70L A
	RD	RD	GCADH-0000001~	BE75H A
	SD	SD	GCADH-0000001~9999999	

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270H	SD1	SD1	GCADH-0000001~	BE75H A
	SH	SH		BE70L A
	SH1	SH1		
	SH8	SH8	GCADH-1000001~	
	SHH	SHH		
	SX	SX	GCADH-0000001~	
	SXH	SXH	GCADH-0000001~9999999	
	VKK	VKK		BE98H A
	VMT	VMT		BE98F A
	VS4	VS4		
	VSD4	VSD4		BE98G A
	VSP	VSP	GCADH-0000001~	BE70L A
	VX	VX		

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270H	VX1	VX1	GCADH-0000001~	BE70L A
	VXK	VXK	GCADH-0000001~9999999	
	VXP6	VXP6	GCADH-1000001~	BE77V A
	VXPE	VXPE	GCADH-0000001~9999999	
	VXPR	VXPR	GCADH-0000001~	
GX270H2	LH	LH	GCBAH-1000001~	BE75U A
	LH1	LH1		
	PX	PX		
	QD	QD		
	QD1	QD1		
	QH	QH		
	QHP1	QHP1		
	QMH	QMH		

Model	Type	Parts catalogue type	Applicable engine serial No.	Applicable carburetor identification No.
GX270H2	QN	QN	GCBAH-1000001~	BE75U A
	QX	QX		
	QXHQ	QXHQ		
	RD	RD		
	SD1	SD1		
	SH	SH		
	SH1	SH1		
	SHH	SHH		
	SX	SX		
	VX	VX		
	VX1	VX1		
	VXP6	VXP6		BE98N A
	VXPR	VXPR		

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

BE 70L A KC ナ
Ⓐ Ⓑ

Features of each type

- **See the following table for the features of each type. (Items in brackets are optional)**

Specifications \ Model / Type		GX270H												
		LH	LH1	LH2	LHB5	LW	PX	QBE1	QD	QD1	QDBR	QH	QHB1	QHB5
Crankshaft	25mmØ Straight													
	25.4mmØ Straight							●	●	●	●	●	●	●
	20mmØ Spline	●	●	●	●	●								
	3/16 Tapered													
	1 Thread						●							
	1/5 Tapered													
Reduction	1/2 Reduction	●	●	●	●	●								
	1/2 Reduction (With clutch)													
Air cleaner	Semi dry								●	●	●			
	Oil bath					●		●					●	
	Dual	●	●	●	●		●					●		●
	Cyclone													
	Standard													
	Silent													
Oil alert							●							
Starter motor								●						

Specifications	Model / Type	GX270H												
		QHP1	QMH	QN	QP	QX	QXBR	QXC9	QXCK	QXE9	QXHQ	QXK	RD	SD
Crankshaft	25mmØ Straight												●	●
	25.4mmØ Straight	●	●	●	●	●	●	●	●	●	●	●		
	20mmØ Spline													
	3/16 Tapered													
	1 Thread													
	1/5 Tapered													
Reduction	1/2 Reduction													
	1/2 Reduction (With clutch)												●	
Air cleaner	Semi dry			●							●		●	●
	Oil bath				●									
	Dual	●	●			●	●			●		●		
	Cyclone							●	●					
	Standard													
	Silent													
Oil alert						●	●	●	●	●	●	●		
Starter motor										●				

Specifications	Model / Type	GX270H												
		SD1	SH	SH1	SH8	SHH	SX	SXH	VKK	VMT	VS4	VSD4	VSP	VX
Crankshaft	25mmØ Straight	●	●	●	●	●	●	●						
	25.4mmØ Straight													
	20mmØ Spline													
	3/16 Tapered								●		●	●	●	●
	1 Thread													
	1/5 Tapered									●				
Reduction	1/2 Reduction													
	1/2 Reduction (With clutch)													
Air cleaner	Semi dry	●												
	Oil bath													
	Dual		●	●	●	●	●	●					●	●
	Cyclone													
	Standard								●	●	●	●		
	Silent													
Oil alert							●	●	●	●	●	●	●	●
Starter motor									●					

Specifications \ Model / Type		GX270H					GX270H2							
		VX1	VXK	VXP6	VXPE	VXPR	LH	LH1	PX	QD	QD1	QH	QHP1	QMH
Crankshaft	25mmØ Straight													
	25.4mmØ Straight									●	●	●	●	●
	20mmØ Spline						●	●						
	3/16 Tapered	●	●	●	●	●								
	1 Thread								●					
	1/5 Tapered													
Reduction	1/2 Reduction						●	●						
	1/2 Reduction (With clutch)													
Air cleaner	Semi dry													
	Oil bath													
	Dual	●	●											
	Cyclone													
	Standard			●	●	●								
	Silent						●	●	●	●	●	●	●	●
Oil alert		●	●	●	●	●								
Starter motor					●									

Specifications	Model / Type	GX270H2												
		QN	QX	QXHQ	RD	SD1	SH	SH1	SHH	SX	VX	VX1	VXP6	VXPR
Crankshaft	25mmØ Straight				●	●	●	●	●	●				
	25.4mmØ Straight	●	●	●										
	20mmØ Spline													
	3/16 Tapered										●	●	●	●
	1 Thread													
	1/5 Tapered													
Reduction	1/2 Reduction													
	1/2 Reduction (With clutch)				●									
Air cleaner	Semi dry													
	Oil bath													
	Dual													
	Cyclone													
	Standard												●	●
	Silent	●	●	●	●	●	●	●	●	●	●	●		
Oil alert														
Starter motor														

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets ( ) underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
  (For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:
Refers to the bulk part.

Marking code (fuel hose and general purpose hose)
Change code (Vinyl hose)
Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

• Fuel hose	2: Red outside braid (3 mm inside dia. only)	• General hose	1: Ash gray	• Vinyl hose	1: Clear
	5: Black inside braid		2: Ash gray		2: Black
	3: Red (3 mm inside dia. only)		3: Black		3: Light red
	4: Ash gray with red stripe (3 mm inside dia. only)		5: Black		6: Light red
	6: Black				7: Pale black

Lengths:
001: 1 m (standard)
003: 3 m
008: 8 m
} Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm	50: 5.0 mm	70: 7.0 mm	11: 11 mm	12: 12 (outside dia. 17) mm
35: 3.5 mm	55: 5.3 mm, 5.5 mm	75: 7.3 mm, 7.5 mm	91: 12 (outside dia. 15) mm	14: 14 mm
45: 4.5 mm	65: 6.5 mm	80: 8.0 mm	92: 12 (outside dia. 16) mm	17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm	12: ID. 5.0, OD. 7.0 mm	21: ID. 8.0, OD. 9.0 mm	37: ID. 11.0, OD. 15.0 mm	50: ID. 16.0, OD. 19.0 mm
03: ID. 3.0, OD. 6.0 mm	10: ID. 5.0, OD. 8.0 mm	23: ID. 8.0, OD. 12.0 mm	38: ID. 12.0, OD. 13.0 mm	55: ID. 17.5, OD. 20.5 mm
05: ID. 3.5, OD. 6.5 mm	11: ID. 5.0, OD. 9.0 mm	25: ID. 9.0, OD. 11.0 mm	39: ID. 12.0, OD. 14.0 mm	60: ID. 22.0, OD. 27.0 mm
07: ID. 4.0, OD. 7.0 mm	14: ID. 6.0, OD. 9.0 mm	27: ID. 9.0, OD. 13.0 mm	40: ID. 12.0, OD. 16.0 mm	
08: ID. 4.5, OD. 6.5 mm	17: ID. 7.0, OD. 9.0 mm	33: ID. 10.0, OD. 14.0 mm	43: ID. 13.0, OD. 15.0 mm	
09: ID. 4.5, OD. 8.0 mm	19: ID. 7.0, OD. 11.0 mm	36: ID. 11.0, OD. 13.0 mm	45: ID. 14.0, OD. 18.0 mm	

Hose type:
1: Fuel hose
3: Vinyl hose
5: General hose

◎ **CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.**
Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

- Net service time
  - Removal, Disassembly/reassembly, Installation
  - Inspection, Measurement, Adjustment, Confirmation
  - Diagnosis/troubleshooting (Electric system)
  - Completion inspection
- Float time
  - Preparation
    (Process check, Confirmation arrangement for necessary tools)
  - Related work (Transfer of products)

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/ installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
  Example: (0.1) → 6 minutes, (0.2) → 12 minutes
  [Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented


- Accessories and service parts that are not listed to use in this manual.
- Locations with little aging deterioration or breakage during normal use.
- Service work that can be finished by one touch.
- Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
- Products and parts whose location for installation differs according to its status of use and application.

* When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water draining, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

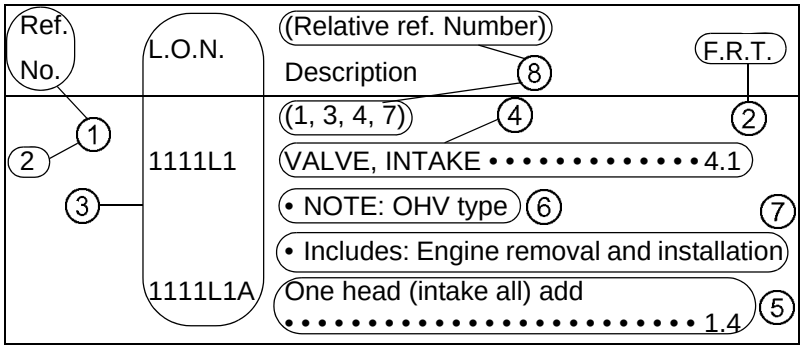

①Reference No. of the illustration of part that shows location of the replacement work.

②FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.

③LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.

④Indicating the intake valve replacement and FRT4.1.

⑤Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

⑥Indicating work condition or application condition of the service item.

⑦Indicating work contents that are included in the service item.

⑧Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
(intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.

Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	**1111L1**	**VALVE, INTAKE** • • • • • • • • • • • •	**4.1**
	•	•	•
	•	•	•
+			


Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION • • • • • • • • • • • • • • • • • •			

- **LON code system**

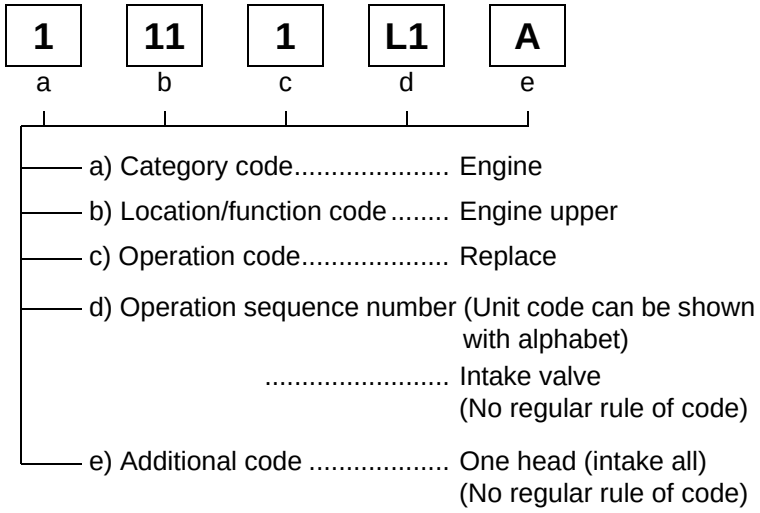

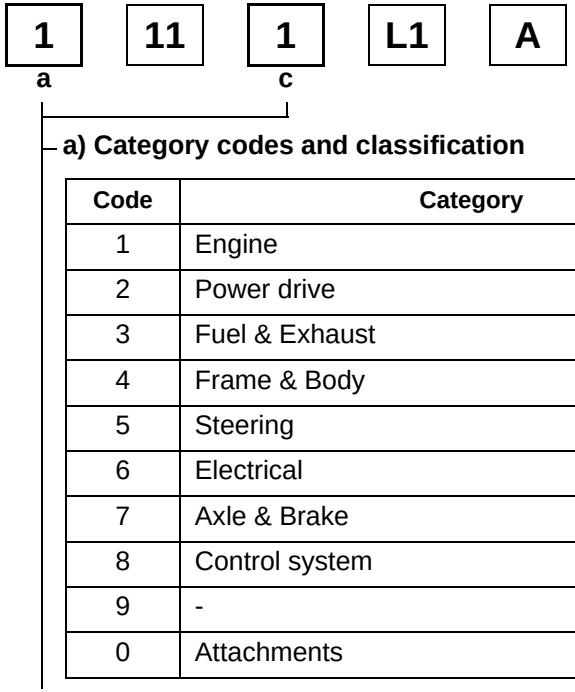

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurement
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts
Adjustment, Inspection/Measurement, Overhaul, Other work

E: Engine, T: Transmission, D: Drive system, B: Body and related parts

• Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	**VALVE CLEARANCE-ADJUSTMENT** NOTE: For 1 product	0.3
	1163A0	**CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT**	0.2
	3113A2	**CARBURETOR IDLE-ADJUSTMENT**	0.2

• Inspection/Measurement

	LON	DESCRIPTION	FRT
E	1105A0	**ENGINE OIL-INSPECTION**	0.1

• Overhaul

Work condition: The required Measurements, inspections, adjustments, and cleaning/washing of each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	**CARBURETOR-OVERHAUL** INCLUDES: All necessary adjustment	0.5


• Other work

	LON	DESCRIPTION	FRT
E	1101E1	**ENGINE OIL-CHANGE** INCLUDES: Engine oil-inspection	0.1
	3120A0	**AIR CLEANER-CLEANING** INCLUDES: Air cleaner-inspection	0.2
	3130A0	**SPARK ARRESTER-CLEANING** INCLUDES: Spark arrester-inspection	0.2
	6140A0	**SPARK PLUG-ADJUSTMENT/CLEANING** INCLUDES: Spark plug check NOTE: For 1 product	0.1

ENGINE GROUP


E-2

CYLINDER HEAD

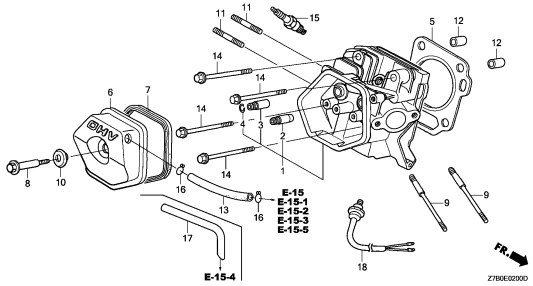


E-3

CYLINDER BARREL

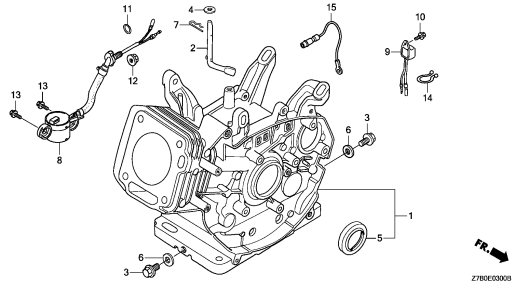


E-6

CRANKCASE COVER(1)

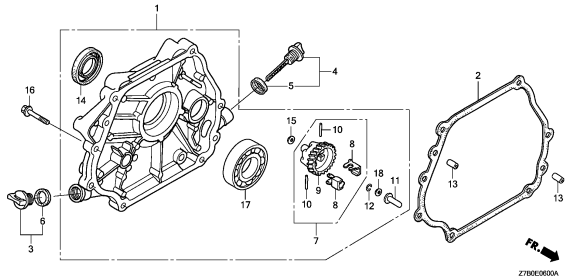


E-6-1

CRANKCASE COVER(2)

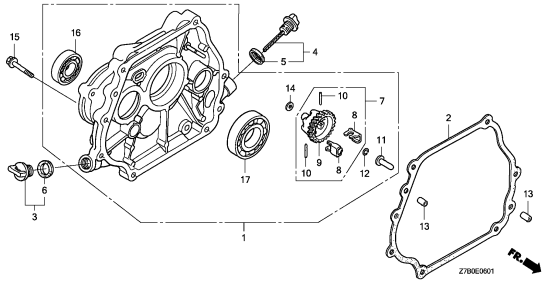


E-6-2

CRANKCASE COVER(3)

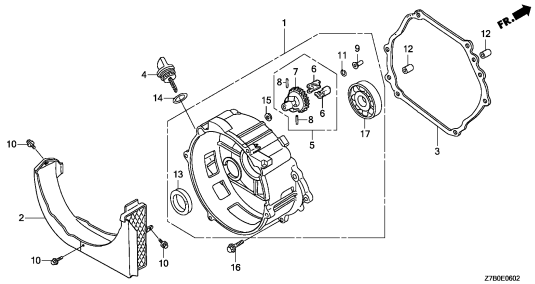


E-7

CRANKSHAFT

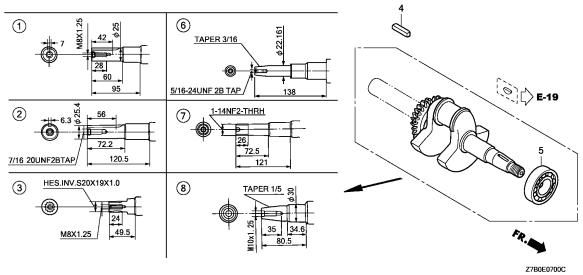


E-8

PISTON

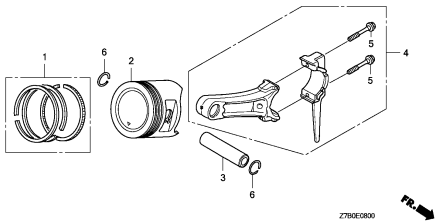


E-9

CAMSHAFT

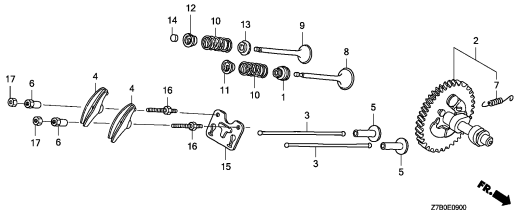

E-11


RECOIL STARTER(1)

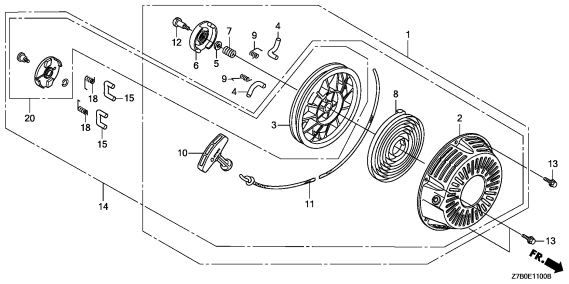

ENGINE GROUP


E-11-1

RECOIL STARTER(2)

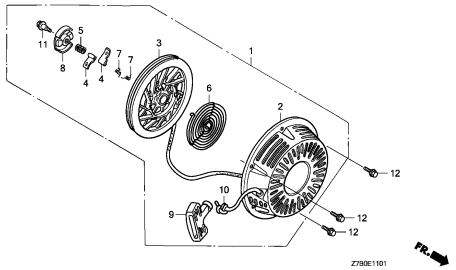


E-11-2

RECOIL STARTER(3)

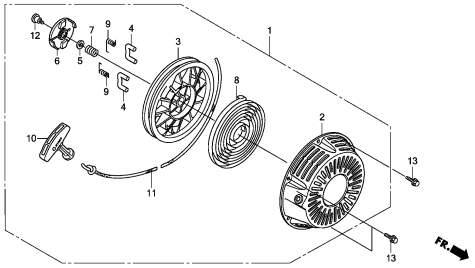


E-12

FAN COVER(1)

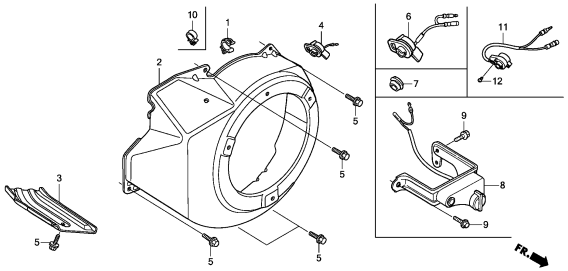


E-12-1

FAN COVER(2)

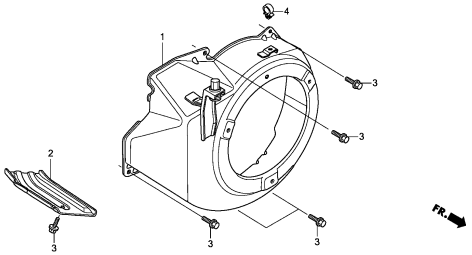


E-14

CARBURETOR(1)

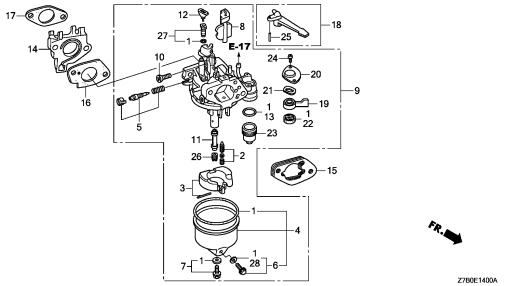


E-14-1

CARBURETOR(2)

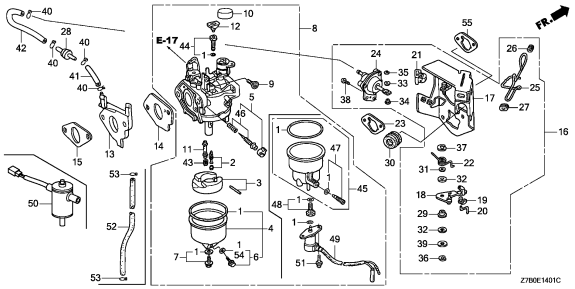


E-15

AIR CLEANER(SEMI DRY)

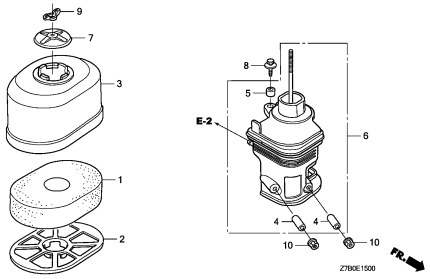


E-15-1

AIR CLEANER(OIL BATH)

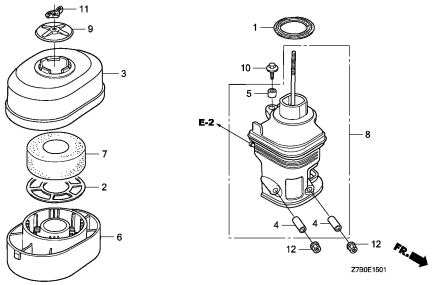

E-15-2

AIR CLEANER(DUAL)

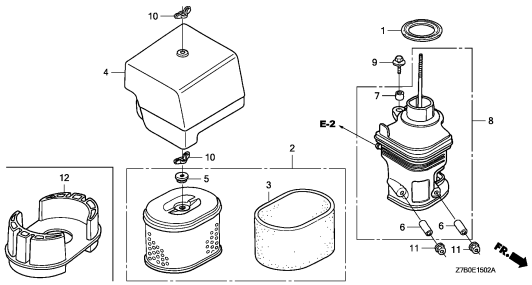


2

ENGINE GROUP


E-15-3

AIR CLEANER(CYCLONE)

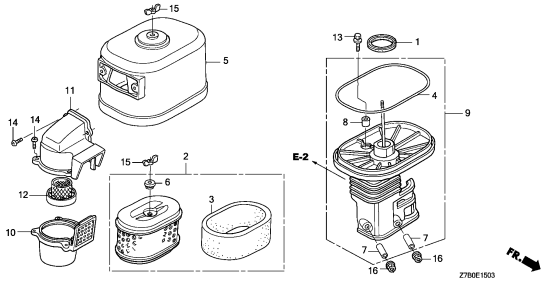


E-15-4

AIR CLEANER(STANDARD)

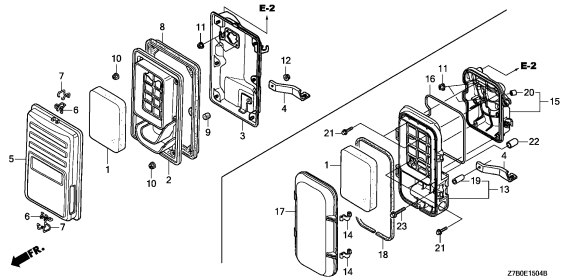


E-15-5

AIR CLEANER(SILENT)

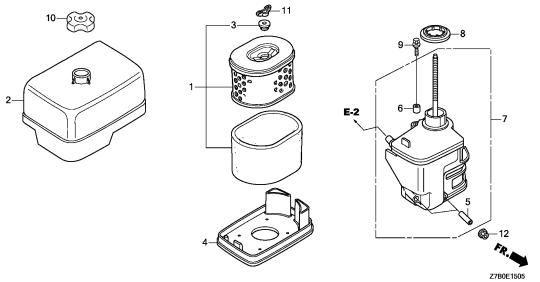


E-16

MUFFLER(1)

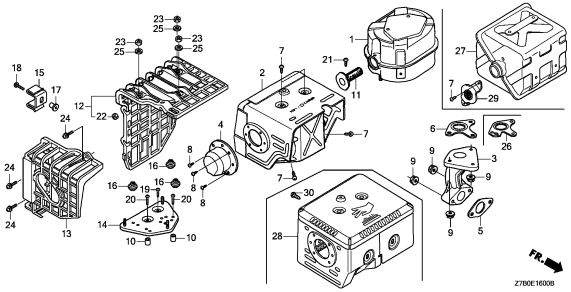


E-16-1

MUFFLER(2)

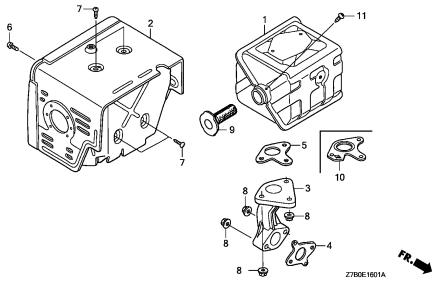


E-16-10

EXHAUST PIPE

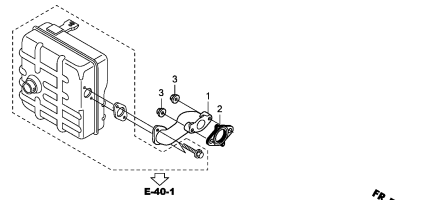


E-17

FUEL TANK

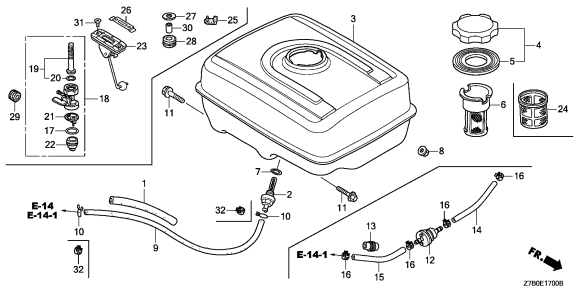


E-19

FLYWHEEL

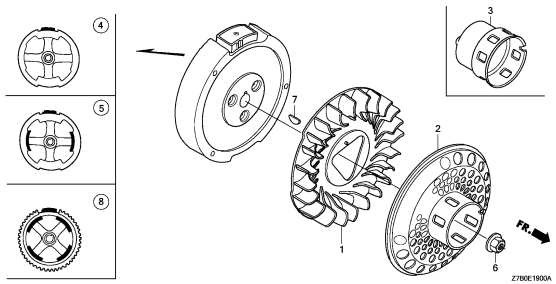

E-20


IGNITION COIL

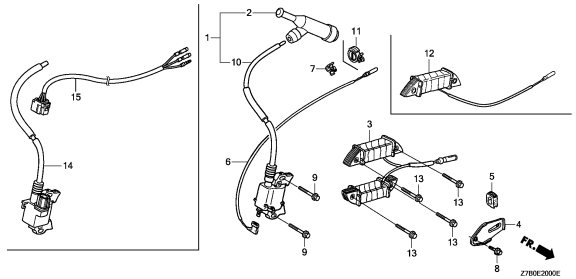

ENGINE GROUP


E-21

STARTER MOTOR

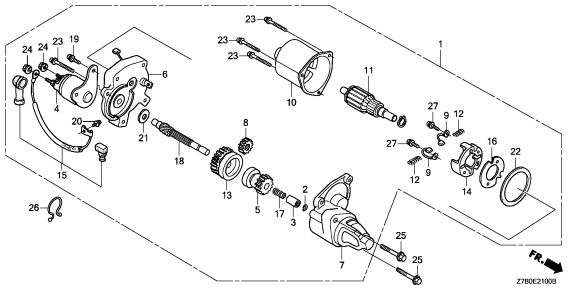


E-22

CONTROL

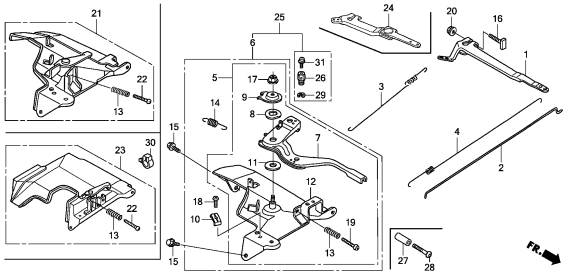


E-22-10

AUTO THROTTLE

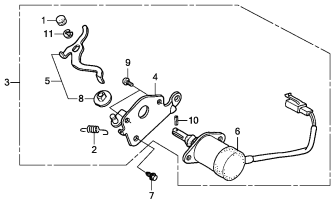


E-23

CONTROL BOX

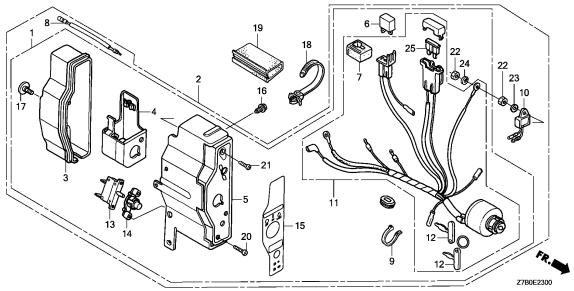


E-26

REDUCTION(1/2)

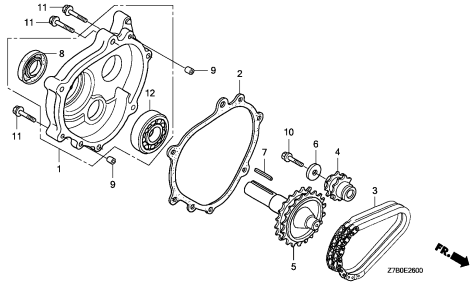


E-26-1

REDUCTION(1/2)(CLUTCH)

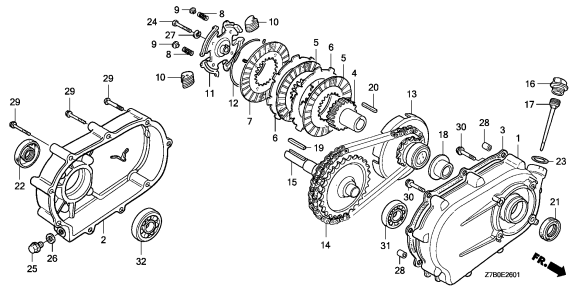


E-28

LABEL

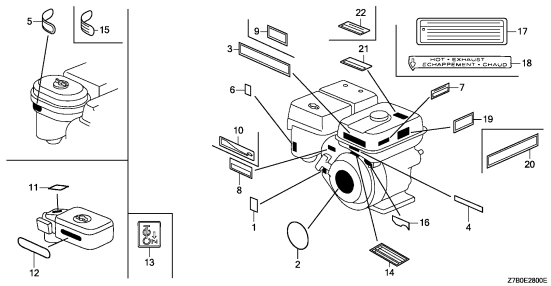


E-29

TOOL

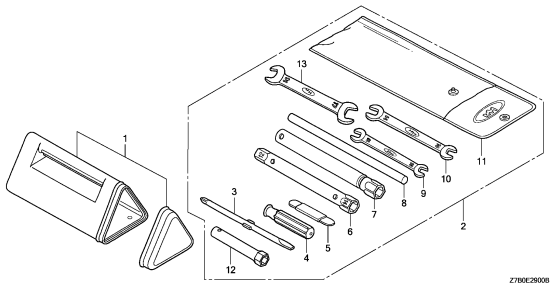

E-40


OTHER PARTS(1)

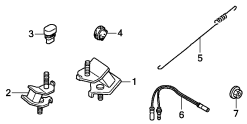


2

E-40-1

OTHER PARTS(2)

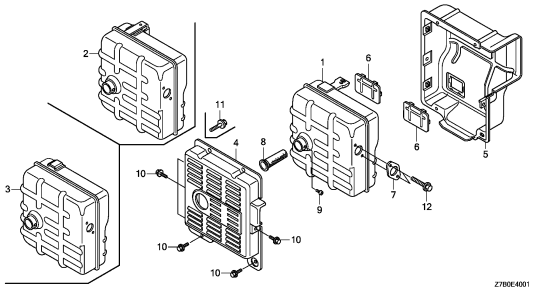


E-2 CYLINDER HEAD

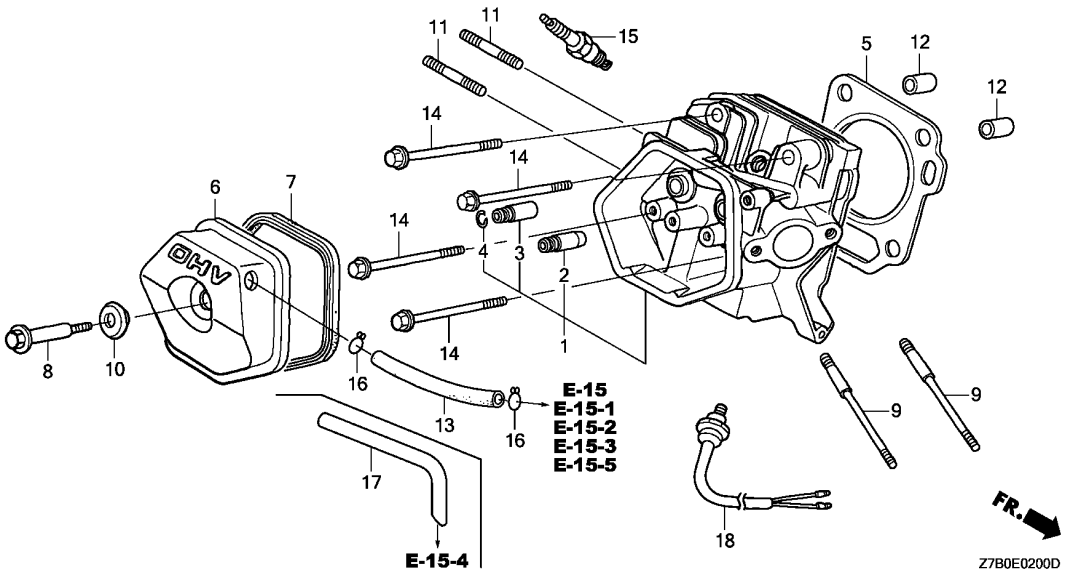

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111N3	HEAD, CYLINDER ----------	0.9
2	1111E9	GUIDE, INTAKE VALVE ---------- .INCLUDES: Valve clearance adjustment	0.8
	1111E9E	.Replace intake and exhaust all add ----------	0.4
3	1111E8	GUIDE, EXHAUST VALVE ---------- .INCLUDES: Valve clearance adjustment	0.8
	1111E8E	.Replace intake and exhaust all add ----------	0.4
5	1111N4	GASKET, CYLINDER HEAD --------	0.5
6		(7)	
	1111D5	CYLINDER HEAD COVER AND/OR PACKING ----------	0.1
13		(17)	
	1111K5	TUBE, BREATHER ----------	0.2
15	6141C1	PLUG, SPARK ---------- .INCLUDES: Spark plug check	0.1
18	6171C4	SWITCH, CYLINDER HEAD THERMO -	0.2


Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. GX 270 H2	Serial No.		Parts catalogue code
1	12200-Z7B-000	HEAD COMP., CYLINDER --------	1	-	--------	--------	LH,LW,QD,RD,SD,SH,SH8,SHH,VXP6,VXPE,VXPR
	12200-Z1D-405	----------	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SX,VKK,VMT,VS4,VSD4,VX1,VXK
	12200-ZH9-405	----------	1	-	--------	--------	QXC9,QXHQ,SXH,VX
	12200-Z1D-405	----------	1	-	--------	0000024	VSP
	12200-ZH9-405	----------	1	-	0000025	--------	VSP
	12210-Z7B-405	----------	-	1			
2	12204-ZE2-306	GUIDE, IN. VALVE(O.S.) ------	1	-	--------	--------	LH,LW,QD,QXC9,QXHQ,RD,SD,SH,SH8,SHH,SXH,VSP,VX,VXP6,VXPE,VXPR
	12204-Z7E-305	----------	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SX,VKK,VMT,VS4,VSD4,VX1,VXK
	12204-ZE2-306	----------	-	1			
3	12205-ZE2-305	GUIDE, EX. VALVE(O.S.) ------	1	-	--------	--------	LH,LW,QD,QXC9,QXHQ,RD,SD,SH,SH8,SHH,SXH,VSP,VX,VXP6,VXPE,VXPR
	12205-Z7E-305	----------	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SX,VKK,VMT,VS4,VSD4,VX1,VXK
	12205-ZE2-305	----------	-	1			
4	12216-ZE2-300	CLIP, VALVE GUIDE ----------	1	1			
5	12251-ZH9-000	GASKET, CYLINDER HEAD -------	1	-	--------	--------	LH,LW,QD,QXC9,QXHQ,RD,SD,SH,SXH,VX
	12251-ZH9-010	----------	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SH8,SHH,SX,VKK,VMT,VS4,VSD4,VX1,VXK,VXP6,VXPE VXPR
	12251-Z1D-801	GASKET, CYLINDER HEAD (THAI LEAKLESS)	1	-	--------	0000024	VSP
	12251-ZH9-000	GASKET, CYLINDER HEAD -------	1	-	0000025	--------	VSP
	12251-Z5K-003	----------	-	1			
6	12310-ZE2-020	COVER COMP., HEAD ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXP6,VXPE,VXPR

E-2 CYLINDER HEAD

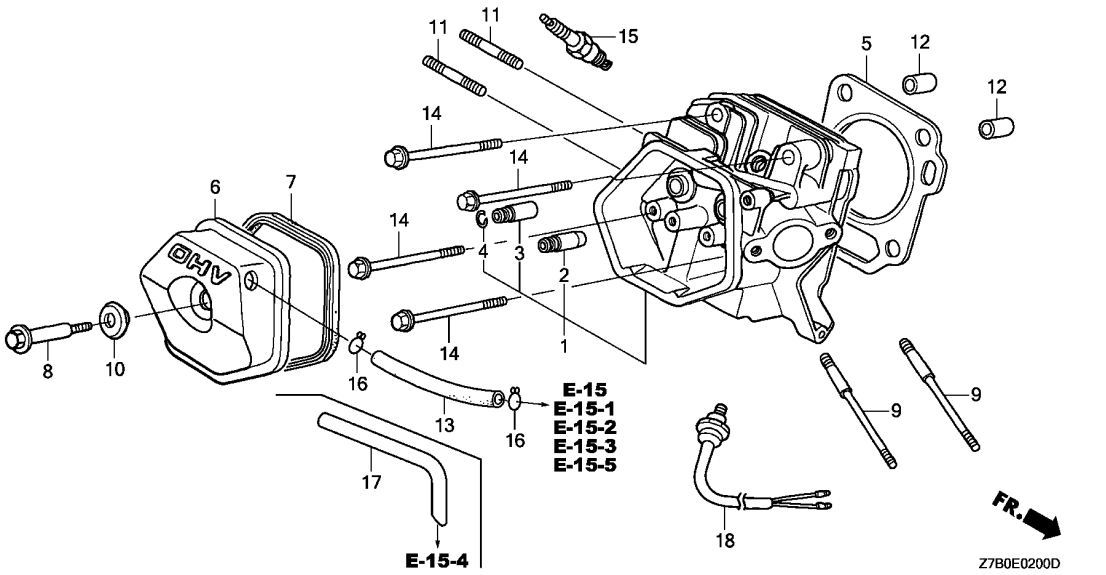


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
(6)	12310-ZE3-791	COVER COMP., HEAD (BREATHER TUBE JOINT)	1	-	--------	--------	QXC9,QXCK
7	12391-ZE2-020	PACKING, HEAD COVER	1	1			
8	90014-ZE2-000	BOLT, HEAD COVER	1	1			
9	90042-ZE2-000	BOLT, STUD, 8X123	2	2	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	90042-ZE2-700	BOLT, STUD, 8X98	2	-	--------	--------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	90042-ZK2-D60	BOLT, STUD, 8X106	-	2	--------	--------	VXP6,VXPR
10	90441-ZE2-010	WASHER COMP., HEAD COVER	1	1			
11	92900-08032-0E	BOLT, STUD, 8X32	2	2			
12	94301-12200	DOWEL PIN, 12X20	2	2			
13	95005-11100-30	TUBE, 11X100(95005-11001-30M)	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
	12315-ZE3-840	TUBE, BREATHER	1	-	--------	--------	QXC9,QXCK
	12357-Z5T-020	.....	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
14	95701-10080-00	BOLT, FLANGE, 10X80	4	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX,VX1,VXK,VXP6,VXPE,VXPR
	95725-10080-00	.....	4	-	--------	0004282	LH,LW,QD,RD,SD,SH
	95701-10080-00	.....	4	-	0004283	--------	LH,LW,QD,RD,SD,SH
			-	4			
15	98079-56846	PLUG, SPARK(BPR6ES)(NGK)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK,VXP6,VXPE,VXPR
	98079-55846	PLUG, SPARK(BPR5ES)(NGK)	(1)	(1)	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXK,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT,VSD4,VX,VX1 VXK,VXP6,VXPE,VXPR

E-2 CYLINDER HEAD

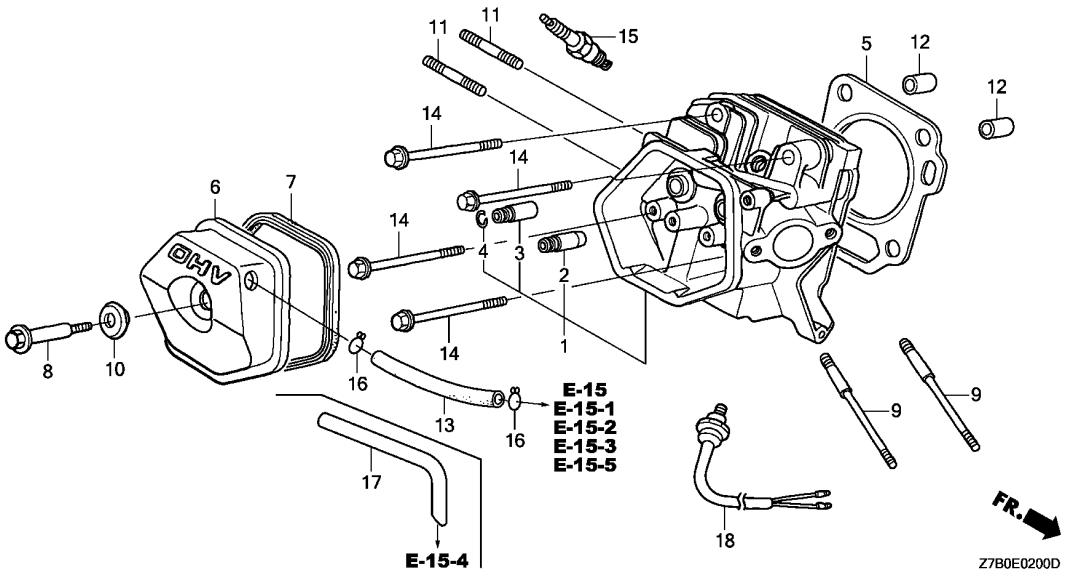

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
15)	98079-55855	PLUG, SPARK(W16EPR-U)(DENSO)	(1)	(1)	--------	--------	LH,LW,QXC9,SH,SH8,SHH,SXH,VX,VXP6,VXPE,VXPR
	98079-56846	PLUG, SPARK(BPR6ES)(NGK) ----	(1)	(1)	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SX,VX1,VXK
	98079-55841	PLUG, SPARK(BP5ES)(NGK) -----	(1)	(1)	--------	--------	QD,QXHQ,RD,SD
	98079-55854	PLUG, SPARK(W16EP-U)(DENSO) -	(1)	(1)	--------	--------	QD,QXHQ,RD,SD
	98079-55846	PLUG, SPARK(BPR5ES)(NGK) ----	1	-	--------	--------	VKK,VMT,VS4,VSD4
	98079-55855	PLUG, SPARK(W16EPR-U)(DENSO)	1	-	--------	--------	VKK,VMT,VS4,VSD4
	98079-55876	PLUG, SPARK(BPR5ES)(NGK) ----	(1)	-	--------	--------	VKK,VMT,VS4,VSD4,VSP
	98079-56855	PLUG, SPARK(W2OEPR-U)(DENSO)	1	-	--------	--------	VX,VXP6,VXPE,VXPR
16	17316-611-000	CLIP, BREATHER TUBE ----------	2	-	--------	--------	QXC9,QXCK
17	15721-ZB4-000	TUBE, BREATHER -------------	1	-	--------	--------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	15721-Z23-H60	-------------------------	-	1	--------	--------	VXP6,VXPR
18	16500-ZE2-703	SWITCH, THERMO -------------	1	-	--------	--------	VKK


E-3 CYLINDER BARREL

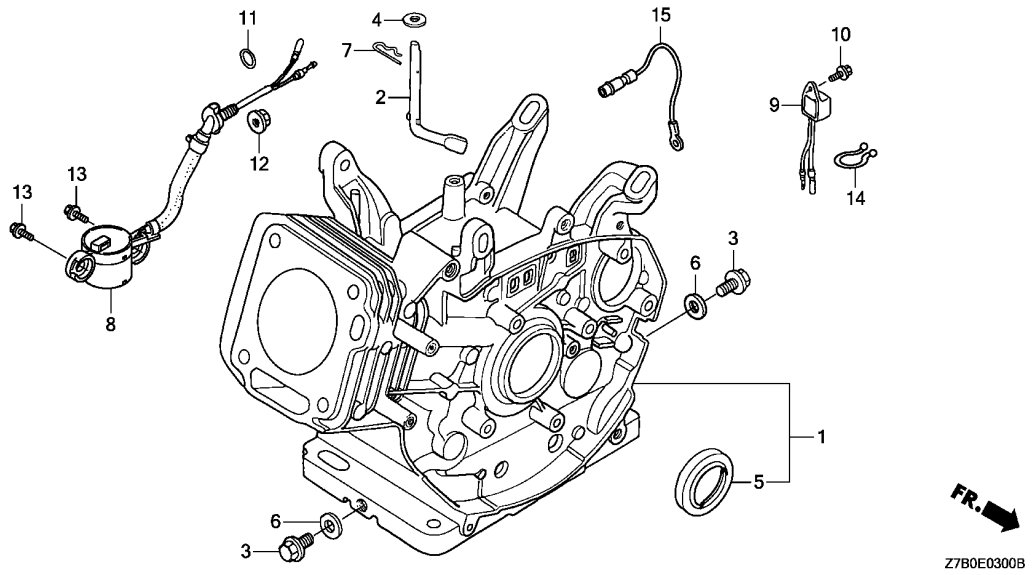

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	11101A0	BARREL, CYLINDER ----------	1.8
2	1161B4	SHAFT, GOVERNOR ARM ----------	1.1
5	11101E4	OIL SEAL, CRANKSHAFT :FRONT --	1.1
8		(11)	
	6151E8	SWITCH, OIL LEVEL ----------	0.5
9	6151A0	ALERT UNIT, ENGINE OIL -------	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	12000-Z7B-405	BARREL ASSY., CYLINDER ------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,RD,SD,SD1 SH,SH1,SH8,SHH
	12000-Z7B-406	BARREL ASSY., CYLINDER(ALERT)	1	-	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXHQ,QXK,SX,SXH,VMT,VS4,VSD4,VX1,VXK
	12000-Z7B-407	BARREL ASSY., CYLINDER ------	1	-	--------	--------	QBE1
	12000-Z7B-408	----------	1	-	--------	--------	QXE9,VKK
	12000-Z1D-406	BARREL ASSY., CYLINDER(ALERT)	1	-	--------	--------	VSP
	12000-ZH9-406	----------	1	-	--------	--------	VX,VXP6,VXPR
	12000-ZH9-407	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	1	-	--------	--------	VXPE
	12000-Z5K-405	BARREL ASSY., CYLINDER ------	-	1	--------	--------	LH,LH1,QD,QD1,QH,QHP1,QMH,QN,RD,SD1,SH,SH1,SHH
	12000-Z5K-406	----------	-	1	--------	--------	PX,QX,QXHQ,SX,VX,VX1,VXP6,VXPR
2	16541-Z7B-000	SHAFT, GOVERNOR ARM ---------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	16541-ZE2-010	----------	1	-	--------	0000154	VSP,VX
	16541-Z7B-000	----------	1	-	0000155	--------	VSP,VX
			-	1			
3	90131-883-000	BOLT, DRAIN PLUG, 12X15 -----	2	2			
4	90446-Z7E-000	WASHER, 8.2X17X0.8 ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	90446-KE1-000	----------	1	-	--------	0000154	VSP,VX
	90446-Z7E-000	----------	1	-	0000155	--------	VSP,VX
			-	1			
5	91201-Z7B-003	OIL SEAL, 30X46X8 ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK
	91201-Z1D-003	OIL SEAL, 30X46X8(NOK ASIA) -	1	-	--------	--------	VSP
	91201-890-003	OIL SEAL, 30X46X8 ----------	1	-	--------	--------	VX,VXP6,VXPE,VXPR

E-3 CYLINDER BARREL

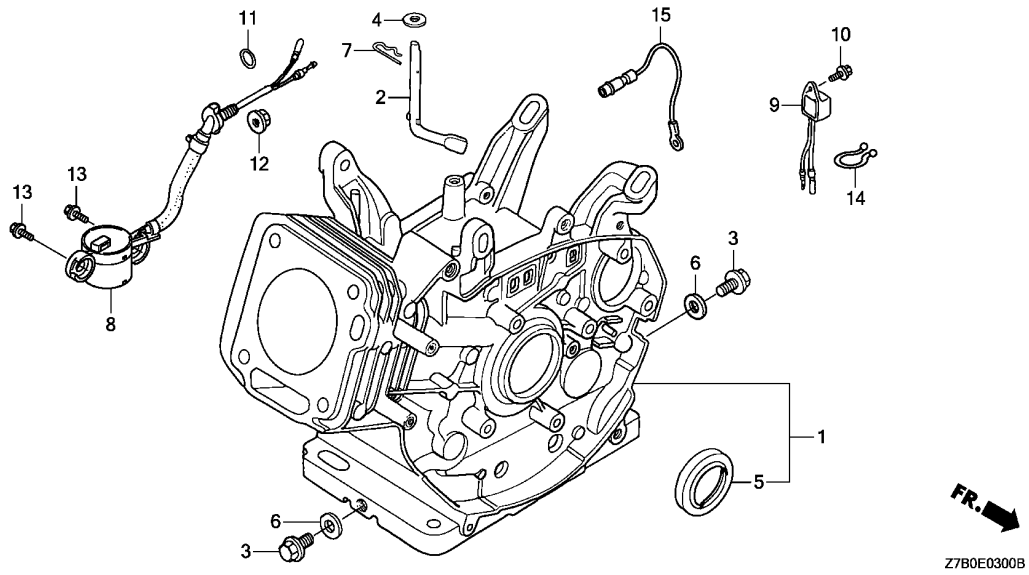

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
(5)	91201-Z1D-003	OIL SEAL, 30X46X8(NOK ASIA) -	-	1			
	91201-Z7B-003	OIL SEAL, 30X46X8 ----------	-	1			
6	94109-12000	WASHER, DRAIN PLUG, 12MM ----	2	2			
7	94251-10000	PIN, LOCK, 10MM ------------	1	1			
8	35480-Z7E-003	SWITCH ASSY., OIL LEVEL -----	1	1	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
9	34150-ZH7-023	ALERT UNIT, OIL ------------	1	-	--------	--------	QXBR,VXP6
	34150-ZH7-013	----------	1	-	--------	0243440	PX,QX,QXC9,QXCK,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1,VXK,VXPE VXPR
	34150-ZH7-023	----------	1	-	0243441	--------	PX,QX,QXC9,QXCK,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1,VXK,VXPE VXPR
10	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	1	-	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1,VXK VXP6,VXPE,VXPR
11	91353-Z7E-003	O-RING, 14MM ----------	1	1	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
12	94050-10000	NUT, FLANGE, 10MM ----------	1	1	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
13	95701-06012-00	BOLT, FLANGE, 6X12 ----------	2	2	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
14	90630-751-000	CLIP, PURSE LOCK -----------	1	-	--------	--------	VSD4
15	31161-ZE2-000	CORD, EARTH ----------	1	-	--------	--------	VMT,VS4

E-6 CRANKCASE COVER(1)

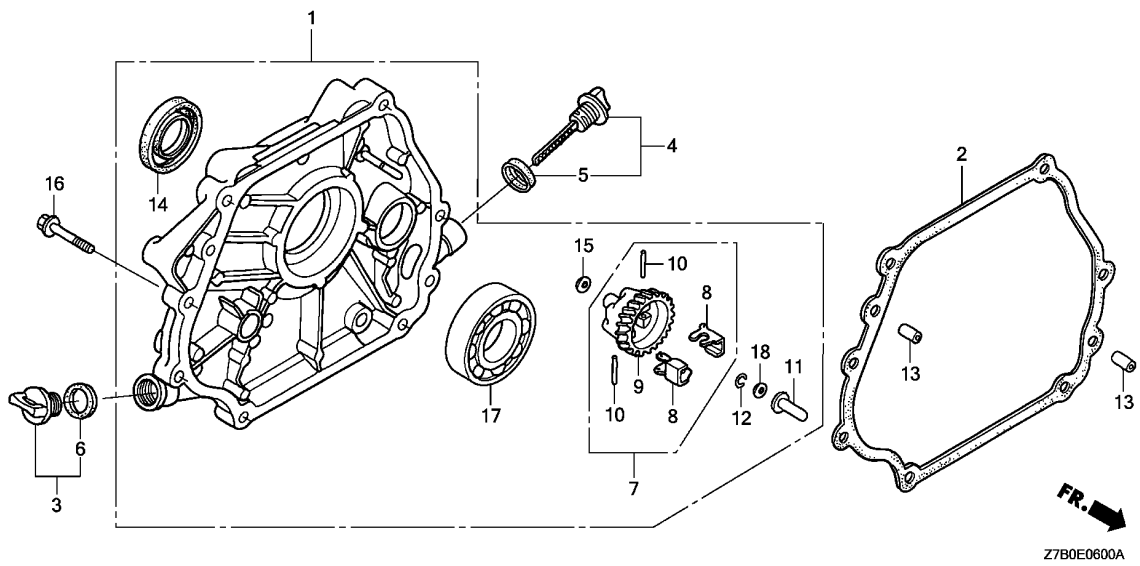


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	11O1F1	COVER, CRANKCASE ----------	0.2
2	11O1E9	PACKING, CRANKCASE COVER -----	0.2
7	1161C4	GOVERNOR ASSEMBLY ----------	0.3
9		(8,10)	
	1161A7	HOLDER, GOVERNOR WEIGHT ------	0.4
11	1161B6	SLIDER, GOVERNOR ----------	0.3
14	11O1E5	OIL SEAL, CRANKSHAFT :REAR ---	0.3
17	11O1A6	BEARING, CRANKSHAFT :REAR ----	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	11300-Z7B-000	COVER ASSY., CRANKCASE ------	1	1	--------	--------	RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH
	11300-Z1D-820	----------	1	1	--------	--------	VXP6,VXPE,VXPR
	11300-Z7B-800	----------	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,VKK,VSD4,VX1,VXK
	11300-Z7B-830	----------	1	-	--------	--------	VS4
	11300-Z1D-600	----------	1	-	--------	0000024	VSP
	11300-ZE2-602	----------	1	-	--------	0000024	VX
	11300-Z7B-800	----------	1	-	0000025	--------	VSP,VX
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,VX,VX1
2	11381-Z7B-701	PACKING, CASE COVER (NINGBO SIL GASKET)	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
	11381-ZE2-801	PACKING, CASE COVER ------	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
	11381-Z5K-000	----------	-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1,VXP6 VXPR
3	15600-Z1T-600	CAP ASSY., OIL FILLER ------	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
4	15600-Z7E-000	CAP ASSY., OIL FILLER ------	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VX1,VXK VXP6,VXPE,VXPR
	15600-Z1C-000	----------	1	-	--------	0003352	VSP
	15600-735-003	----------	1	-	--------	0003352	VX
	15600-Z7E-000	----------	1	-	0003353	--------	VSP,VX
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1,VXP6 VXPR

E-6 CRANKCASE COVER(1)


Ref. No.	Part No.	Description	Reqd. GX 270 H	QTY GX 270 H2	Serial No.		Parts catalogue code
5	15625-ZOT-800	PACKING, OIL FILLER CAP ·····	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX1 VXK,VXP6,VXPE,VXPR
	15625-ZE1-003	·····	1	-	--------	0003352	VX
	15625-ZOT-800	·····	1	-	0003353	--------	VX
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1,VXP6 VXPR
6	15625-Z1T-000	PACKING, OIL FILLER CAP ·····	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
7	16510-ZE3-000	GOVERNOR ASSY. ·····	1	1	--------	--------	VXP6,VXPE,VXPR
	16510-Z7B-000	·····	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VX1,VXK
	16510-ZE2-000	·····	1	-	--------	0000024	VSP,VX
	16510-Z7B-000	·····	1	-	0000025	--------	VSP,VX
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
8	16511-ZE2-000	WEIGHT, GOVERNOR ·····	2	2	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK
	16511-ZE8-000	·····	3	3	--------	--------	VXP6,VXPE,VXPR
9	16512-ZE3-000	HOLDER, GOVERNOR WEIGHT ·····	1	1	--------	--------	VXP6,VXPE,VXPR
	16512-Z7B-000	·····	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VX1,VXK
	16512-ZE2-000	·····	1	-	--------	0000024	VSP,VX
	16512-Z7B-000	·····	1	-	0000025	--------	VSP,VX
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
10	16513-ZE2-000	PIN, GOVERNOR WEIGHT ·····	2	2	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK
			3	3	--------	--------	VXP6,VXPE,VXPR
11	16531-ZOA-000	SLIDER, GOVERNOR ·····	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
12	90602-ZE1-000	CLIP, GOVERNOR HOLDER ·····	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
13	90701-Z7E-000	DOWEL PIN, 8X12 ·····	2	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VX1,VXK VXP6,VXPE,VXPR
	90701-HC4-000	·····	2	-	--------	0000154	VSP,VX
	90701-Z7E-000	·····	2	-	0000155	--------	VSP,VX
			-	2	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1,VXP6 VXPR
14	91201-Z1D-003	OIL SEAL, 30X46X8(NOK ASIA) -	1	1	--------	--------	VXP6,VXPE,VXPR
	91201-Z7B-003	OIL SEAL, 30X46X8 ·····	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VX1,VXK VXP6
	91201-Z1D-003	OIL SEAL, 30X46X8(NOK ASIA) -	1	-	--------	0000024	VSP
	91201-890-003	OIL SEAL, 30X46X8 ·····	1	-	--------	0000024	VX
	91201-Z7B-003	·····	1	-	0000025	--------	VSP,VX
			1	-	0241561	--------	VXPE,VXPR
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1,VXP6 VXPR
15	94101-06800	WASHER, PLAIN, 6MM ·····	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR

E-6 CRANKCASE COVER(1)

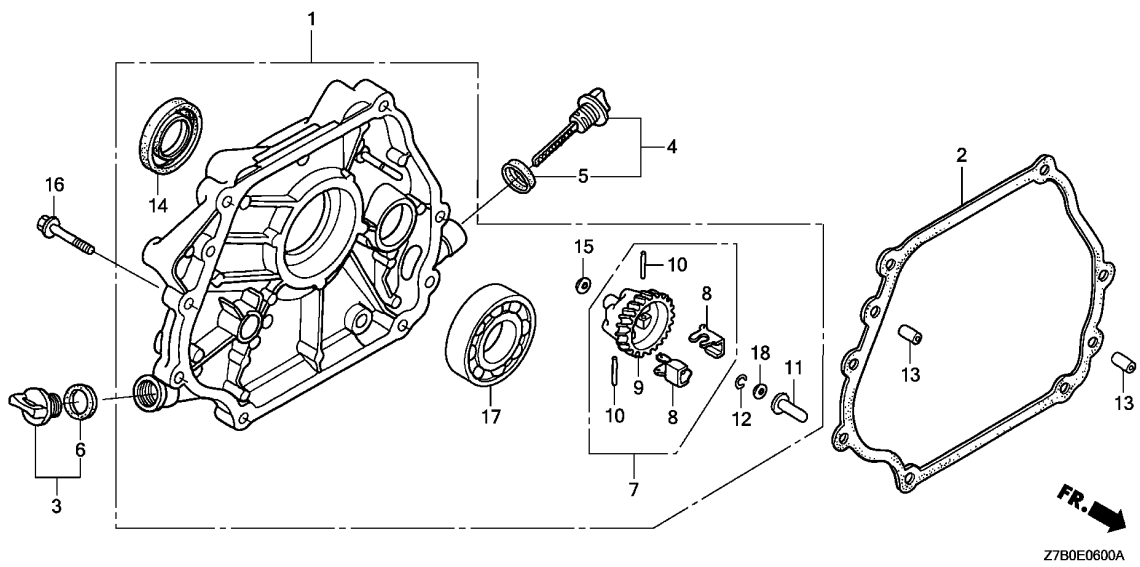

Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. GX 270 H2	Serial No.		Parts catalogue code
16	95701-08035-00	BOLT, FLANGE, 8X35 ----------	7	7	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
17	96100-62060-00	BEARING, RADIAL BALL, 6206 --	1	1	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPE,VXPR
	91001-Z7B-003	----------	1	-	--------	--------	PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXHQ,QXK,SH8,SHH,VKK,VS4,VSD4,VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
			1	-	0171491	--------	RD,SD,SD1,SH,SH1,SX,SXH
			-	1	--------	--------	PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1,VXP6 VXPR
18	90473-147-000	WASHER, 6X16 ----------	1	1	--------	--------	VXP6,VXPE,VXPR
	90473-Z7B-000	----------	1	-	--------	--------	VXP6
			1	-	0241561	--------	VXPE,VXPR
			-	1	--------	--------	VXP6,VXPR


E-6-1 CRANKCASE COVER(2)

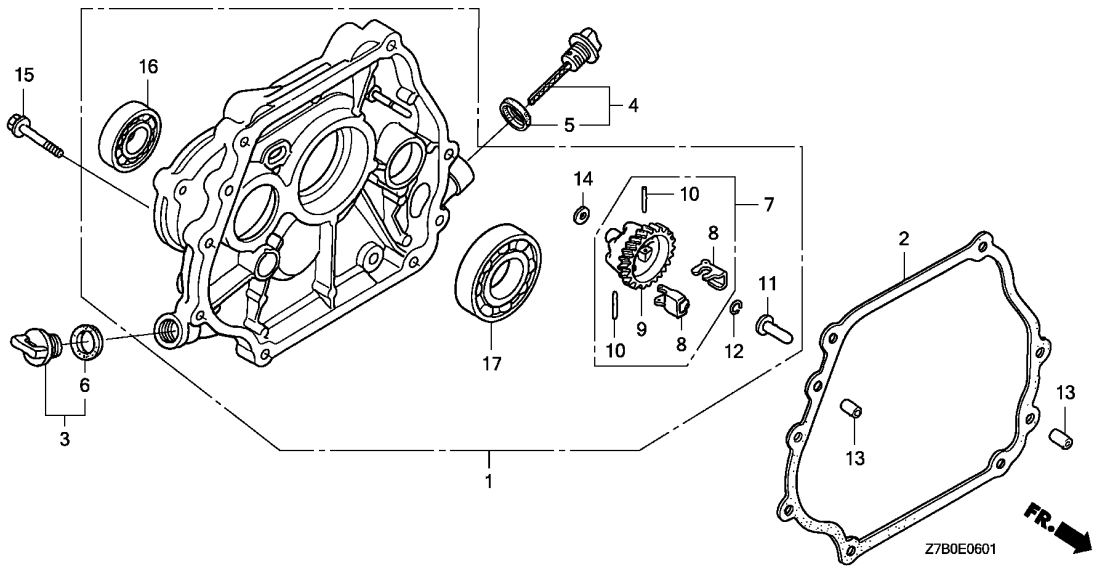

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101G0	COVER, CRANKCASE(A) ----------	0.3
2	1101F9	PACKING, CRANKCASE COVER(A) --	0.3
7	1161C4	GOVERNOR ASSEMBLY ----------	0.3
9		(8,10)	
	1161A7	HOLDER, GOVERNOR WEIGHT ------	0.4
11	1161B6	SLIDER, GOVERNOR ------------	0.3
16	2141A7	BEARING, POWER TAKE OFF SHAFT :FRONT ----------	0.4
17	1101A6	BEARING, CRANKSHAFT :REAR ----	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	11300-Z7B-810	COVER ASSY., CRANKCASE ------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
2	11381-Z7B-701	PACKING, CASE COVER (NINGBO SIL GASKET)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
	11381-ZE2-801	PACKING, CASE COVER ---------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW
	11381-Z5K-000	----------	-	1	--------	--------	LH,LH1
3	15600-Z1T-600	CAP ASSY., OIL FILLER -------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
4	15600-Z7E-000	CAP ASSY., OIL FILLER -------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
5	15625-ZOT-800	PACKING, OIL FILLER CAP -----	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
6	15625-Z1T-000	PACKING, OIL FILLER CAP -----	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
7	16510-Z7B-000	GOVERNOR ASSY. -------------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
8	16511-ZE2-000	WEIGHT, GOVERNOR -----------	2	2	--------	--------	LH,LH1,LH2,LHB5,LW
9	16512-Z7B-000	HOLDER, GOVERNOR WEIGHT -----	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
10	16513-ZE2-000	PIN, GOVERNOR WEIGHT --------	2	2	--------	--------	LH,LH1,LH2,LHB5,LW
11	16531-ZOA-000	SLIDER, GOVERNOR -----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
12	90602-ZE1-000	CLIP, GOVERNOR HOLDER -------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
13	90701-Z7E-000	DOWEL PIN, 8X12 ------------	2	2	--------	--------	LH,LH1,LH2,LHB5,LW
14	94101-06800	WASHER, PLAIN, 6MM ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
15	95701-08035-00	BOLT, FLANGE, 8X35 ----------	7	7	--------	--------	LH,LH1,LH2,LHB5,LW
16	96100-62040-00	BEARING, RADIAL BALL, 6204 --	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
17	96100-62060-00	BEARING, RADIAL BALL, 6206 --	1	1	--------	--------	LH,LH1,LH2,LHB5,LW
	91001-Z7B-003	----------	1	-	0171491	--------	LH,LH1,LH2,LHB5,LW
			-	1	--------	--------	LH,LH1


CRANKCASE COVER(3)

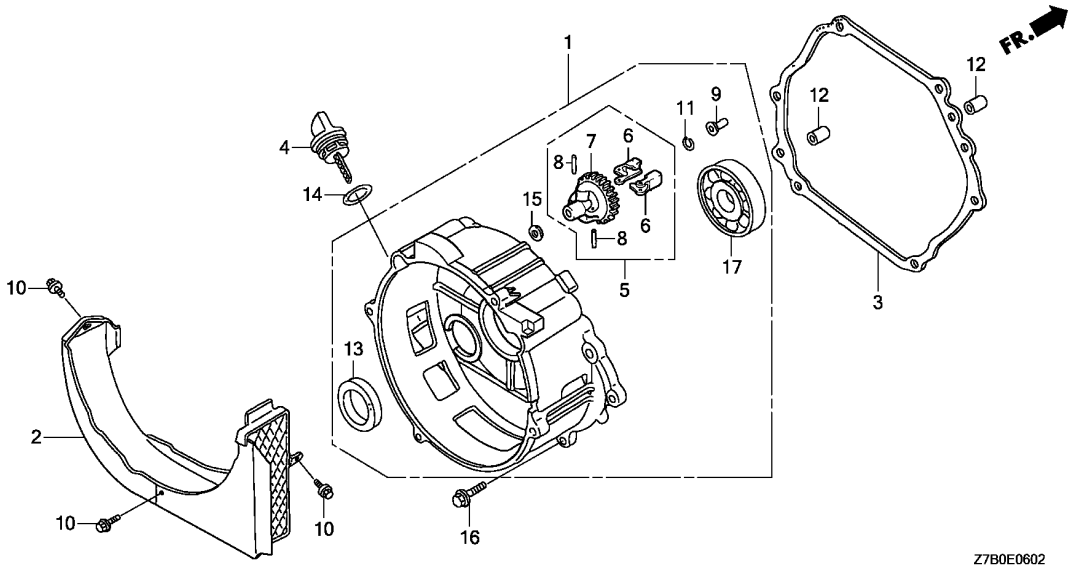

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101G0	COVER, CRANKCASE(A) ----------	0.3
2	4141J5	COVER, DUCT ----------	0.1
3	1101F9	PACKING, CRANKCASE COVER(A) --	0.3
5	1161C4	GOVERNOR ASSEMBLY ----------	0.3
7		(6,8)	
	1161A7	HOLDER, GOVERNOR WEIGHT ------	0.4
9	1161B6	SLIDER, GOVERNOR ----------	0.3
13	1101E5	OIL SEAL, CRANKSHAFT :REAR ---	0.3
17	1101A8	BEARING, CRANKSHAFT ----------	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	11300-Z7B-700	COVER ASSY., CRANKCASE ------	1	-	--------	--------	VMT
2	11315-ZE2-700	COVER, DUCT ----------	1	-	--------	--------	VMT
3	11381-Z7B-701	PACKING, CASE COVER (NINGBO SIL GASKET)	1	-	--------	--------	VMT
	11381-ZE2-801	PACKING, CASE COVER ---------	1	-	--------	--------	VMT
4	15620-Z7E-800	CAP, OIL FILLER ----------	1	-	--------	--------	VMT
5	16510-Z7B-000	GOVERNOR ASSY. ----------	1	-	--------	--------	VMT
6	16511-ZE2-000	WEIGHT, GOVERNOR ----------	2	-	--------	--------	VMT
7	16512-Z7B-000	HOLDER, GOVERNOR WEIGHT -----	1	-	--------	--------	VMT
8	16513-ZE2-000	PIN, GOVERNOR WEIGHT --------	2	-	--------	--------	VMT
9	16531-ZOA-000	SLIDER, GOVERNOR ----------	1	-	--------	--------	VMT
10	90019-883-000	BOLT, FLANGE, 5X10(CT200) ---	3	-	--------	--------	VMT
11	90602-ZE1-000	CLIP, GOVERNOR HOLDER -------	1	-	--------	--------	VMT
12	90701-Z7E-000	DOWEL PIN, 8X12 ----------	2	-	--------	--------	VMT
13	91201-Z7B-003	OIL SEAL, 30X46X8 ----------	1	-	--------	--------	VMT
14	91301-805-000	O-RING, 26X2.7 ----------	1	-	--------	--------	VMT
15	94101-06800	WASHER, PLAIN, 6MM ----------	1	-	--------	--------	VMT
16	95701-08035-00	BOLT, FLANGE, 8X35 ----------	7	-	--------	--------	VMT
17	96100-62060-00	BEARING, RADIAL BALL, 6206 --	1	-	--------	--------	VMT
	91001-Z7B-003	----------	1	-	0171491	--------	VMT


CRANKSHAFT

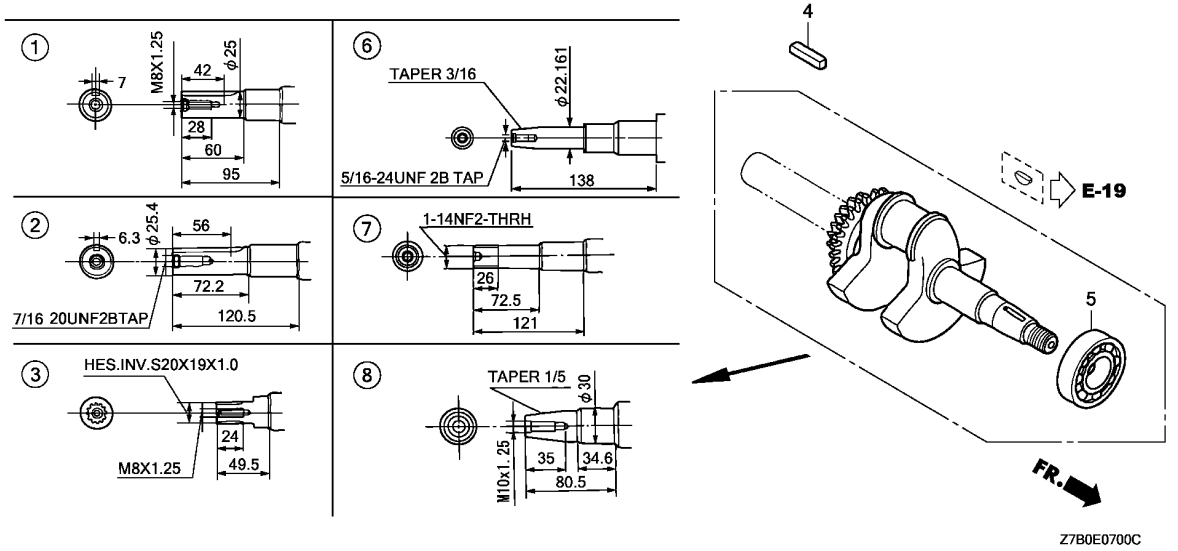

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2,3,6,7,8)	
	1101F0	CRANKSHAFT ----------	1.1
5	1101A4	BEARING, CRANKSHAFT :FRONT ---	1.3

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	13310-Z7B-010	CRANKSHAFT COMP. ----------	1	1	--------	--------	RD,SD1,SH,SH1,SH8,SHH,SX
	13310-Z7B-000	----------	1	-	--------	--------	SD,SXH
2	13310-Z7B-801	CRANKSHAFT COMP. ----------	1	1	--------	--------	QD,QD1,QDBR,QH,QHB1,QHP1,QMH,QN,QX,QXBR,QXHQ
	13310-Z7B-800	----------	1	-	--------	--------	QBE1,QHB5,QP,QXC9,QXCK,QXE9,QXK
3	13310-Z7B-821	CRANKSHAFT COMP. ----------	1	1	--------	--------	LH,LH1
	13310-Z7B-820	----------	1	-	--------	--------	LH2,LHB5,LW
4	90745-ZE2-600	KEY, 6.3X6.3X43 ----------	1	1	--------	--------	QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK,QXE9 QXHQ,QXK
	90741-805-000	KEY, 7X7X33 ----------	1	-	--------	--------	RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH
	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.) ---	(1)	-	--------	--------	RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH
	90741-805-000	KEY, 7X7X33 ----------	-	1	--------	--------	SD1,SH,SH1,SHH,SX
	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.) ---	-	(1)	--------	--------	SD1,SH,SH1,SHH,SX
5	91001-ZH9-003	BEARING, RADIAL BALL(6206 SH)	1	1			
	91002-Z7B-003	BEARING, BALL RADIAL, 6206SH2	1	1			
6	13310-Z7B-670	CRANKSHAFT COMP. ----------	1	-	--------	--------	VKK,VS4,VSD4,VXK
	13310-Z7B-671	----------	1	-	--------	--------	VX1
	13310-Z7B-841	----------	1	-	--------	--------	VXP6
	13310-ZH9-671	----------	1	-	--------	0079448	VSP,VX
	13310-ZH9-841	----------	1	-	--------	0083234	VXPE,VXPR
	13310-Z7B-671	----------	1	-	0079449	--------	VSP,VX
	13310-Z7B-840	----------	1	-	0083233	--------	VXPE
	13310-Z7B-841	----------	1	-	0083233	--------	VXPR
	13310-Z7B-671	----------	-	1	--------	--------	VX,VX1
	13310-Z7B-841	----------	-	1	--------	--------	VXP6,VXPR
7	13310-Z7B-651	CRANKSHAFT COMP. ----------	1	1	--------	--------	PX
8	13310-Z7B-700	CRANKSHAFT COMP. ----------	1	-	--------	--------	VMT

E-8 PISTON

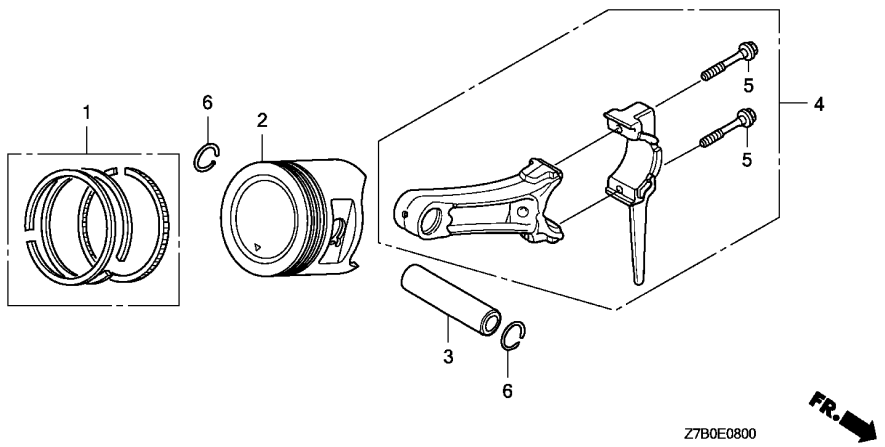


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1,3,4)	
	1111R1	PISTON AND/OR RING SET AND/OR BEARING AND/OR ROD ----------	1.2

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	13010-Z7B-701	RING SET, PISTON(STD.) (FUJIAN DONGYA MACHINERY)	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	13011-Z7B-701	RING SET, PISTON(O.25) (FUJIAN DONGYA MACHINERY)	(1)	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	13012-Z7B-701	RING SET, PISTON(O.50) (FUJIAN DONGYA MACHINERY)	(1)	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	13013-Z7B-701	RING SET, PISTON(O.75) (FUJIAN DONGYA MACHINERY)	(1)	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	13010-Z5H-004	RING SET, PISTON(STD.)(TPR)	-	1	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX,VX1,VXK,VXP6,VXPE,VXPR
	13011-Z5H-004	RING SET, PISTON(O.25)(TPR)	-	(1)	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX,VX1,VXK,VXP6,VXPE,VXPR
	13012-Z5H-004	RING SET, PISTON(O.50)(TPR)	-	(1)	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX,VX1,VXK,VXP6,VXPE,VXPR
	13013-Z5H-004	RING SET, PISTON(O.75)(TPR)	-	(1)	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX,VX1,VXK,VXP6,VXPE,VXPR

E-8 PISTON


Ref. No.	Part No.	Description	Reqd. GX 270 H	QTY GX 270 H2	Serial No.		Parts catalogue code
(1)	13010-Z5K-003	RING SET, PISTON(STD.)(RIKEN)	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX1,VXK,VXP6,VXPE,VXPR
	13011-Z5K-003	RING SET, PISTON(0.25)(RIKEN)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX1,VXK,VXP6,VXPE,VXPR
	13012-Z5K-003	RING SET, PISTON(0.50)(RIKEN)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX1,VXK,VXP6,VXPE,VXPR
	13013-Z5K-003	RING SET, PISTON(0.75)(RIKEN)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VSP VX1,VXK,VXP6,VXPE,VXPR
	13010-ZE8-601	RING SET, PISTON(STD.)(NIPPON)	1	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13010-ZE8-602	RING SET, PISTON(STD.) (TEIKOKU)	1	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13011-ZE8-601	RING SET, PISTON(0.25)(NIPPON)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13011-ZE8-602	RING SET, PISTON(0.25) (TEIKOKU)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13012-ZE8-601	RING SET, PISTON(0.50)(NIPPON)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13012-ZE8-602	RING SET, PISTON(0.50) (TEIKOKU)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13013-ZE8-601	RING SET, PISTON(0.75)(NIPPON)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13013-ZE8-602	RING SET, PISTON(0.75) (TEIKOKU)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13010-Z5H-004	RING SET, PISTON(STD.)(TPR) -	1	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13010-Z5K-003	RING SET, PISTON(STD.)(RIKEN)	1	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13011-Z5H-004	RING SET, PISTON(0.25)(TPR) -	(1)	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13011-Z5K-003	RING SET, PISTON(0.25)(RIKEN)	(1)	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13012-Z5H-004	RING SET, PISTON(0.50)(TPR) -	(1)	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13012-Z5K-003	RING SET, PISTON(0.50)(RIKEN)	(1)	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13013-Z5H-004	RING SET, PISTON(0.75)(TPR) -	(1)	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13013-Z5K-003	RING SET, PISTON(0.75)(RIKEN)	(1)	-	0004283	--------	LH,LW,QD,RD,SD,SH
	13010-Z5K-003	RING SET, PISTON(STD.)(RIKEN)	1	-	0004430	--------	VX
	13011-Z5K-003	RING SET, PISTON(0.25)(RIKEN)	(1)	-	0004430	--------	VX
	13012-Z5K-003	RING SET, PISTON(0.50)(RIKEN)	(1)	-	0004430	--------	VX
	13013-Z5K-003	RING SET, PISTON(0.75)(RIKEN)	(1)	-	0004430	--------	VX
	13010-Z7B-931	RING SET, PISTON(STD.)(TPR) -	-	1			
	13011-Z7B-931	RING SET, PISTON(0.25)(TPR) -	-	(1)			
	13012-Z7B-931	RING SET, PISTON(0.50)(TPR) -	-	(1)			
	13013-Z7B-931	RING SET, PISTON(0.75)(TPR) -	-	(1)			
2	13101-Z7B-800	PISTON(STD.)	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VX1 VXK,VXP6,VXPE,VXPR
	13102-Z7B-800	PISTON(0.25)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VX1 VXK,VXP6,VXPE,VXPR
	13103-Z7B-800	PISTON(0.50)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VX1 VXK,VXP6,VXPE,VXPR
	13104-Z7B-800	PISTON(0.75)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXC9,QXCK,QXE9,QXHQ,QXK,SD1,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4,VX1 VXK,VXP6,VXPE,VXPR
	13101-ZH9-000	PISTON(STD.)	1	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13102-ZH9-000	PISTON(0.25)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13103-ZH9-000	PISTON(0.50)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13104-ZH9-000	PISTON(0.75)	(1)	-	--------	0004282	LH,LW,QD,RD,SD,SH
	13101-ZH9-010	PISTON(STD.)	1	-	--------	0004429	VSP,VX
	13102-ZH9-010	PISTON(0.25)	(1)	-	--------	0004429	VSP,VX

E-8 PISTON

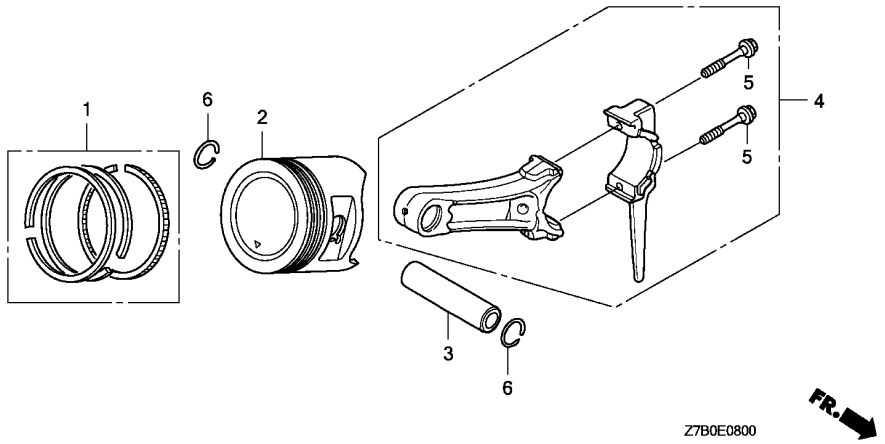


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
(2)	13103-ZH9-010	PISTON(0.50)	(1)	-	--------	0004429	VSP,VX
	13104-ZH9-010	PISTON(0.75)	(1)	-	--------	0004429	VSP,VX
	13101-ZH9-010	PISTON(STD.)	1	-	0004283	0004429	LH,LW,QD,RD,SD,SH
	13102-ZH9-010	PISTON(0.25)	(1)	-	0004283	0004429	LH,LW,QD,RD,SD,SH
	13103-ZH9-010	PISTON(0.50)	(1)	-	0004283	0004429	LH,LW,QD,RD,SD,SH
	13104-ZH9-010	PISTON(0.75)	(1)	-	0004283	0004429	LH,LW,QD,RD,SD,SH
	13101-Z7B-800	PISTON(STD.)	1	-	0004430	--------	LH,LW,QD,RD,SD,SH,VSP,VX
	13102-Z7B-800	PISTON(0.25)	(1)	-	0004430	--------	LH,LW,QD,RD,SD,SH,VSP,VX
	13103-Z7B-800	PISTON(0.50)	(1)	-	0004430	--------	LH,LW,QD,RD,SD,SH,VSP,VX
	13104-Z7B-800	PISTON(0.75)	(1)	-	0004430	--------	LH,LW,QD,RD,SD,SH,VSP,VX
	13101-Z7B-930	PISTON(STD.)	-	1			
	13102-Z7B-930	PISTON(0.25)	-	(1)			
	13103-Z7B-930	PISTON(0.50)	-	(1)			
	13104-Z7B-930	PISTON(0.75)	-	(1)			
3	13111-Z7B-000	PIN, PISTON	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	13111-ZE2-000	.....	1	-	--------	0000024	VSP,VX
	13111-Z7B-000	.....	1	-	0000025	--------	VSP,VX
	13111-Z5K-000	.....	-	1			
4	13200-ZE2-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	-	--------	--------	LH,LW,QD,QXC9,QXE9,QXHQ,RD,SD,SH,SH8,SHH,SXH,VKK,VMT,VS4,VX,VXP6,VXPE VXPR
	13200-Z7B-000	ROD ASSY., CONNECTING(JLH) (IDENT MARK Z)	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SH8,SHH,SX,VKK,VMT,VS4,VSD4,VX1,VXK,VXP6
	13200-Z7B-305	ROD ASSY., CONNECTING(JLH) (0.25 UNDER SIZE)	(1)	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SX,VKK,VMT,VS4,VSD4,VX1,VXK

E-8 PISTON

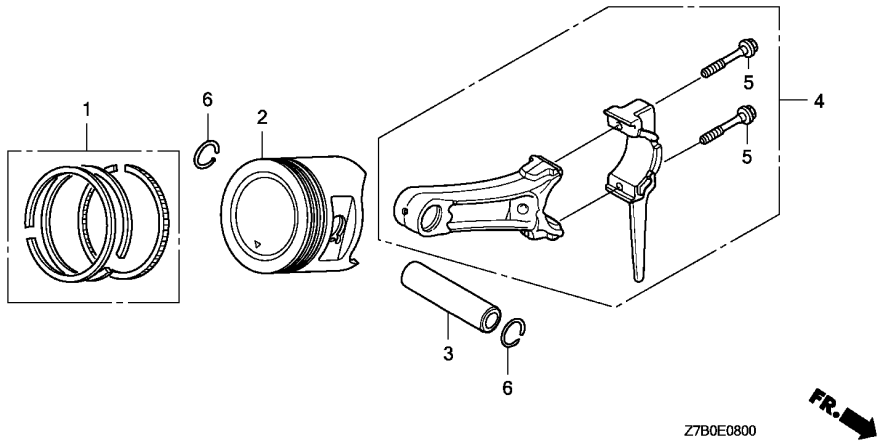

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
(4)	13200-Z1D-000	ROD ASSY., CONNECTING(STD.) -	1	-	--------	--------	LW,QD,QXC9,QXHQ,SD,SH,SH8,SHH,SXH,VSP,VXP6,VXPE,VXPR
	13200-Z1D-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	-	--------	--------	VSP
	13200-ZE2-010	ROD ASSY., CONNECTING(STD.) -	1	-	--------	0000024	VX
	13200-Z1D-000	----------	1	-	--------	0038832	LH,RD
			1	-	0000025	--------	VX
	13200-Z7B-000	ROD ASSY., CONNECTING(JLH) (IDENT MARK Z)	1	-	0038833	--------	LH,RD
			1	-	0133648	--------	LW,QD,QXC9,QXHQ,SD,SH,SXH,VSP,VX,VXPE,VXPR
	13200-Z1D-000	ROD ASSY., CONNECTING(STD.) -	-	1			
	13200-Z1D-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	-	(1)			
	13200-Z7B-000	ROD ASSY., CONNECTING(JLH) (IDENT MARK Z)	-	1			
5	90001-ZE8-000	BOLT, CONNECTING ROD -------	2	-	--------	--------	LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4 VSD4,VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
	90001-Z7E-000	BOLT, CONNECTING ROD(FOR JLH)	2	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SH8,SHH,SX,VKK,VMT,VS4,VSD4,VX1,VXK,VXP6
	90001-ZE8-000	BOLT, CONNECTING ROD -------	2	-	--------	0038832	LH,RD
	90001-Z7E-000	BOLT, CONNECTING ROD(FOR JLH)	2	-	0038833	--------	LH,RD
			2	-	0133648	--------	LW,QD,QXC9,QXHQ,SD,SH,SXH,VSP,VX,VXPE,VXPR
			-	2			
	90001-ZE8-000	BOLT, CONNECTING ROD -------	-	2			
6	90551-ZE1-000	CLIP, PISTON PIN, 18MM ------	2	2			


CAMSHAFT

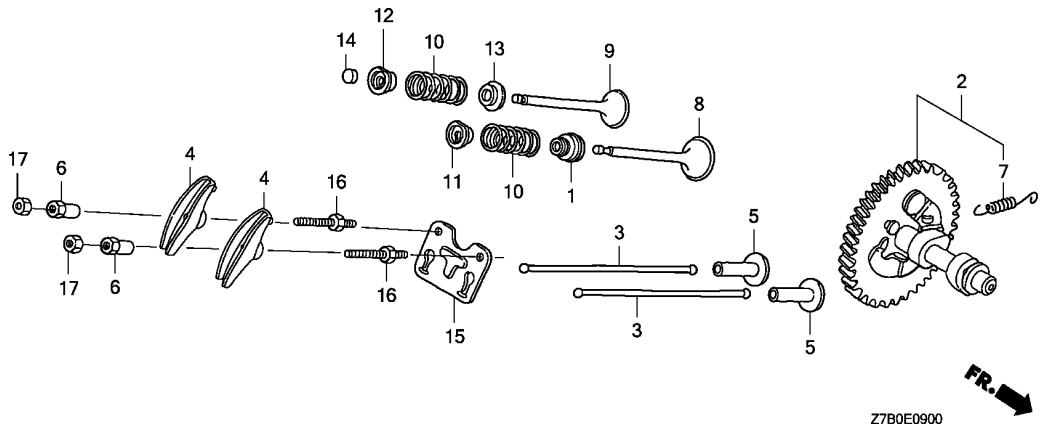

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K2	SEAL, INTAKE VALVE STEM ------ .INCLUDES: Valve clearance adjustment	0.6
2	1111C2	CAMSHAFT ------------------- .INCLUDES: Valve clearance adjustment	0.4
3	1111L6	ROD, PUSH :INTAKE ------------ .INCLUDES: Valve clearance adjustment	0.2
	1111L6A	.Replace exhaust push rod add	0.1
	1111L7	ROD, PUSH :EXHAUST ----------- .INCLUDES: Valve clearance adjustment	0.2
	1111L7A	.Replace intake push rod add -	0.1
4	1111A2	ARM, ROCKER :INTAKE ---------- .INCLUDES: Valve clearance adjustment	0.2
	1111A2A	.Replace exhaust rocker arm add -----------------------	0.1
	1111A1	ARM, ROCKER :EXHAUST --------- .INCLUDES: Valve clearance adjustment	0.2
	1111A1A	.Replace intake rocker arm add	0.1
+ 5	1111L9	LIFTER, VALVE :INTAKE --------	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	12209-Z7E-003	SEAL, VALVE STEM ------------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	12209-ZE8-003	---------------------------	1	-	--------	0000024	VSP,VX
	12209-Z7E-003	---------------------------	1	-	0000025	--------	VSP,VX
			-	1			
2	14100-ZE3-020	CAMSHAFT ASSY. -------------	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QBE1,QH,QHB1,QHB5,QHP1,QMH,QX,QXBR,QXC9,QXCK,QXE9 QXK,SH,SH1,SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
	14100-ZH9-010	---------------------------	1	-	--------	--------	LW,QD,QD1,QDBR,QN,QP,QXHQ,RD,SD,SD1,VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	14100-Z7B-930	---------------------------	-	1			
3	14410-Z7B-000	ROD, PUSH ------------------	2	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14410-Z1D-000	---------------------------	2	-	--------	0000024	VSP
	14410-ZE2-013	---------------------------	2	-	--------	0000024	VX
	14410-Z7B-000	---------------------------	2	-	0000025	--------	VSP,VX
			-	2			
4	14431-ZE2-010	ARM, VALVE ROCKER ----------	2	2			
5	14441-Z7E-000	LIFTER, VALVE --------------	2	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14441-ZE2-000	---------------------------	2	-	--------	0000024	VSP,VX
	14441-Z7E-000	---------------------------	2	-	0000025	--------	VSP,VX
			-	2			
6	14451-Z7E-000	PIVOT, ROCKER ARM ----------	2	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14451-ZE1-013	---------------------------	2	-	--------	0000024	VSP,VX


CAMSHAFT

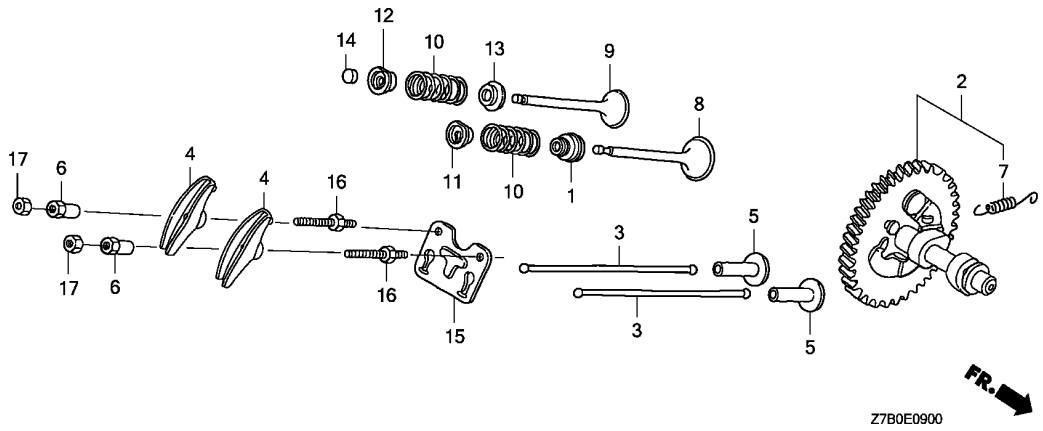

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 5		.INCLUDES: Valve clearance adjustment .NOTE: Same time for two units	
	1111M0	LIFTER, VALVE :EXHAUST ·····	0.4
		.INCLUDES: Valve clearance adjustment .NOTE: Same time for two units	
8	1111L1	VALVE, INTAKE ·····	0.7
		.INCLUDES: Valve clearance adjustment and reface	
	1111L1E	.Replace intake and exhaust all add ·····	0.2
9	1111L0	VALVE, EXHAUST ·····	0.7
		.INCLUDES: Valve clearance adjustment and reface	
	1111L0E	.Replace intake and exhaust all add ·····	0.2
10	1111P3	SPRING, VALVE :INTAKE ·····	0.6
		.INCLUDES: Valve clearance adjustment	
	1111P3A	.Replace intake and exhaust all add ·····	0.1
	1111P4	SPRING, VALVE :EXHAUST ·····	0.6
		.INCLUDES:	
+		Valve clearance adjustment	

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
(6)	14451-Z7E-000	PIVOT, ROCKER ARM ·····	2	-	0000025 ----------	VSP,VX
			-	2		
7	14568-ZE1-000	SPRING, WEIGHT RETURN ·····	1	1		
8	14711-Z7B-000	VALVE, IN. ·····	1	-	---------- ----------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14711-ZE2-000	·····	1	-	---------- 0000024	VSP,VX
	14711-Z7B-000	·····	1	-	0000025 ----------	VSP,VX
	14711-Z5K-900	·····	-	1		
9	14721-Z7B-000	VALVE, EX. ·····	1	-	---------- ----------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14721-ZE2-000	·····	1	-	---------- 0000024	VSP,VX
	14721-Z7B-000	·····	1	-	0000025 ----------	VSP,VX
	14721-Z5K-900	·····	-	1		
10	14751-Z7E-000	SPRING, VALVE ·····	2	-	---------- ----------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14751-Z1C-000	·····	2	-	---------- 0000024	VSP
	14751-ZE2-003	·····	2	-	---------- 0000024	VX
	14751-Z7E-000	·····	2	-	0000025 ----------	VSP,VX
			-	2		
11	14771-ZE2-000	RETAINER, IN. VALVE SPRING ··	1	1		
12	14773-ZE2-000	RETAINER, EX. VALVE SPRING ··	1	-		
	14771-ZE2-000	RETAINER, IN. VALVE SPRING ·· (EXHAUST SIDE)	-	1		
13	14775-ZE2-010	SEAT, VALVE SPRING ·····	1	1		


CAMSHAFT

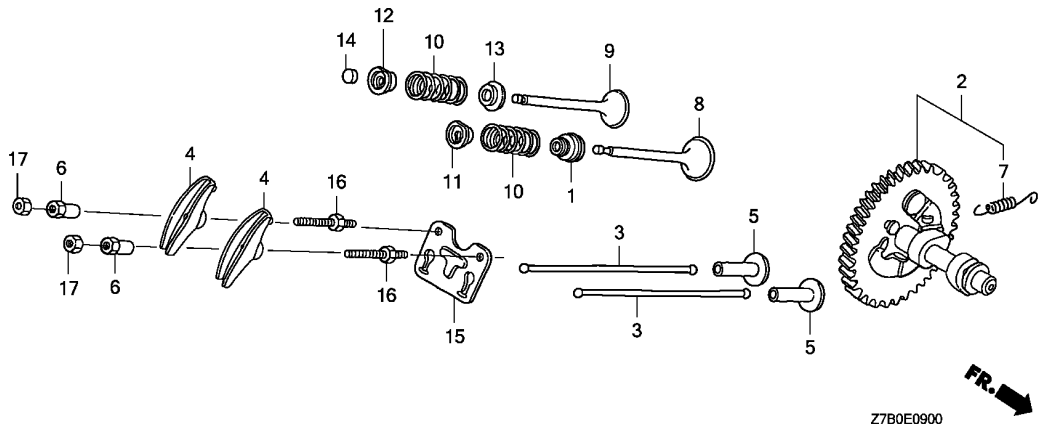

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+10	1111P4A	.Replace intake and exhaust all add ----------	0.1
14	1111J7	ROTATOR, VALVE ---------- .INCLUDES: Valve clearance adjustment	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
14	14781-Z7E-000	ROTATOR, VALVE ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14781-ZE2-000	----------	1	-	--------	0000024	VSP,VX
	14781-Z7E-000	----------	1	-	0000025	--------	VSP,VX
15	14791-Z7E-000	GUIDE, PUSH ROD ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	14791-ZE2-010	----------	1	-	--------	0000024	VSP,VX
	14791-Z7E-000	----------	1	-	0000025	--------	VSP,VX
			-	1			
16	90012-ZE0-010	BOLT, PIVOT, 8MM ----------	2	2			
17	90206-ZE1-000	NUT, PIVOT ADJUSTING --------	2	2			


E-11 RECOIL STARTER(1)

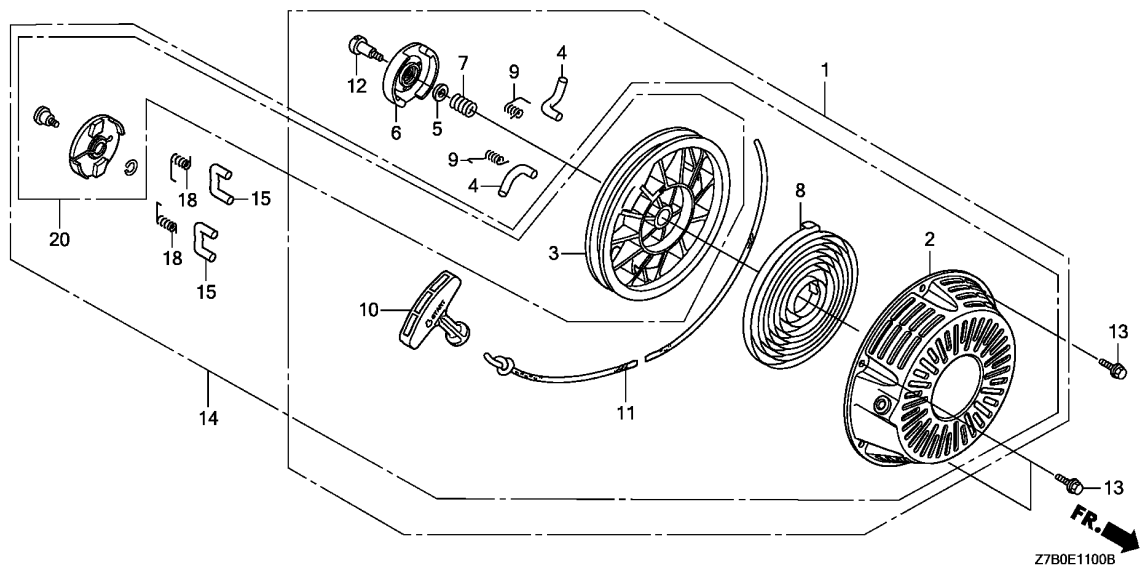

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(14)	
	1121B9	STARTER, RECOIL ----------	0.1
3		(20)	
	1121B1	REEL, RECOIL STARTER ----------	0.3
4		(9,15,18)	
	1121B0	STARTER RATCHET AND/OR SPRING	0.2
6		(7)	
	1121A4	GUIDE, RATCHET ----------	0.2
8	1121B7	SPRING, RECOIL STARTER RETURN	0.3
10	1121A3	GRIP, RECOIL STARTER ----------	0.1
11	1121B3	ROPE, RECOIL STARTER ----------	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	28400-Z7B-003ZA	STARTER ASSY., RECOIL					
		R280.....POWER RED	1	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
	28400-Z7B-003ZB	*NH1*.....BLACK	1	-	--------	0082366	QXHQ,SD
	28400-Z7B-003ZA	*R280*.....POWER RED	1	-	0000722	0082366	VSP,VX
2	28410-Z7B-003ZA	CASE COMP., RECOIL STARTER					
		R280.....POWER RED	1	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
	28410-Z7B-003ZB	*NH1*.....BLACK	1	-	--------	0082366	QXHQ,SD
	28410-Z7B-701ZA	*R280*.....POWER RED	1	-	--------	0140283	QDBR,QXBR
	28410-Z7B-003ZA	*R280*.....POWER RED	1	-	0000722	0082366	VSP,VX
	28410-Z7B-701ZA	*R280*.....POWER RED	1	-	0082367	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX VX1,VXK,VXPE,VXPR
	28410-Z7B-701ZB	*NH1*.....BLACK	1	-	0082367	0140283	QXHQ,SD,VSP
3	28420-Z7B-003	REEL, RECOIL STARTER ----------	1	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			1	-	0000722	0082366	VSP,VX
4	28422-ZH8-801	RATCHET, STARTER ----------	2	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			2	-	0000722	0082366	VSP,VX
5	28431-ZH8-801	PLATE, FRICTION ----------	1	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			1	-	0000722	0082366	VSP,VX

RECOIL STARTER(1)

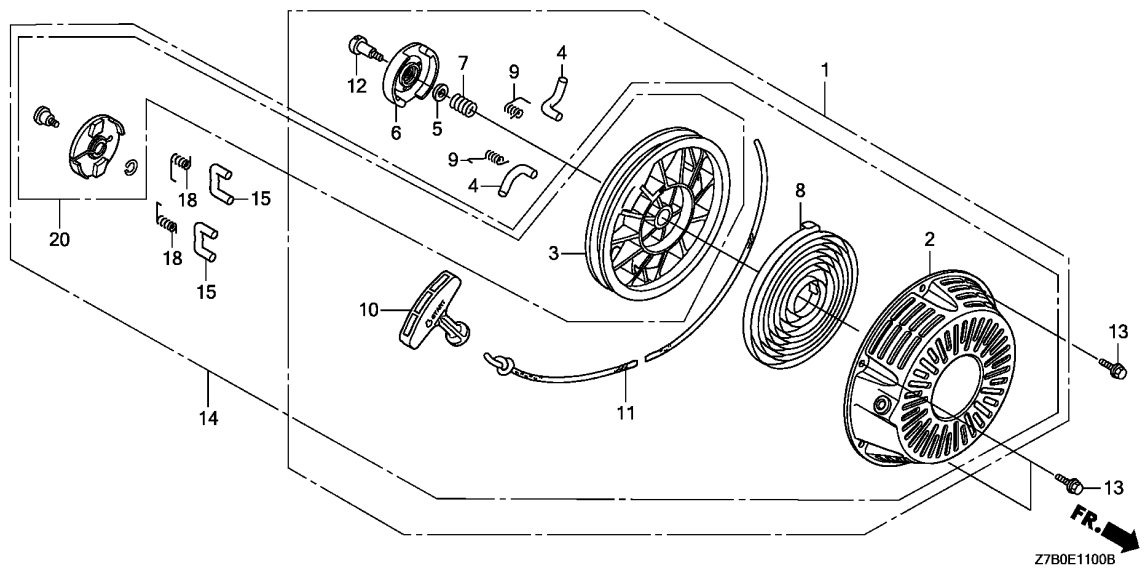


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
6	28433-Z2E-003	GUIDE, RATCHET ----------	1	-	--------	0082366 LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			1	-	0000722	0082366 VSP,VX
7	28441-Z2E-003	SPRING, FRICTION ----------	1	-	--------	0082366 LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			1	-	0000722	0082366 VSP,VX
8	28442-Z7E-003	SPRING, RECOIL STARTER ------	1	-	--------	0140283 LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VX1,VXK,VXPE,VXPR
			1	-	0000722	0140283 VSP,VX
9	28443-ZH8-801	SPRING, RETURN ----------	2	-	--------	0082366 LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			2	-	0000722	0082366 VSP,VX
10	28461-Z2E-003	GRIP, STARTER ----------	1	-	--------	0140283 LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VX1,VXK,VXPE,VXPR
			1	-	0000722	0140283 VSP,VX
11	28462-Z7B-003	ROPE, RECOIL STARTER --------	1	-	--------	0082366 LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
	28462-Z7B-701	ROPE, RECOIL STARTER (LONG TYPE)	1	-	--------	0140283 QDBR,QXBR
	28462-Z7B-003	ROPE, RECOIL STARTER --------	1	-	0000722	0082366 VSP,VX

E-11 RECOIL STARTER(1)

Ref. No.	Part No.	Description	Reqd. GX 270 H	QTY GX 270 H2	Serial No.		Parts catalogue code
11)	28462-Z7B-701	ROPE, RECOIL STARTER (LONG TYPE)	1	-	0082367	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX VX1,VXK,VXPE,VXPR
12	90003-ZH8-801	SCREW, SETTING	1	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VX1,VXK VXPE,VXPR
			1	-	0000722	0082366	VSP,VX
13	90008-Z1T-000	BOLT, FLANGE, 6X10	3	-	--------	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VX1,VXK,VXPE,VXPR
			3	-	0000722	0140283	VSP,VX
14	28400-Z7B-701ZA	STARTER ASSY., RECOIL *R280*.....POWER RED	1	-	--------	0140283	QDBR,QXBR
			1	-	0082367	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX VX1,VXK,VXPE,VXPR
	28400-Z7B-701ZB	*NH1*.....BLACK	1	-	0082367	0140283	QXHQ,SD,VSP
15	28422-Z7E-701	RATCHET, STARTER	2	-	--------	0140283	QDBR,QXBR
			2	-	0082367	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX VX1,VXK,VXPE,VXPR
18	28443-Z1T-701	SPRING, RETURN	2	-	--------	0140283	QDBR,QXBR
			2	-	0082367	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX VX1,VXK,VXPE,VXPR
20	06280-Z7B-305	STARTER SET, RECOIL	1	-	--------	0140283	QDBR,QXBR
			1	-	0082367	0140283	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4,VSP,VX VX1,VXK,VXPE,VXPR


E-11-1 RECOIL STARTER(2)

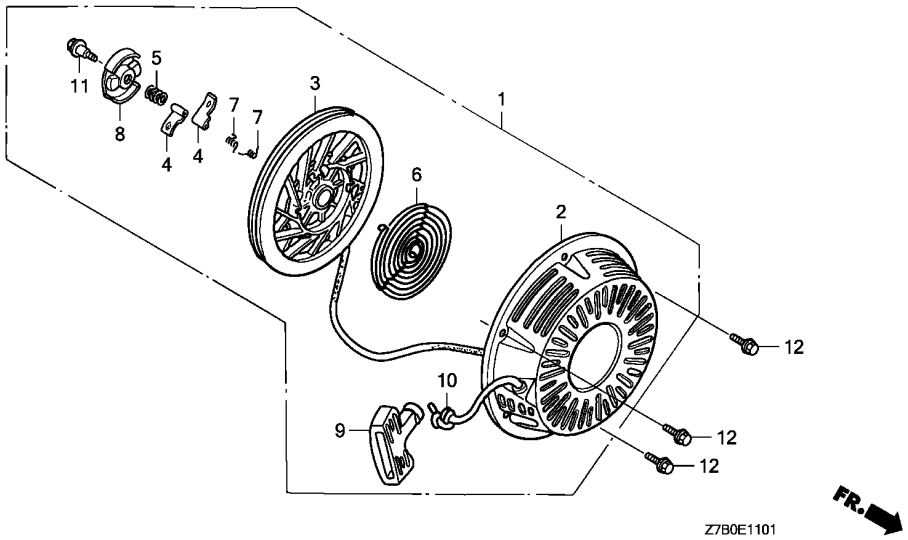

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL ----------	0.1
3	1121B1	REEL, RECOIL STARTER ---------	0.3
4		(7)	
	1121B0	STARTER RATCHET AND/OR SPRING	0.2
		.NOTE: Same time for two units	
6	1121B7	SPRING, RECOIL STARTER RETURN	0.3
8		(5)	
	1121B2	RETAINER, SPRING ----------	0.2
9	1121A3	GRIP, RECOIL STARTER ---------	0.1
10	1121B3	ROPE, RECOIL STARTER ---------	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	28400-ZE2-W01ZN	STARTER ASSY., RECOIL *R280*.....POWER RED	1	-	--------	0000721 VSP,VX
2	28410-ZE2-W01ZN	CASE COMP., RECOIL STARTER *R280*.....POWER RED	1	-	--------	0000721 VSP,VX
3	28421-ZE2-W01	PULLEY, RECOIL STARTER ------	1	-	--------	0000721 VSP,VX
4	28422-ZE2-W01	RATCHET, STARTER ----------	2	-	--------	0000721 VSP,VX
5	28441-ZE2-W01	SPRING, FRICTION ----------	1	-	--------	0000721 VSP,VX
6	28442-ZE2-W01	SPRING, STARTER RETURN ------	1	-	--------	0000721 VSP,VX
7	28443-ZE2-W01	SPRING, RATCHET ----------	2	-	--------	0000721 VSP,VX
8	28444-ZE2-W01	RETAINER, SPRING ----------	1	-	--------	0000721 VSP,VX
9	28461-ZE2-W02	GRIP, STARTER ----------	1	-	--------	0000721 VSP,VX
10	28462-ZE2-W11	ROPE, RECOIL STARTER --------	1	-	--------	0000721 VSP,VX
11	90004-ZE2-W01	SCREW, CENTER ----------	1	-	--------	0000721 VSP,VX
12	90008-ZE2-003	BOLT, FLANGE, 6X10 ----------	3	-	--------	0000721 VSP,VX


E-11-2 RECOIL STARTER(3)

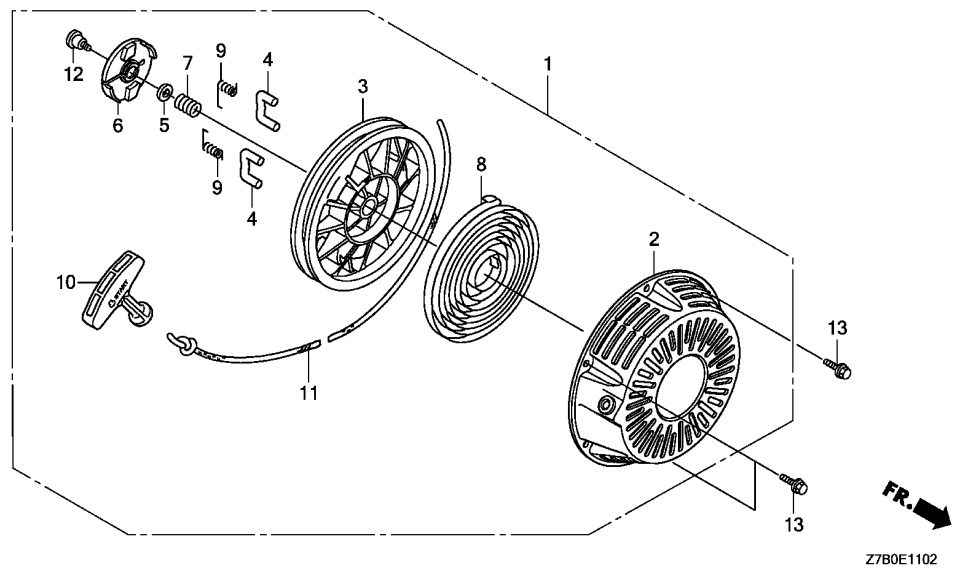

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL ----------	0.1
3	1121B1	REEL, RECOIL STARTER ---------	0.3
4		(9)	
	1121B0	STARTER RATCHET AND/OR SPRING	0.2
6		(7)	
	1121A4	GUIDE, RATCHET ----------	0.2
8	1121B7	SPRING, RECOIL STARTER RETURN	0.3
10	1121A3	GRIP, RECOIL STARTER ---------	0.1
11	1121B3	ROPE, RECOIL STARTER ---------	0.3


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	28400-Z7B-702ZA	STARTER ASSY., RECOIL					
		R280.....POWER RED	1	-	--------	--------	SH8,SHH,VXP6
			1	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	28400-Z7B-702ZB	*NH1*.....BLACK	1	-	0140284	--------	QXHQ,SD,VSP
	28400-Z7B-702ZA	*R280*.....POWER RED	-	1			
	28400-Z7B-702ZB	*NH1*.....BLACK	-	1			
2	28410-Z7B-701ZA	CASE COMP., RECOIL STARTER					
		R280.....POWER RED	1	-	--------	--------	SH8,SHH,VXP6
			1	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	28410-Z7B-701ZB	*NH1*.....BLACK	1	-	0140284	--------	QXHQ,SD,VSP
	28410-Z7B-701ZA	*R280*.....POWER RED	-	1			
	28410-Z7B-701ZB	*NH1*.....BLACK	-	1			
3	28420-Z7B-702	REEL, RECOIL STARTER(BLACK) -	1	-	--------	--------	SH8,SHH,VXP6
			1	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1			
4	28422-Z7E-701	RATCHET, STARTER -----------	2	-	--------	--------	SH8,SHH,VXP6
			2	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	2			

RECOIL STARTER(3)

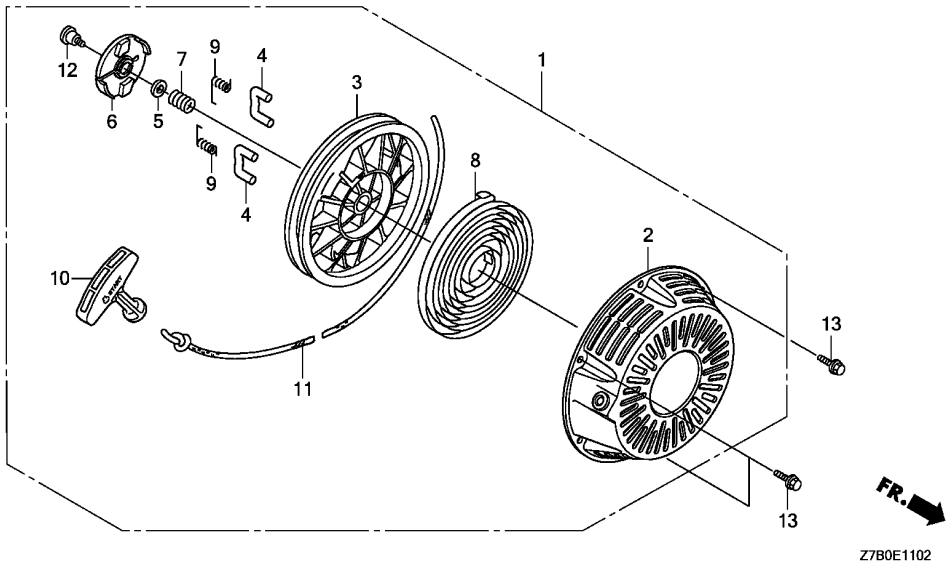


Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. QTY GX 270 H2	Serial No.	Parts catalogue code
5	28431-Z2E-003	PLATE, FRICTION ·····	1	-	-------- --------	SH8,SHH,VXP6
			1	-	0140284 --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1		
6	28433-Z7B-702	GUIDE, RATCHET ·····	1	-	-------- --------	SH8,SHH,VXP6
			1	-	0140284 --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1		
7	28441-Z2E-003	SPRING, FRICTION ·····	1	-	-------- --------	SH8,SHH,VXP6
			1	-	0140284 --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1		
8	28442-Z7E-003	SPRING, RECOIL STARTER ·····	1	-	-------- --------	SH8,SHH,VXP6
			1	-	0140284 --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1		
9	28443-Z1T-701	SPRING, RETURN ·····	2	-	-------- --------	SH8,SHH,VXP6
			2	-	0140284 --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	2		

E-11-2 RECOIL STARTER(3)

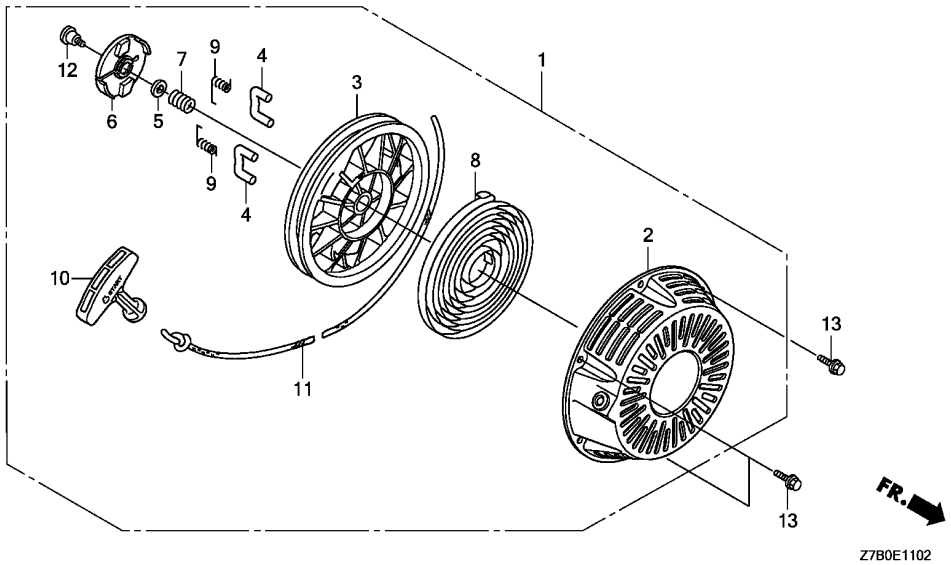

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
10	28461-Z2E-003	GRIP, STARTER	1	-	--------	--------	SH8,SHH,VXP6
			1	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1			
11	28462-Z7B-701	ROPE, RECOIL STARTER (LONG TYPE)	1	-	--------	--------	SH8,SHH,VXP6
			1	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1			
12	90003-ZH8-801	SCREW, SETTING	1	-	--------	--------	SH8,SHH,VXP6
			1	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
			-	1			
13	90008-Z1T-000	BOLT, FLANGE, 6X10	3	-	--------	--------	SH8,SHH,VXP6
			3	-	0140284	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VKK,VMT,VS4,VSD4 VSP,VX,VX1,VXK,VXPE,VXPR
	95701-06010-00	.....	-	3			


FAN COVER(1)

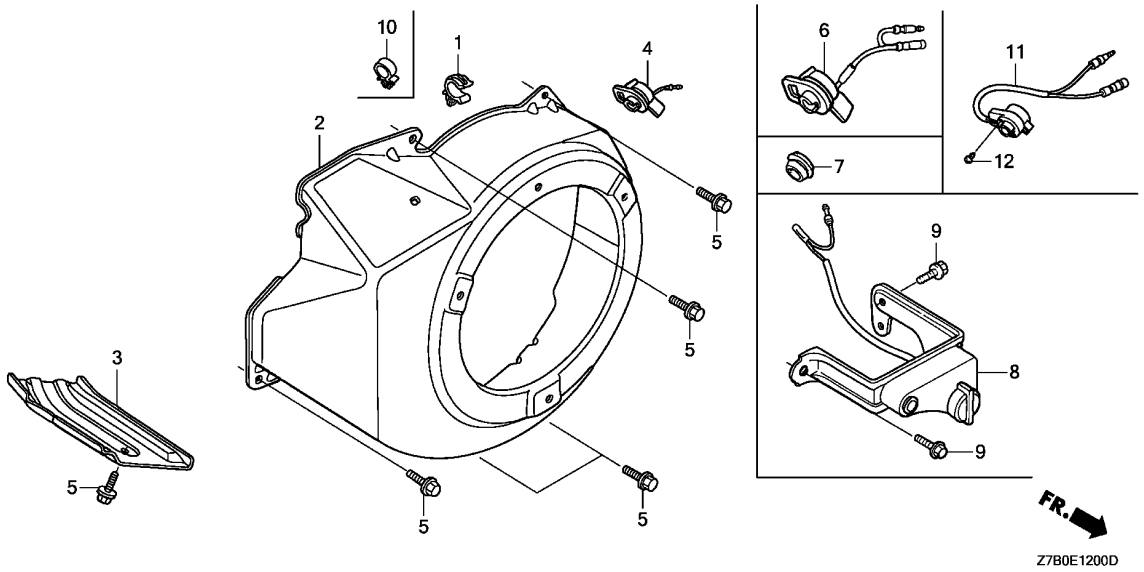

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1141G8	COVER, ENGINE COOLING FAN ----	0.2
4		(6,8,11)	
	6151D9	SWITCH, ENGINE STOP ----------	0.1


Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. QTY GX 270 H2	Serial No.		Parts catalogue code
1	16731-Z7E-000	CLIP, TUBE ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VSD4 VX1,VXK,VXP6,VXPE,VXPR
	16731-ZE2-003	----------	1	-	--------	0005027	VSP,VX
	16731-Z7E-000	----------	1	-	0005028	--------	VSP,VX
			-	1			
2	19610-Z7B-000ZA	COVER COMP., FAN					
		R280.....POWER RED	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VSD4 VX1,VXK,VXP6,VXPE,VXPR
	19610-Z7B-000ZB	*NH1*.....BLACK	1	-	--------	--------	QXHQ,SD
	19610-Z7B-D40ZA	*R280*.....POWER RED	1	-	--------	--------	VS4
	19610-ZE2-010ZL	*R280*.....POWER RED	1	-	--------	0004032	VSP,VX
	19610-Z7B-000ZB	*NH1*.....BLACK	1	-	0004033	--------	VSP
	19610-Z7B-000ZA	*R280*.....POWER RED	1	-	0004033	--------	VSP,VX
	19610-Z5K-000ZA	*NH1*.....BLACK	-	1			
	19610-Z5K-000ZC	*R280*.....POWER RED	-	1			
3	19631-ZE2-D00	SHROUD ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4 VSD4,VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
	19631-Z5K-000	----------	-	1			
4	35120-ZOD-V81	SWITCH ASSY., ENGINE STOP ---	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,QD,QD1,QDBR,QH,QHB5,QHP1,QMH,QN,QP,RD,SD,SD1,SH SH1,SH8,SHH
5	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	6	6	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4 VSD4,VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
6	36100-ZF6-P82	SWITCH ASSY., ENGINE STOP ---	1	-	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXHQ,QXK,SX,SXH,VSP,VX,VX1,VXK
7	81329-567-020	GROMMET, DRAIN HOLE ----------	1	1	--------	--------	QBE1,QHB1,QXE9,VKK,VS4,VSD4,VXP6,VXPE,VXPR

FAN COVER(1)

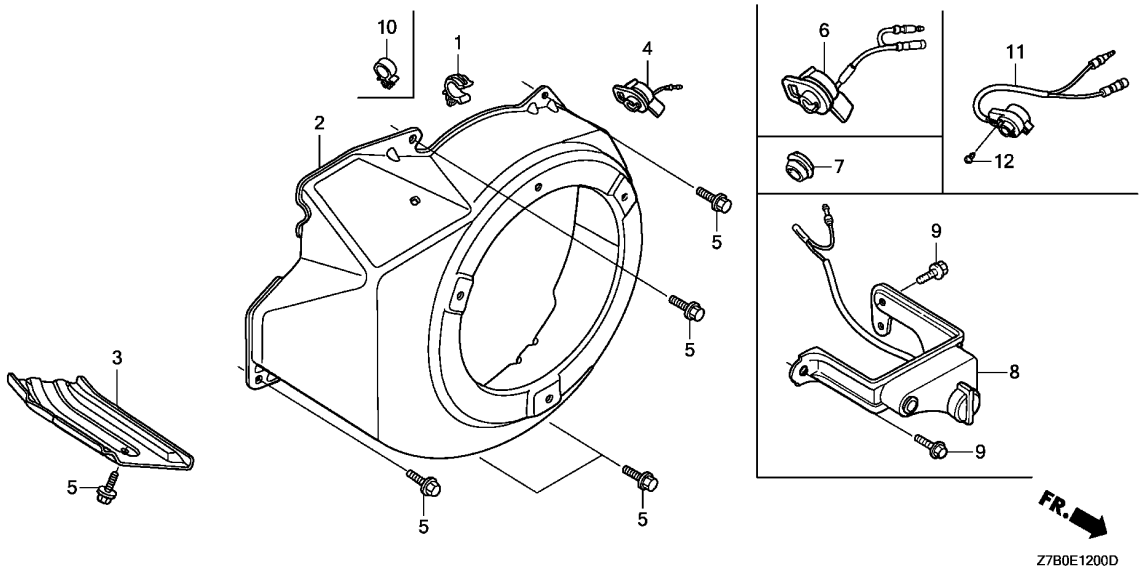

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	Reqd. QTY GX 270 H2	Serial No.	Parts catalogue code
8	36100-ZH9-V03	SWITCH ASSY., ENGINE STOP (SDMO)	1	-	-------- --------	VSD4
9	90013-883-000	BOLT, FLANGE, 6X12(CT200) ···	2	-	-------- --------	VSD4
10	90654-SA4-003	CLIP, WIRE HARNESS, 6MM(WHITE)	2	-	-------- --------	VS4
11	35120-Z7E-931	SWITCH ASSY., ENGINE STOP ···	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
12	90004-Z5T-000	SCREW, TAPPING, 3X6(PO) ·····	-	2	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1


E-12-1 FAN COVER(2)

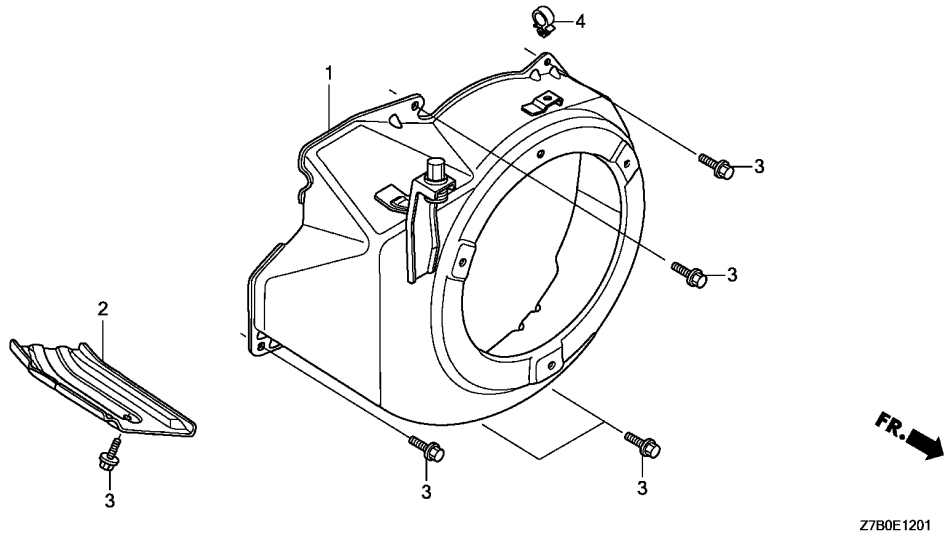

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G8	COVER, ENGINE COOLING FAN ----	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	19610-Z7B-D10ZB	COVER COMP., FAN *R280*.....POWER RED	1	-	-------- --------	VMT
2	19631-ZE2-D00	SHROUD	1	-	-------- --------	VMT
3	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	6	-	-------- --------	VMT
4	90654-SA4-003	CLIP, WIRE HARNESS, 6MM(WHITE)	2	-	-------- --------	VMT


CARBURETOR(1)

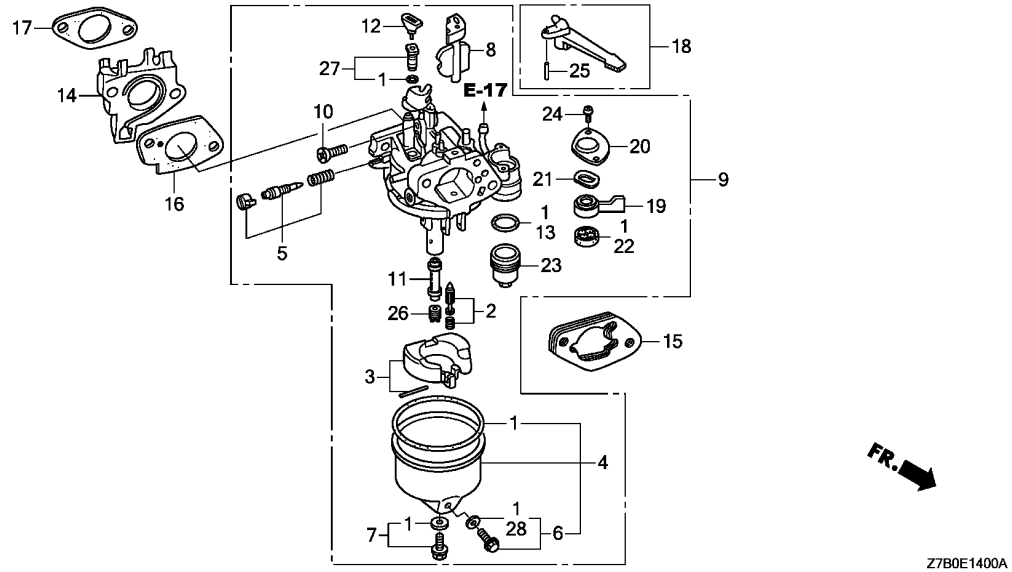

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111B1	GASKET SET, CARBURETOR -------	0.3
2		(3)	
	3111E1	FLOAT VALVE SET AND/OR FLOAT SET ----------	0.3
4	3111A3	FLOAT CHAMBER SET AND/OR GASKET ----------	0.2
5	3111D7	SCREW SET, PILOT ----------	0.2
8	8101C5	CHOKE SET, CARBURETOR -------	0.2
9	3111F3	CARBURETOR ----------	0.2
13		(23)	
	3101L6	PACKING, FUEL STRAINER CUP ---	0.2
14		(17)	
	3111C0	CARBURETOR INSULATOR AND/OR PACKING ----------	0.2
15	3111D9	SPACER, CARBURETOR ----------	0.2
16	3111C8	PACKING, CARBURETOR ----------	0.2
18	8101F9	LEVER, CARBURETOR CHOKE ------	0.2
22		(19,20,21)	
	3101C5	PACKING, FUEL COCK ----------	0.2
26		(11)	
	3111C3	JET, MAIN ----------	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	16010-ZE2-812	GASKET SET ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16010-Z7E-971	----------	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
2	16011-ZA0-931	VALVE SET, FLOAT ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
3	16013-Z1C-003	FLOAT SET ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
4	16015-ZE8-005	CHAMBER SET, FLOAT ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16015-Z7E-971	----------	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
5	16016-ZH7-W01	SCREW SET, PILOT ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH,SH1 SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
	16016-ZH8-W01	SCREW SET ----------	1	-	--------	--------	LW,QBE1,QD,QD1,QDBR,QHB1,QN,QP,QXHQ,RD,SD,SD1
	16016-ZH7-W01	SCREW SET, PILOT ----------	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
6	16024-ZE1-811	SCREW SET, DRAIN ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH,SH1 SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
	16024-Z5T-901	----------	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
7	16028-ZE0-005	SCREW SET ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16028-Z1T-WA1	----------	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
8	16044-ZE2-005	CHOKE SET ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK

E-14 CARBURETOR(1)

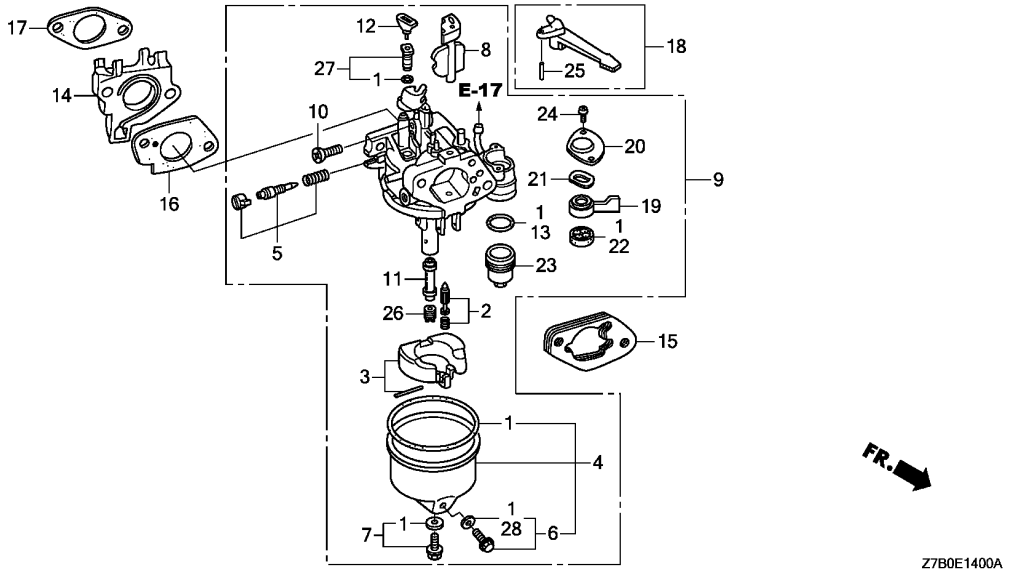


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
9	16100-Z7B-811	CARBURETOR ASSY.(BE70L A) ---	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
	16100-Z7B-821	CARBURETOR ASSY.(BE75H A) ---	1	-	--------	--------	LW,QBE1,QD,QD1,QDBR,QHB1,QN,QP,QXHQ,RD,SD,SD1
	16100-Z7C-801	CARBURETOR ASSY.(BE70M A) ---	1	-	--------	--------	QXC9,QXCK
	16100-Z7B-921	CARBURETOR ASSY.(BE75U A) ---	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
10	16124-ZE0-005	SCREW, THROTTLE STOP -------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
11	16166-ZH9-W20	NOZZLE, MAIN ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
	16166-ZH9-820	----------	1	-	--------	--------	LW,QBE1,QD,QD1,QDBR,QHB1,QN,QP,QXHQ,RD,SD,SD1
	16166-ZH9-W00	----------	1	-	--------	--------	QXC9,QXCK
	16166-Z7B-921	----------	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
12	16172-ZE3-W10	COLLAR, SETTING ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH,SH1 SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
			-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
13	16173-001-004	O-RING ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
14	16211-Z7B-010	INSULATOR, CARBURETOR -------	1	-	--------	--------	LH1,LH2,LHB5,PX,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR QXCK,QXE9,QXK,SD1,SH1,SH8,SHH,SX,VX1,VXK
	16211-Z7B-000	----------	1	-	--------	--------	SXH
	16211-ZE2-000	----------	1	-	--------	0000154	VSP,VX
	16211-Z7B-000	----------	1	-	--------	0028936	LH,LW,QD,QXC9,QXHQ,RD,SD,SH
			1	-	0000155	0028936	VSP,VX
	16211-Z7B-010	----------	1	-	0028937	--------	LH,LW,QD,QXC9,QXHQ,RD,SD,SH,VSP,VX
			-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1

E-14 CARBURETOR(1)


Ref. No.	Part No.	Description	Reqd. GX 270 H	QTY GX 270 H2	Serial No.	Parts catalogue code
15	16220-ZA0-702	SPACER COMP., CARBURETOR	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
16	16221-Z7B-701	PACKING, CARBURETOR (NINGBO SIL GASKET)	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16221-ZA0-800	PACKING, CARBURETOR	1	-	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16221-Z5K-000		-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
17	16212-Z7B-701	PACKING, INSULATOR (NINGBO SIL GASKET)	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16223-ZA0-800	PACKING, INSULATOR	1	-	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16212-Z5K-000		-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
18	16610-Z1T-000	LEVER COMP., CHOKE(STD.)	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
19	16953-ZE1-812	LEVER, COCK	1	-	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	16953-ZDK-003		-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
20	16954-ZE1-812	PLATE, LEVER SETTING	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
21	16956-ZE1-811	SPRING, COCK LEVER	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
22	16957-ZE1-812	PACKING, FUEL COCK	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
23	16967-ZE0-811	CUP, FUEL STRAINER	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
24	93500-03006-1H	SCREW, PAN, 3X6	2	2	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
25	94305-20122	PIN, SPRING, 2X12	1	1	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
26	99101-ZH8-0820	JET, MAIN, #82	(1)	-	-------- --------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
	99101-ZH8-0800	JET, MAIN, #80	(1)	-	-------- --------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
	99101-ZH8-0850	JET, MAIN, #85	1	-	-------- --------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
			(1)	-	-------- --------	LW,QBE1,QD,QD1,QDBR,QHB1,QN,QP,QXHQ,RD,SD,SD1
	99101-ZH8-0880	JET, MAIN, #88	1	-	-------- --------	LW,QBE1,QD,QD1,QDBR,QHB1,QN,QP,QXHQ,RD,SD,SD1
			(1)	-	-------- --------	QXC9,QXCK
	99101-ZH8-0900	JET, MAIN, #90	(1)	-	-------- --------	QXC9,QXCK
	99101-ZH8-0920	JET, MAIN, #92	1	-	-------- --------	QXC9,QXCK

CARBURETOR(1)

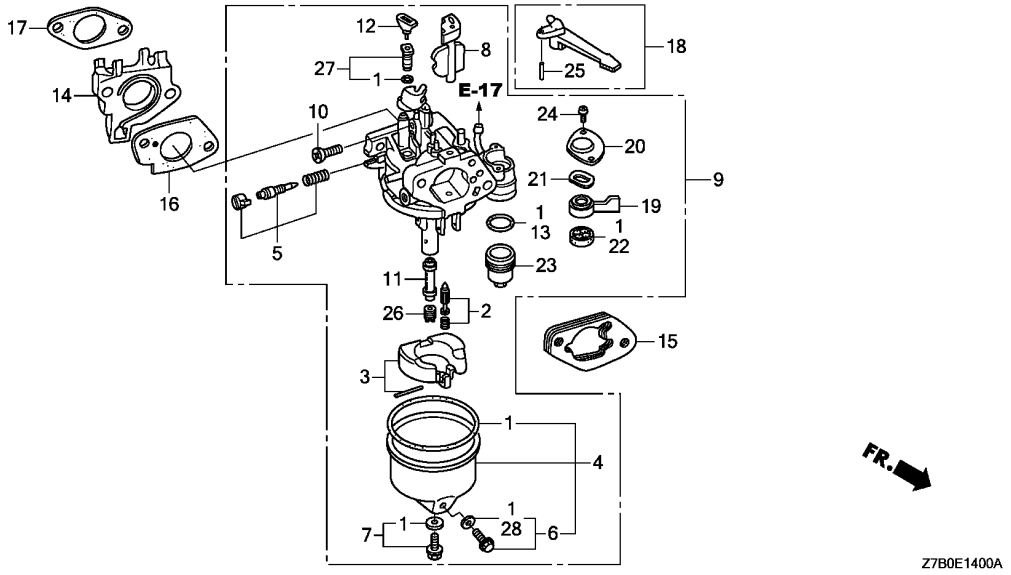

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
26)	99101-ZDK-0820	JET, MAIN, #82	-	(1)	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
	99101-ZDK-0850	JET, MAIN, #85	-	(1)	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
	99101-ZDK-0880	JET, MAIN, #88	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
27	99204-ZE2-0400	JET SET, PILOT, #40	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	99204-ZE0-0380	JET SET, PILOT, #38	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
28	16141-ZOS-003	WASHER, PLAIN(6.2X10.7 DRAIN)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK


E-14-1 CARBURETOR(2)

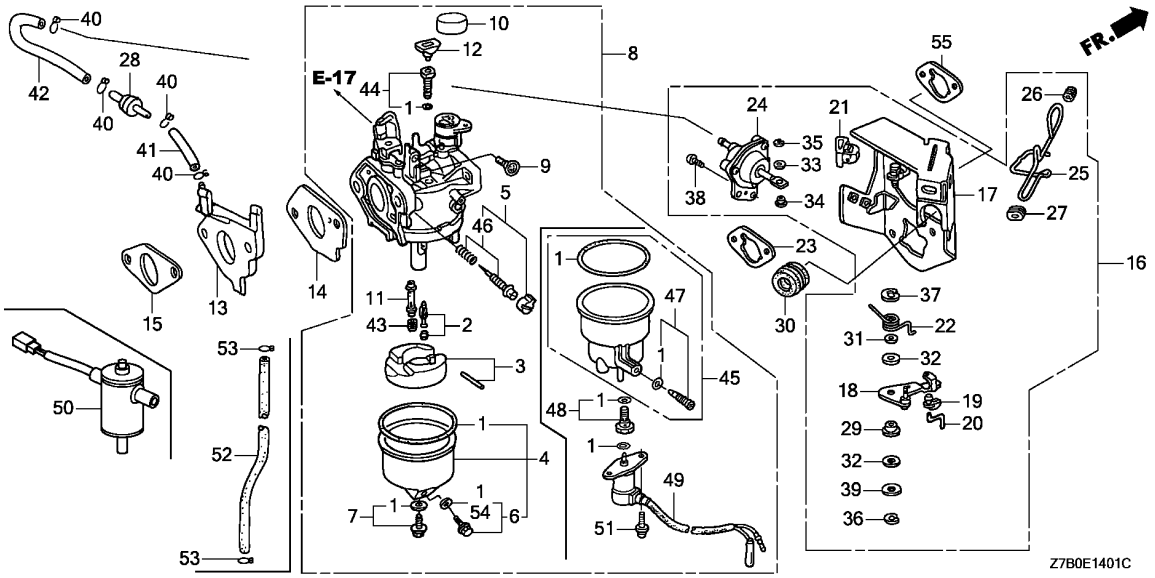

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111G1	GASKET SET, CARBURETOR(A) ····	0.4
2		(3)	
	3111G6	FLOAT VALVE SET AND/OR FLOAT SET(A) ·····	0.4
4		(45)	
	3111M2	FLOAT CHAMBER SET AND/OR GASKET(A) ·····	0.3
5	3111D7	SCREW SET, PILOT ·····	0.2
8	3111G7	CARBURETOR(A) ·····	0.3
13		(15)	
	3111G2	CARBURETOR INSULATOR AND/OR PACKING(A) ·····	0.3
14	3111G5	PACKING, CARBURETOR(A) ·····	0.3
16	81101R1	STAY, MANUAL CHOKE ·····	0.2
18	81101Z6	LEVER, CARBURETOR CHOKE(A) ···	0.3
23		(55)	
	3121D9	PACKING, AIR CLEANER ·····	0.2
	3121D9A	.Replace carburetor side add ·	0.1
24	3111A7	DIAPHRAGM, CARBURETOR ·····	0.3
28	311175	VALVE, DASHPOT CHECK ·····	0.1
43		(11)	
	3111G4	JET, MAIN(A) ·····	0.4
49	6211C0	VALVE, CARBURETOR SOLENOID ···	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	16010-ZE3-701	GASKET SET ·····	1	-	-------- --------	VKK,VMT,VS4
	16010-ZF5-900	·····	1	-	-------- --------	VSD4,VXP6,VXPE,VXPR
	16010-Z7B-931	·····	-	1	-------- --------	VXP6,VXPR
2	16011-ZA0-931	VALVE SET, FLOAT ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
3	16013-Z1C-003	FLOAT SET ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
4	16015-ZE8-005	CHAMBER SET, FLOAT ·····	1	-	-------- --------	VSD4,VXP6,VXPE,VXPR
	16015-Z7E-971	·····	-	1	-------- --------	VXP6,VXPR
5	16016-ZH8-W01	SCREW SET ·····	1	-	-------- --------	VKK,VXP6,VXPE,VXPR
	16016-Z1E-V21	·····	-	1	-------- --------	VXP6,VXPR
6	16024-ZE1-811	SCREW SET, DRAIN ·····	1	-	-------- --------	VSD4,VXP6,VXPE,VXPR
	16024-Z5T-901	·····	-	1	-------- --------	VXP6,VXPR
7	16028-ZE0-005	SCREW SET ·····	1	-	-------- --------	VSD4,VXP6,VXPE,VXPR
	16028-Z1T-WA1	·····	-	1	-------- --------	VXP6,VXPR
8	16100-Z7B-V11	CARBURETOR ASSY.(BE98H A) ···	1	-	-------- --------	VKK
	16100-Z7B-D41	CARBURETOR ASSY.(BE98F A) ···	1	-	-------- --------	VMT,VS4
	16100-Z7B-V01	CARBURETOR ASSY.(BE98G A) ···	1	-	-------- --------	VSD4
	16100-Z5K-V01	CARBURETOR ASSY.(BE77V A) ···	1	-	-------- --------	VXP6,VXPE,VXPR
	16100-Z7B-931	CARBURETOR ASSY.(BE98N A) ···	-	1	-------- --------	VXP6,VXPR
9	16124-ZE0-005	SCREW, THROTTLE STOP ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
10	16148-141-881	CAP, CHOKE DUST ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
11	16166-ZH9-820	NOZZLE, MAIN ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
12	16172-ZE3-W10	COLLAR, SETTING ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
13	16211-Z7B-700	INSULATOR, CARBURETOR ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4
	16211-ZE2-701	·····	1	-	-------- --------	VXP6,VXPE,VXPR
	16211-Z7B-700	·····	-	1	-------- --------	VXP6,VXPR
14	16221-Z7B-701	PACKING, CARBURETOR (NINGBO SIL GASKET)	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR

E-14-1 CARBURETOR(2)

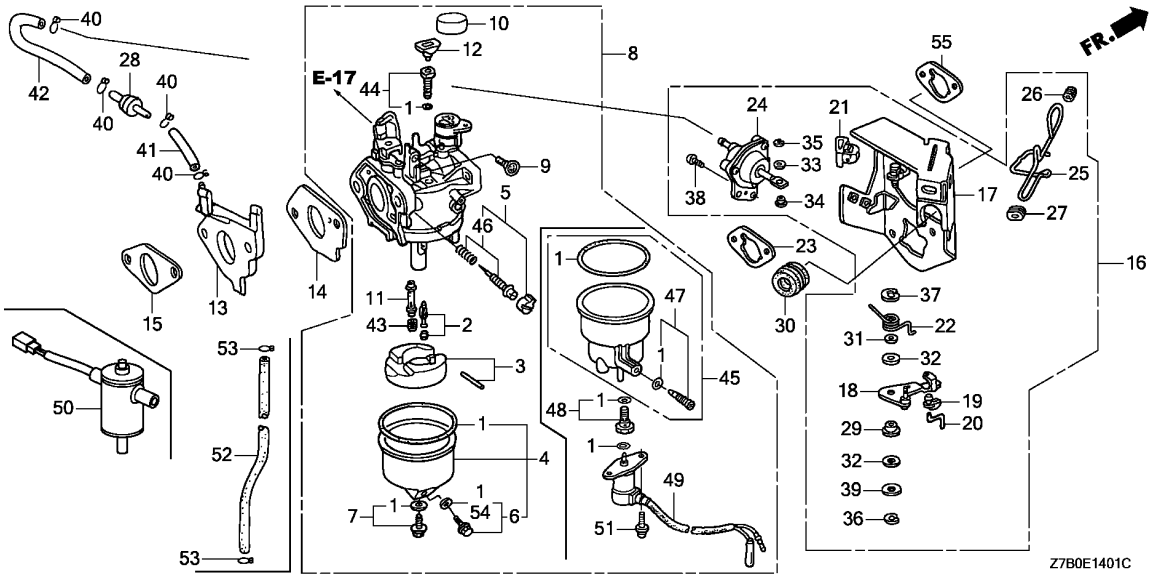


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
14)	16221-ZA0-800	PACKING, CARBURETOR ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	16221-Z5K-000	·····	-	1	-------- --------	VXP6,VXPR
15	16212-Z7B-701	PACKING, INSULATOR (NINGBO SIL GASKET)	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	16223-ZA0-800	PACKING, INSULATOR ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	16212-Z5K-000	·····	-	1	-------- --------	VXP6,VXPR
16	16260-Z7E-000	STAY ASSY., MANUAL CHOKE ····	1	1	-------- --------	VXP6,VXPE,VXPR
	16260-Z7E-800	·····	1	-	-------- --------	VKK,VMT,VS4,VSD4
17	16261-ZE2-702	STAY COMP., SOLENOID ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
18	16262-ZE2-711	LEVER, CHOKE ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
19	16263-Z7B-000	JOINT, ROD ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
20	16264-ZE2-701	ROD, CHOKE ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
21	16265-Z7E-000	STOPPER, CHOKE ROD ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
22	16268-ZE2-721	SPRING, MANUAL CHOKE ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
23	17228-Z5T-000	PACKING, AIR CLEANER ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
24	16400-ZE2-704	DIAPHRAGM ASSY. ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
25	16611-ZE3-D21	ROD, CHOKE CONTROL ·····	1	1	-------- --------	VXP6,VXPE,VXPR
	16611-ZE2-711	·····	1	-	-------- --------	VKK,VMT,VS4,VSD4
26	16613-893-000	GROMMET, CHOKE ROD ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
27	16615-893-000	GUIDE, CHOKE ROD ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
28	36135-ZF6-D41	VALVE, DASHPOT CHECK ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
29	53149-964-003	BUSH, ARM PIVOT ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
30	88911-MJ3-000	GROMMET, FENDER ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
31	90431-ZE2-700	WASHER, CHOKE LEVER ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
32	90432-ZE2-700	SEAL, CHOKE LEVER ·····	2	2	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR

E-14-1 CARBURETOR(2)

Ref. No.	Part No.	Description	Reqd. GX 270 H	QTY GX 270 H2	Serial No.	Parts catalogue code
33	90433-ZE2-700	WASHER, THRUST, 2.7X8 ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
34	90434-ZE2-700	COLLAR, LEVER ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
35	90601-Z7E-000	E-RING, 2MM ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
36	90602-Z7E-000	E-RING, 4MM ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
37	90603-Z7E-000	E-RING, 7MM ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
38	93500-05012-0A	SCREW, PAN, 5X12 ·····	2	2	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
39	94103-05000	WASHER, PLAIN, 5MM ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
40	95002-02070	CLIP, TUBE(B7) ·····	4	4	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
41	95005-35055-10	TUBE, 3.5X55(95005-35001-10M)	1	1	-------- --------	VKK,VSD4,VXP6,VXPE,VXPR
	95005-35065-10	TUBE, 3.5X65(95005-35001-10M)	1	-	-------- --------	VMT,VS4
42	95005-35075-10	TUBE, 3.5X75(95005-35001-10M)	1	1	-------- --------	VKK,VSD4,VXP6,VXPE,VXPR
	95005-35130-10	TUBE, 3.5X130(95005-35001-10M)	1	-	-------- --------	VMT,VS4
43	99101-ZH8-0880	JET, MAIN, #88 ·····	(1)	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	99101-ZH8-0900	JET, MAIN, #90 ·····	(1)	-	-------- --------	VKK,VSD4,VXP6,VXPE,VXPR
	99101-ZH8-0920	JET, MAIN, #92 ·····	1	-	-------- --------	VKK,VSD4,VXP6,VXPE,VXPR
	99101-ZH8-0850	JET, MAIN, #85 ·····	(1)	-	-------- --------	VMT,VS4
	99101-ZH8-0900	JET, MAIN, #90 ·····	1	-	-------- --------	VMT,VS4
	99101-ZDK-0880	JET, MAIN, #88 ·····	-	(1)	-------- --------	VXP6,VXPR
	99101-ZDK-0900	JET, MAIN, #90 ·····	-	(1)	-------- --------	VXP6,VXPR
	99101-ZDK-0920	JET, MAIN, #92 ·····	-	1	-------- --------	VXP6,VXPR
44	99204-ZE2-0400	JET SET, PILOT, #40 ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
45	16015-ZA0-931	CHAMBER SET, FLOAT ·····	1	-	-------- --------	VKK,VMT,VS4
46	16016-ZA0-931	SCREW SET, PILOT ·····	1	-	-------- --------	VMT,VS4,VSD4
47	16024-124-760	SCREW SET, DRAIN ·····	1	-	-------- --------	VKK,VMT,VS4
48	16028-ZA0-931	SCREW SET ·····	1	-	-------- --------	VKK,VMT,VS4
49	16230-ZE3-702	VALVE ASSY., SOLENOID ·····	1	-	-------- --------	VKK,VMT,VS4
50	36170-ZB4-013	VALVE ASSY., SOLENOID ·····	1	-	-------- --------	VKK
51	93892-05012-18	SCREW-WASHER, 5X12 ·····	2	-	-------- --------	VKK,VMT,VS4
52	95001-45250-40	TUBE, FUEL, 4.5X250 (95001-45001-60M)	1	-	-------- --------	VMT
	95001-45150-40	TUBE, FUEL, 4.5X150 (95001-45001-60M)	1	-	-------- --------	VS4
53	95002-02080	CLIP, TUBE(B8) ·····	2	-	-------- --------	VMT,VS4
54	16141-Z0S-003	WASHER, PLAIN(6.2X10.7 DRAIN)	1	1	-------- --------	VSD4,VXP6,VXPE,VXPR
55	17228-Z5T-000	PACKING, AIR CLEANER ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	16220-ZA0-702	SPACER COMP., CARBURETOR ····	-	1	-------- --------	VXP6,VXPR


E-15 AIR CLEANER(SEMI DRY)

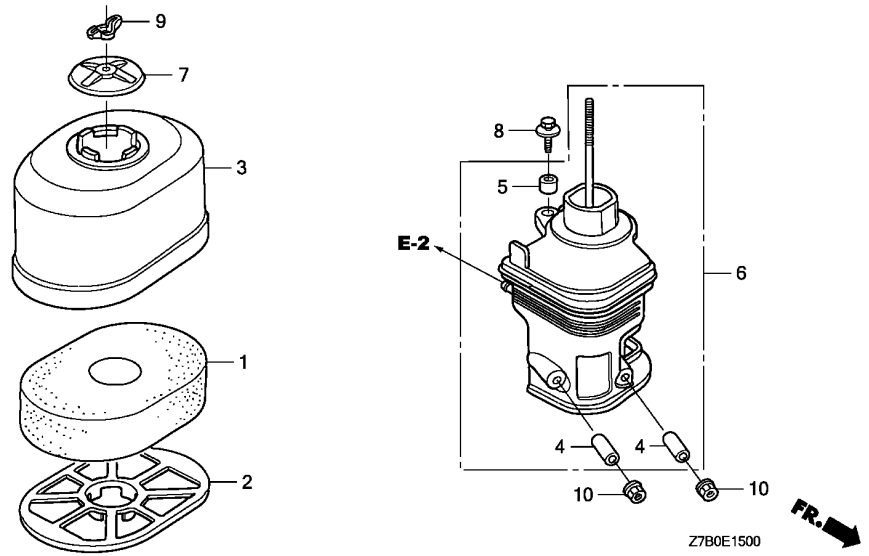

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2)	
	3121B8	ELEMENT, AIR CLEANER ·····	0.1
		.INCLUDES: Air cleaner element -inspection	
6	3121B4	ELBOW, AIR CLEANER ·····	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	17211-ZE2-000	ELEMENT, AIR CLEANER(SEMI DRY)	1	-	-------- --------	QD,QXHQ,SD
	17211-Z7B-003	·····	1	-	-------- --------	QD1,QDBR,QN,SD1
	17211-ZE2-000	·····	1	-	-------- 0038832	RD
	17211-Z7B-003	·····	1	-	0038833 --------	RD
2	17212-ZE2-000	GRID, AIR CLEANER ·····	1	-	-------- --------	QD,QXHQ,SD
			1	-	-------- 0038832	RD
	17212-Z7B-003	·····	1	-	0038833 --------	QD1,QDBR,QN,RD,SD1
3	17231-ZE2-000	COVER, AIR CLEANER(SEMI DRY)	1	-	-------- --------	QD,QXHQ,SD
			1	-	-------- 0038832	RD
	17231-Z7B-003	·····	1	-	0038833 --------	QD1,QDBR,QN,RD,SD1
4	17238-ZE2-310	COLLAR, AIR CLEANER ·····	2	-	-------- --------	QD,QXHQ,SD
			2	-	-------- 0038832	RD
	17238-Z7B-003	·····	2	-	0038833 --------	QD1,QDBR,QN,RD,SD1
5	17239-ZE1-000	COLLAR B, AIR CLEANER ·····	1	-	-------- --------	QD,QXHQ,SD
			1	-	-------- 0038832	RD
	17239-Z1T-601	COLLAR B, AIR CLEANER (ZHEJIANG HENGBO)	1	-	0038833 --------	QD1,QDBR,QN,RD,SD1
6	17410-ZE2-020	ELBOW COMP., AIR CLEANER ····	1	-	-------- --------	QD,QXHQ,SD
			1	-	-------- 0038832	RD
	17410-Z7B-003	·····	1	-	-------- 0134466	QD1,QDBR,QN,SD1
			1	-	0038833 0134466	RD
	17410-Z7B-013	·····	1	-	0134467 --------	QD1,QDBR,QN,RD,SD1
7	17420-ZE2-000	CAP COMP., AIR CLEANER ·····	1	-	-------- --------	QD,QXHQ,SD
			1	-	-------- 0038832	RD
	17421-Z7B-003	CAP, AIR CLEANER ·····	1	-	0038833 --------	QD1,QDBR,QN,RD,SD1
8	90009-ZE2-003	BOLT-WASHER, 6X22 ·····	1	-	-------- --------	QD,QXHQ,RD,SD
	90009-Z1C-000	·····	1	-	-------- --------	QD1,QDBR,QN,SD1

E-15 AIR CLEANER(SEMI DRY)

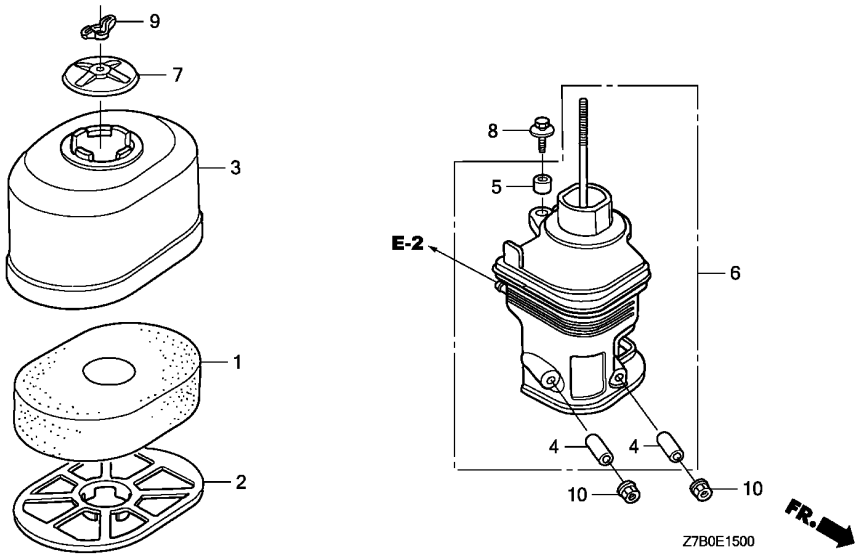

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
9	90325-044-000	NUT, TOOL BOX SETTING -------	1	-	-------- --------	QD,QXHQ,SD
			1	-	-------- 0038832	RD
	90201-Z1T-601	NUT, TOOL BOX SETTING (ZHEJIANG HENGBO)	1	-	0038833 --------	QD1,QDBR,QN,RD,SD1
10	94050-06000	NUT, FLANGE, 6MM ----------	2	-	-------- --------	QD,QD1,QDBR,QN,QXHQ,RD,SD,SD1


E-15-1 AIR CLEANER(OIL BATH)

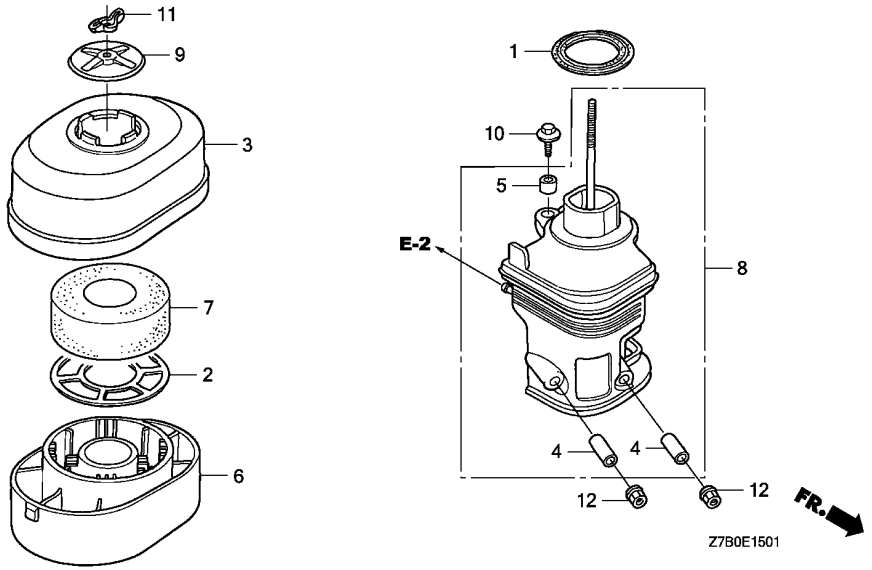

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW ----------	0.1
6	3121E5	PAN, AIR CLEANER OIL ----------	0.1
7		(2)	
	3121B8	ELEMENT, AIR CLEANER ----------	0.1
		.INCLUDES: Air cleaner element -inspection	
8	3121B4	ELBOW, AIR CLEANER ----------	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	16271-ZE2-010	PACKING, ELBOW ----------	1	-	-------- --------	LW,QBE1,QHB1,QP
2	17212-ZE2-810	GRID, AIR CLEANER(OIL BATH) -	1	-	-------- --------	LW,QBE1,QHB1,QP
3	17231-ZE2-810	COVER, AIR CLEANER(OIL BATH)	1	-	-------- --------	LW,QBE1,QHB1,QP
4	17238-ZE2-310	COLLAR, AIR CLEANER ----------	2	-	-------- --------	LW,QBE1,QHB1,QP
5	17239-ZE1-000	COLLAR B, AIR CLEANER -------	1	-	-------- --------	LW,QBE1,QHB1,QP
6	17402-ZE2-810	PAN, CLEANER OIL(OIL BATH) --	1	-	-------- --------	LW,QBE1,QHB1,QP
7	17403-ZE2-810	ELEMENT, AIR CLEANER(OIL BATH)	1	-	-------- --------	LW,QBE1,QHB1,QP
8	17410-ZE2-020	ELBOW COMP., AIR CLEANER ----	1	-	-------- 0124836	LW,QBE1,QHB1,QP
	17410-ZE2-030	----------	1	-	0124837 --------	LW,QBE1,QHB1,QP
9	17420-ZE2-000	CAP COMP., AIR CLEANER ------	1	-	-------- --------	LW,QBE1,QHB1,QP
10	90009-ZE2-003	BOLT-WASHER, 6X22 ----------	1	-	-------- --------	LW
	90009-Z1C-000	----------	1	-	-------- --------	QBE1,QHB1,QP
11	90325-044-000	NUT, TOOL BOX SETTING -------	1	-	-------- --------	LW,QBE1,QHB1,QP
12	94050-06000	NUT, FLANGE, 6MM ----------	2	-	-------- --------	LW,QBE1,QHB1,QP


E-15-2 AIR CLEANER(DUAL)

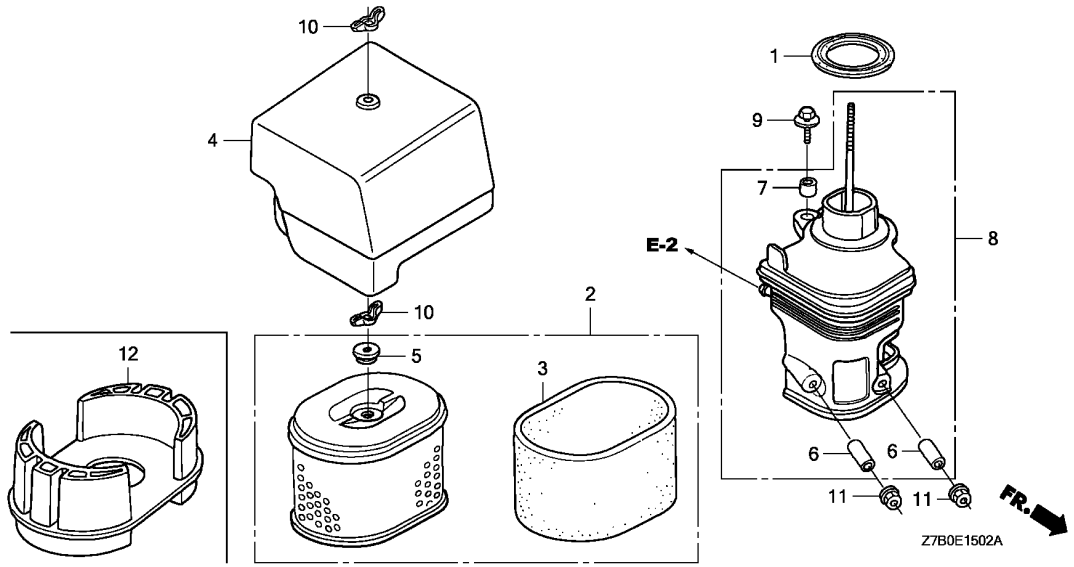

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW ·····	0.1
2	3121B8	ELEMENT, AIR CLEANER ·····	0.1
		.INCLUDES: Air cleaner element -inspection	
3	3121C1	FILTER, OUTER ·····	0.1
		.INCLUDES: Outer filter-inspection	
8	3121B4	ELBOW, AIR CLEANER ·····	0.1
12	3121D6	NOSE, SILENCER ·····	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	16271-ZE2-010	PACKING, ELBOW ·····	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
2	17210-ZE2-822	ELEMENT, AIR CLEANER(DUAL) ··	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
3	17218-ZE2-821	FILTER, OUTER ·····	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
4	17231-ZH9-820	COVER, AIR CLEANER ·····	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
5	17232-891-000	GROMMET, AIR CLEANER ·····	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
6	17238-ZE2-310	COLLAR, AIR CLEANER ·····	2	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
7	17239-ZE1-000	COLLAR B, AIR CLEANER ·····	1	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
8	17410-ZE2-030	ELBOW COMP., AIR CLEANER ····	1	-	--------	--------	SH8,SHH
	17410-ZE2-020	·····	1	-	--------	0123371	LH,LH1,LH2,LHB5,QH,QHB5,QHP1,QMH,SH,SH1,SXH
			1	-	--------	0136755	PX,QX,QXBR,QXE9,QXK,SX,VSP,VX,VX1,VXK
	17410-ZE2-030	·····	1	-	0123372	--------	LH,LH1,LH2,LHB5,QH,QHB5,QHP1,QMH,SH,SH1,SXH
			1	-	0136756	--------	PX,QX,QXBR,QXE9,QXK,SX,VSP,VX,VX1,VXK
9	90009-ZE2-003	BOLT-WASHER, 6X22 ·····	1	-	--------	--------	LH,SH,SH8,SHH,SXH,VX
	90009-Z1C-000	·····	1	-	--------	--------	LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH1,SX,VX1,VXK
			1	-	--------	0000036	VSP
	90009-ZE2-003	·····	1	-	0000037	--------	VSP
10	90325-044-000	NUT, TOOL BOX SETTING ·····	2	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
11	94050-06000	NUT, FLANGE, 6MM ·····	2	-	--------	--------	LH,LH1,LH2,LHB5,PX,QH,QHB5,QHP1,QMH,QX,QXBR,QXE9,QXK,SH,SH1,SH8,SHH SX,SXH,VSP,VX,VX1,VXK
12	17235-ZE2-820	NOSE, SILENCER ·····	1	-	--------	--------	PX,QX,QXBR,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK


E-15-3 AIR CLEANER(CYCLONE)

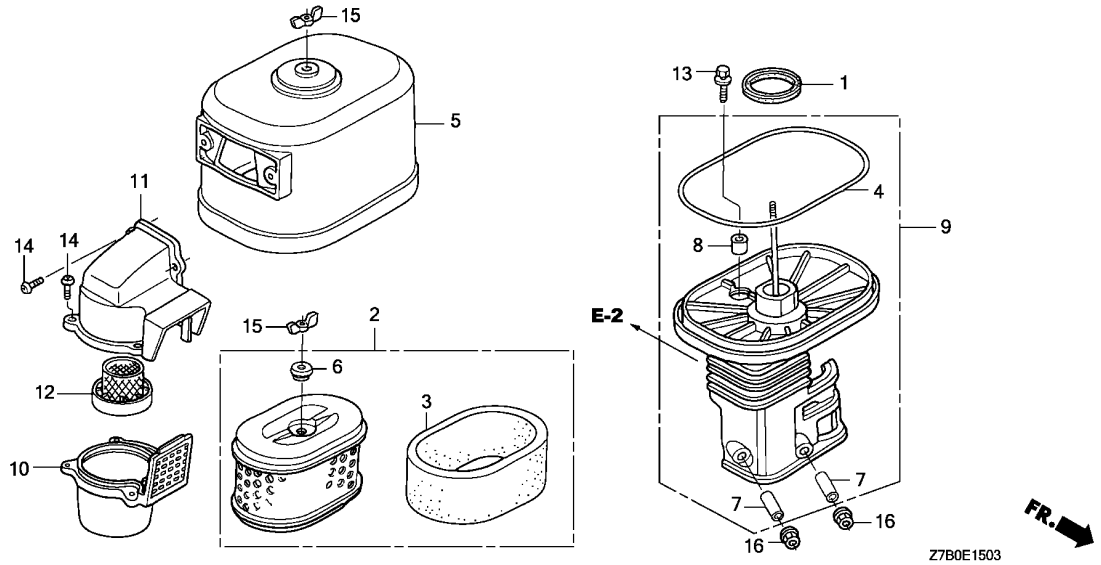

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER .INCLUDES: Air cleaner element -inspection	0.1
3	3121C1	FILTER, OUTER .INCLUDES: Outer filter-inspection	0.1
9	3121B4	ELBOW, AIR CLEANER	0.1
10	3121A6	CASE, PRE AIR CLEANER	0.1
11	3121A4	CAP, PRE AIR CLEANER	0.1
12	3121C8	GUIDE, PRE AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	16271-ZE2-010	PACKING, ELBOW	1	-	-------- --------	QXC9,QXCK
2	17210-ZE3-010	ELEMENT, AIR CLEANER	1	-	-------- --------	QXC9,QXCK
3	17218-ZE3-000	FILTER, OUTER	1	-	-------- --------	QXC9,QXCK
4	17219-ZE3-840	PACKING, AIR CLEANER COVER	1	-	-------- --------	QXC9,QXCK
5	17230-ZE3-841	COVER COMP., AIR CLEANER (CYCLONE)	1	-	-------- --------	QXC9,QXCK
6	17232-891-000	GROMMET, AIR CLEANER	1	-	-------- --------	QXC9,QXCK
7	17238-ZE2-310	COLLAR, AIR CLEANER	2	-	-------- --------	QXC9,QXCK
8	17239-ZE3-840	COLLAR B, AIR CLEANER	1	-	-------- --------	QXC9,QXCK
9	17410-ZE3-841	ELBOW COMP., AIR CLEANER	1	-	-------- --------	QXC9,QXCK
10	17470-ZE3-842	CASE COMP., PRE AIR CLEANER	1	-	-------- --------	QXC9,QXCK
11	17475-ZE3-841	CAP, PRE AIR CLEANER	1	-	-------- --------	QXC9,QXCK
12	17476-ZE3-841	GUIDE, PRE AIR CLEANER	1	-	-------- --------	QXC9,QXCK
13	90009-ZE2-003	BOLT-WASHER, 6X22	1	-	-------- --------	QXC9
	90009-Z1C-000		1	-	-------- --------	QXCK
14	90142-MB0-000	SCREW, PAN, 5X16.5	5	-	-------- --------	QXC9,QXCK
15	90325-044-000	NUT, TOOL BOX SETTING	2	-	-------- --------	QXC9,QXCK
16	94050-06000	NUT, FLANGE, 6MM	2	-	-------- --------	QXC9,QXCK


E-15-4 AIR CLEANER(STANDARD)

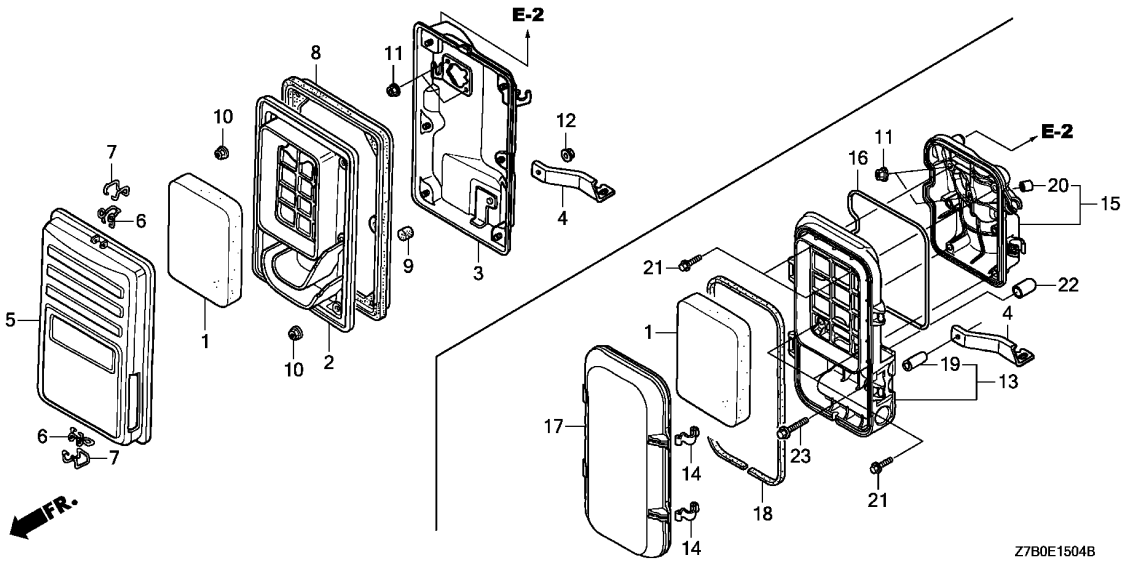

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121B8	ELEMENT, AIR CLEANER ·····	0.1
		.INCLUDES: Air cleaner element -inspection	
2	3121F0	SEPARATOR, AIR CLEANER ·····	0.1
3		(13)	
	3121A5	CASE, AIR CLEANER ·····	0.2
8	3121E8	SEAL, AIR CLEANER CASE ·····	0.1
15	3121Q0	BASE, AIR CLEANER ·····	0.2
16	3121R4	SEAL, AIR CLEANER CASE(A) ····	0.2
18	3121E9	SEAL, AIR CLEANER COVER ·····	0.1

Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. GX 270 H2	Serial No.	Parts catalogue code
1	17211-899-000	ELEMENT, AIR CLEANER ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
2	17212-ZB4-003	SEPARATOR, AIR CLEANER ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
3	17220-ZB4-013	CASE COMP., AIR CLEANER ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
4	17222-ZB4-000	STAY, AIR CLEANER ·····	1	1	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	17222-Z21-F60	·····	-	1	-------- --------	VXP6,VXPR
5	17231-899-000	COVER COMP., AIR CLEANER ····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
6	17235-899-000	CLIP A, AIR CLEANER WIRE ····	2	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
7	17236-899-000	CLIP B, AIR CLEANER WIRE ····	2	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
8	17252-899-000	SEAL, AIR CLEANER ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
9	17367-413-690	FILTER, DRAIN TUBE ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
10	94050-05000	NUT, FLANGE, 5MM ·····	6	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
11	94050-06000	NUT, FLANGE, 6MM ·····	2	2	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
12	94050-06080	NUT, FLANGE, 6MM ·····	1	-	-------- --------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
13	17220-Z23-S30	CASE COMP., AIR CLEANER ·····	-	1	-------- --------	VXP6,VXPR
14	17223-Z23-000	SPRING, AIR CLEANER CASE LID	-	2	-------- --------	VXP6,VXPR
15	17223-ZBH-000	BASE COMP., AIR CLEANER ·····	-	1	-------- --------	VXP6,VXPR
16	17229-Z23-H60	SEAL, AIR CLEANER CASE ·····	-	1	-------- --------	VXP6,VXPR
17	17231-ZBH-000	COVER, AIR CLEANER ·····	-	1	-------- --------	VXP6,VXPR
18	17233-Z23-H60	SEAL, AIR CLEANER COVER ·····	-	1	-------- --------	VXP6,VXPR
19	17238-ZE7-710	COLLAR, AIR CLEANER ·····	-	1	-------- --------	VXP6,VXPR
20	17238-ZG9-M00	COLLAR, AIR CLEANER ·····	-	2	-------- --------	VXP6,VXPR
21	90005-ZM3-000	BOLT, FLANGE, 5X18 ·····	-	4	-------- --------	VXP6,VXPR
22	90802-Z6L-000	CAP, SEALING ·····	-	1	-------- --------	VXP6,VXPR
23	95701-06032-08	BOLT, FLANGE, 6X32 ·····	-	1	-------- --------	VXP6,VXPR


E-15-5 AIR CLEANER(SILENT)

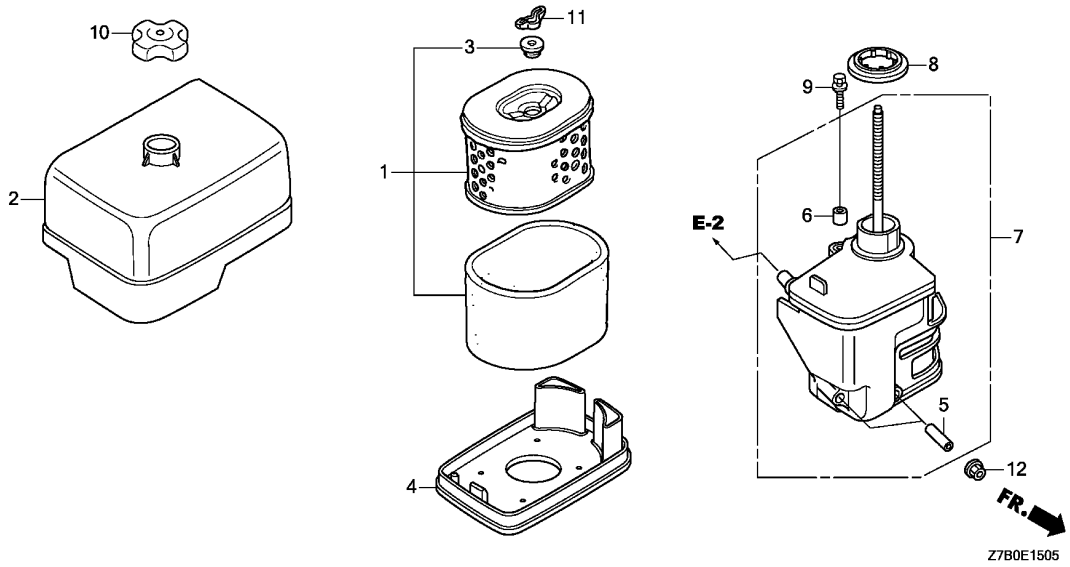

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121B8	ELEMENT, AIR CLEANER ·····	0.1
		.INCLUDES: Air cleaner element -inspection	
4	3121D6	NOSE, SILENCER ·····	0.1
7	3121B4	ELBOW, AIR CLEANER ·····	0.1
8	3121R3	PACKING, AIR CLEANER CASE ····	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	17210-Z7B-931	ELEMENT, AIR CLEANER ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
2	17231-Z7B-930	COVER, AIR CLEANER ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
3	17232-Z1V-601	GROMMET, AIR CLEANER ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
4	17235-Z7B-930	NOSE, SILENCER ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
5	17238-Z7B-003	COLLAR, AIR CLEANER ·····	-	2	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
6	17239-Z1T-601	COLLAR B, AIR CLEANER (ZHEJIANG HENGBO)	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
7	17410-Z7B-930	ELBOW COMP., AIR CLEANER ····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
8	17417-Z5T-000	PACKING, AIR CLEANER CASE ···	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
9	90009-Z1C-000	BOLT-WASHER, 6X22 ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
10	90202-Z2E-000	NUT, AIR CLEANER COVER ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
11	90325-044-000	NUT, TOOL BOX SETTING ·····	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
12	94050-06000	NUT, FLANGE, 6MM ·····	-	2	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1


E-16 MUFFLER(1)

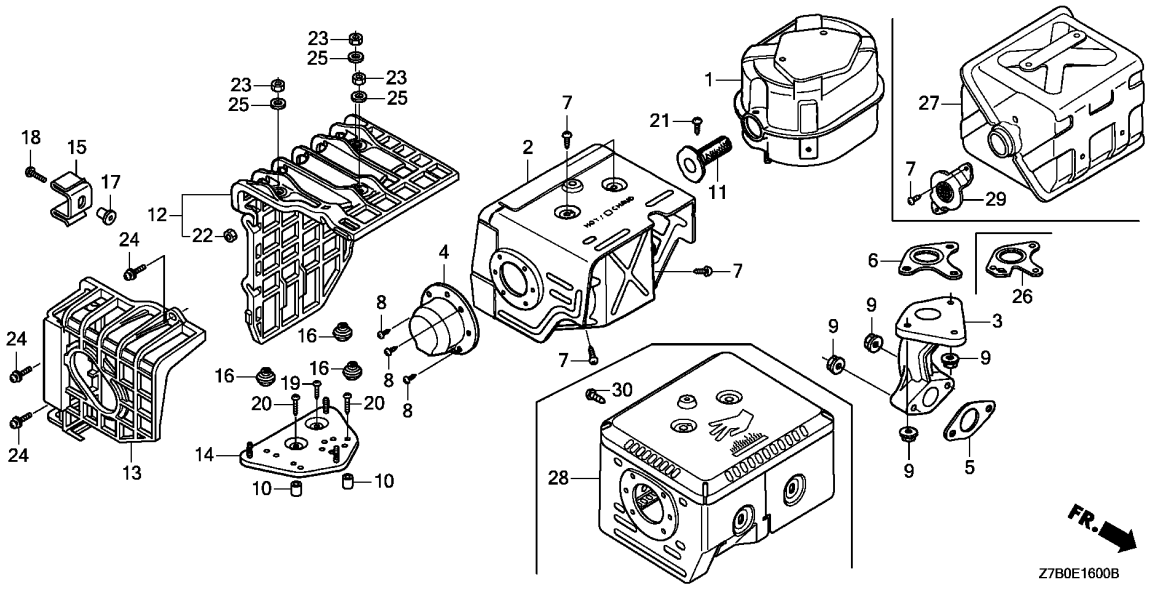

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(27)	
	3131C5	MUFFLER, EXHAUST ·····	0.2
2		(28)	
	3131D6	PROTECTOR, EXHAUST MUFFLER ···	0.2
3	3131C9	PIPE, EXHAUST ·····	0.2
5	3131B5	GASKET, EXHAUST PIPE ·····	0.2
6		(26)	
	3131B4	GASKET, EXHAUST MUFFLER ·····	0.2
11	3131A1	ARRESTER, SPARK ·····	0.2
		.INCLUDES: Spark arrester check	
29	3131G5	FLANGE, EXHAUST BAFFLE ·····	0.2


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	18310-ZE2-W01	MUFFLER COMP. ·····	1	-	--------	--------	SHH
	18310-ZE2-W00	·····	1	-	--------	0121756	LH,LH1,LH2,LHB5,LW,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ RD,SD,SD1,SH,SH1,SXH
	18310-ZE2-W01	·····	1	-	0121757	--------	LH,LH1,LH2,LHB5,LW,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ RD,SD,SD1,SH,SH1,SXH
2	18320-ZE2-W02	PROTECTOR COMP., MUFFLER(STD.)	1	-	--------	--------	LH1,LH2,LHB5,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ,SD1,SH1 SHH,SXH
	18320-ZE2-W01	·····	1	-	--------	0017158	LH,LW,QD,RD,SD,SH
	18320-ZE2-W02	·····	1	-	0017159	--------	LH,LW,QD,RD,SD,SH
3	18330-ZE2-W00	PIPE, EX. ·····	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ RD,SD,SD1,SH,SH1,SHH,SXH
	18331-Z5T-000	·····	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
4	18331-ZE2-810	CAP, MUFFLER ·····	1	-	--------	--------	LW,QMH,QN,QP
	18331-ZE3-811	·····	-	1	--------	--------	QMH,QN
5	18333-Z7B-701	GASKET, EX. PIPE (NINGBO SIL GASKET)	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ,RD,SD SD1,SH,SH1,SHH,SXH
	18333-ZE3-800	GASKET, EX. PIPE ·····	1	-	--------	--------	LH,LW,QD,QXHQ,RD,SD,SH,SXH
	18333-ZE3-801	·····	1	-	--------	--------	LH1,LH2,LHB5,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,SD1,SH1,SHH
	18333-ZF6-W01	·····	1	-	--------	--------	QBE1
	18333-Z7B-701	GASKET, EX. PIPE (NINGBO SIL GASKET)	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
	18333-ZE3-801	GASKET, EX. PIPE ·····	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
6	18381-Z1C-801	GASKET, MUFFLER(THAI LEAKLESS)	1	-	--------	--------	LH,LW,QD,QXHQ,RD,SD,SH,SXH
	18381-ZE2-801	GASKET, MUFFLER (NIPPON LEAKLESS)	1	-	--------	--------	LH1,LH2,LHB5,QBE1,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,SD1,SH1,SHH
	18381-ZE2-800	·····	1	-	--------	0029745	LH,LW,QD,QXHQ,RD,SD,SH,SXH
	18381-ZE2-801	·····	1	-	0029746	--------	LH,LW,QD,QXHQ,RD,SD,SH,SXH

E-16 MUFFLER(1)

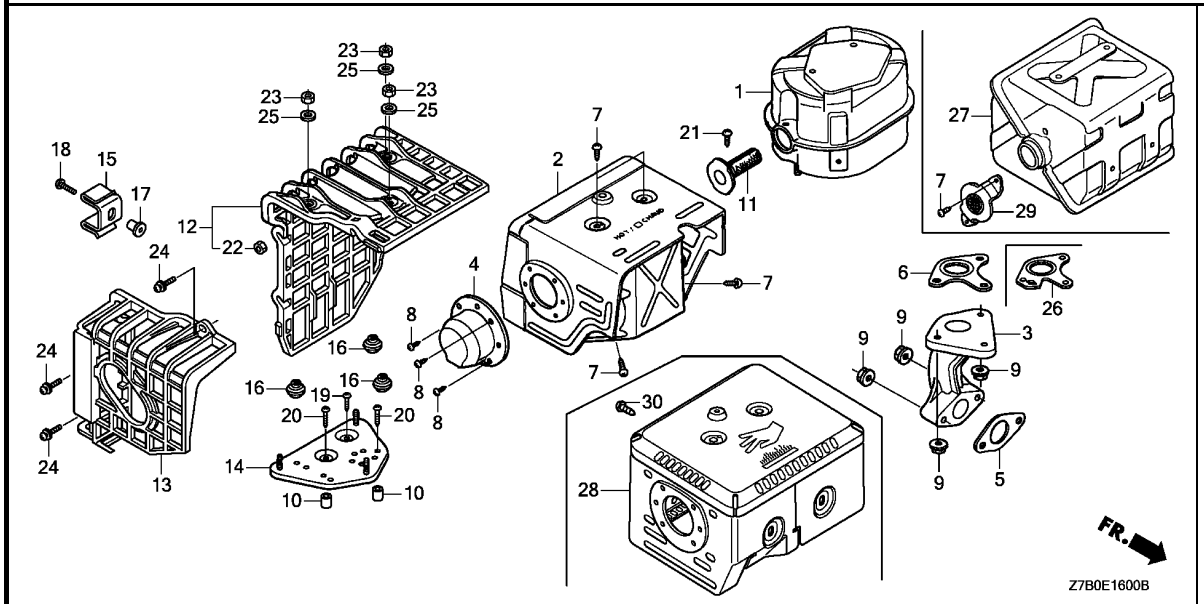


Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. QTY GX 270 H2	Serial No.		Parts catalogue code
(6)	18381-Z1C-801	GASKET, MUFFLER(THAI LEAKLESS)	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
	18381-ZE2-801	GASKET, MUFFLER (NIPPON LEAKLESS)	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
7	90050-ZE1-000	SCREW, TAPPING, 5X8	4	-	--------	--------	LH,LH1,LH2,LHB5,LW,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ RD,SD,SD1,SH,SH1,SHH,SXH
			-	6	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
8	90055-ZE1-000	SCREW, TAPPING, 4X6	3	3	--------	--------	LW,QMH,QN,QP
9	94050-08000	NUT, FLANGE, 8MM	5	-	--------	--------	LH,LH1,LH2,LHB5,LW,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QXHQ RD,SD,SD1,SH,SH1,SHH,SXH
			-	5	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
10	17233-896-701	COLLAR, AIR CLEANER CASE	(2)	-	--------	--------	QHB1
11	18355-ZE2-010	ARRESTER, SPARK	(1)	-	--------	--------	QHB1
12	18433-ZK9-W41	COVER COMP., MUFFLER	(1)	-	--------	--------	QHB1
13	18434-ZK9-W41	COVER COMP., RR. MUFFLER	(1)	-	--------	--------	QHB1
14	18436-ZH8-W41	BASE COMP., MUFFLER COVER	(1)	-	--------	--------	QHB1
15	18437-Z5T-000	STAY, MUFFLER COVER	(1)	-	--------	--------	QHB1
16	18466-ZH8-W40	SPACER, MUFFLER COVER	(3)	-	--------	--------	QHB1
17	19619-ZL8-300	COLLAR, FAN COVER	(1)	-	--------	--------	QHB1
18	90006-Z5T-000	SCREW, TAPPING, 6X25	(1)	-	--------	--------	QHB1
19	90050-ZE1-000	SCREW, TAPPING, 5X8	(1)	-	--------	--------	QHB1
20	90050-ZH8-W40	SCREW, TAPPING, 5X25	(2)	-	--------	--------	QHB1
21	90055-ZE1-000	SCREW, TAPPING, 4X6	(1)	-	--------	--------	QHB1
22	90301-782-000	NUT, U, 6MM	(3)	-	--------	--------	QHB1
23	90302-KF9-900	NUT, HEX., 5MM	(3)	-	--------	--------	QHB1
24	93891-06020-07	SCREW-WASHER, 6X20	(3)	-	--------	--------	QHB1
25	94103-05700	WASHER, PLAIN, 5MM	(3)	-	--------	--------	QHB1

MUFFLER(1)

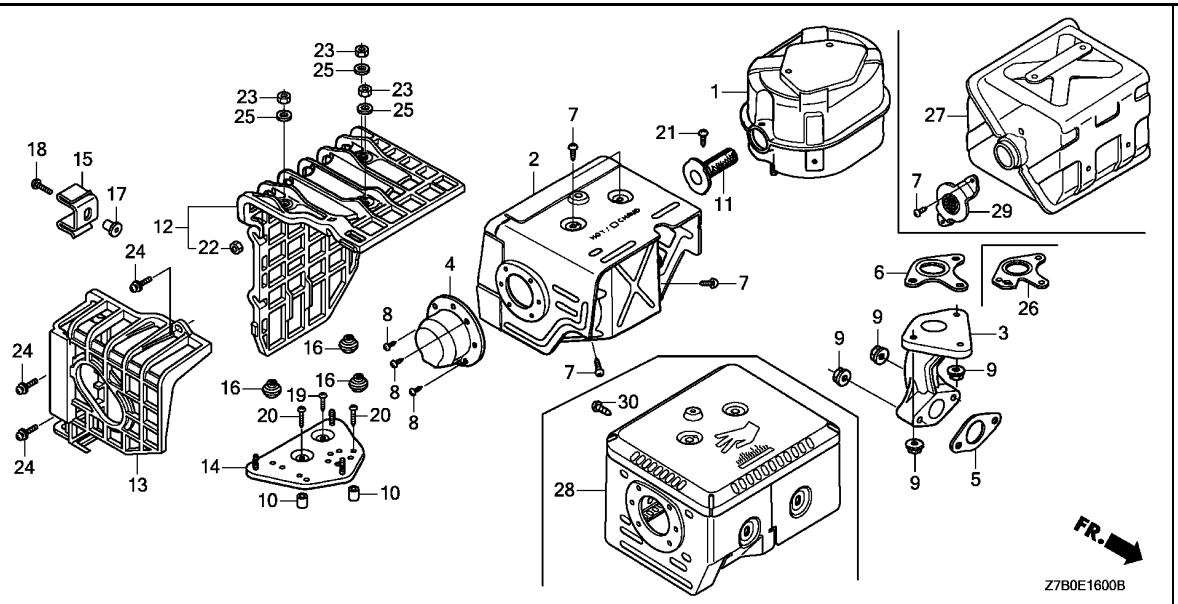

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
26	18381-ZE2-W10	GASKET, MUFFLER(ARRESTER) (NIPPON LEAKLESS)	(1)	-	-------- --------	QHB1
27	18310-Z7B-930	MUFFLER COMP.	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
28	18320-Z5K-000	PROTECTOR COMP., MUFFLER	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
29	18336-ZE3-000	FLANGE COMP., BAFFLE	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
30	90006-ZE2-000	SCREW, TAPPING, 6X10	-	1	-------- --------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1


E-16-1 MUFFLER(2)

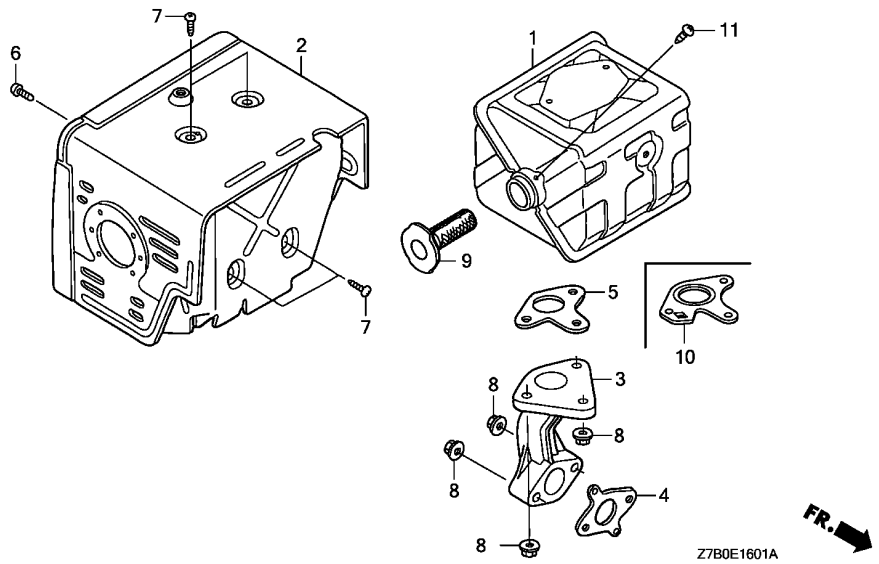

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST ·····	0.2
2	3131D6	PROTECTOR, EXHAUST MUFFLER ···	0.2
3	3131C9	PIPE, EXHAUST ·····	0.2
4	3131B5	GASKET, EXHAUST PIPE ·····	0.2
5		(10)	
	3131B4	GASKET, EXHAUST MUFFLER ·····	0.2
9	3131A1	ARRESTER, SPARK ·····	0.2
		.INCLUDES: Spark arrester check	

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	18310-ZE2-W62	MUFFLER COMP.(100DB) ·····	1	-	·····	·····	SH8
	18310-ZE2-W61	·····	1	-	·····	0122926	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SX,VSP,VX,VX1,VXK
	18310-ZE2-W62	·····	1	-	0122927	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SX,VSP,VX,VX1,VXK
2	18320-ZE2-W62	PROTECTOR COMP., MUFFLER ····	1	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK
3	18330-ZH9-N00	PIPE, EX. ·····	1	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK
4	18333-ZF6-W01	GASKET, EX. PIPE ·····	1	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
			-	1	·····	·····	VXP6,VXPR
5	18381-Z1C-801	GASKET, MUFFLER(THAI LEAKLESS)	1	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK
	18381-ZE2-801	GASKET, MUFFLER (NIPPON LEAKLESS)	1	-	·····	·····	PX,QX,QXBR,QXCK,QXE9,QXK,SH8,SX,VX1,VXK
	18381-ZE2-800	·····	1	-	·····	0029745	QXC9,VSP,VX
	18381-ZE2-801	·····	1	-	0029746	·····	QXC9,VSP,VX
6	90006-ZE2-000	SCREW, TAPPING, 6X10 ·····	1	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK
7	90050-ZE1-000	SCREW, TAPPING, 5X8 ·····	4	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK
8	94050-08000	NUT, FLANGE, 8MM ·····	5	-	·····	·····	PX,QX,QXBR,QXC9,QXCK,QXE9,QXK,SH8,SX,VSP,VX,VX1,VXK
9	18355-ZE2-W00	ARRESTER, SPARK ·····	(1)	-	·····	·····	QXC9
10	18381-ZE2-W10	GASKET, MUFFLER(ARRESTER) (NIPPON LEAKLESS)	(1)	-	·····	·····	QXC9
11	90055-ZE1-000	SCREW, TAPPING, 4X6 ·····	(1)	-	·····	·····	QXC9

E-16-10 EXHAUST PIPE

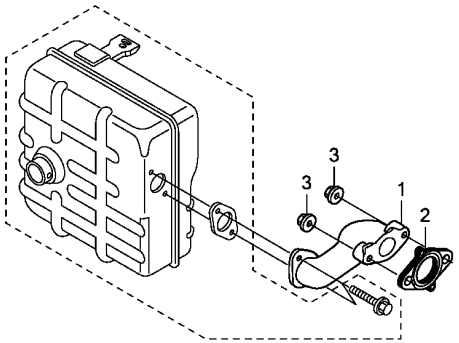


Z7B0E1610

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C9	PIPE, EXHAUST ----------	0.2
2	3131B5	GASKET, EXHAUST PIPE ---------	0.2

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	18330-ZE2-700	PIPE, EX. ----------	1	-	-------- --------	VKK,VMT,VSD4
	18330-ZH9-D40	----------	1	-	-------- --------	VS4
2	18333-ZF6-W01	GASKET, EX. PIPE ----------	1	-	-------- --------	VKK,VMT,VS4,VSD4
3	94050-08000	NUT, FLANGE, 8MM ----------	2	-	-------- --------	VKK,VMT,VS4,VSD4

FUEL TANK

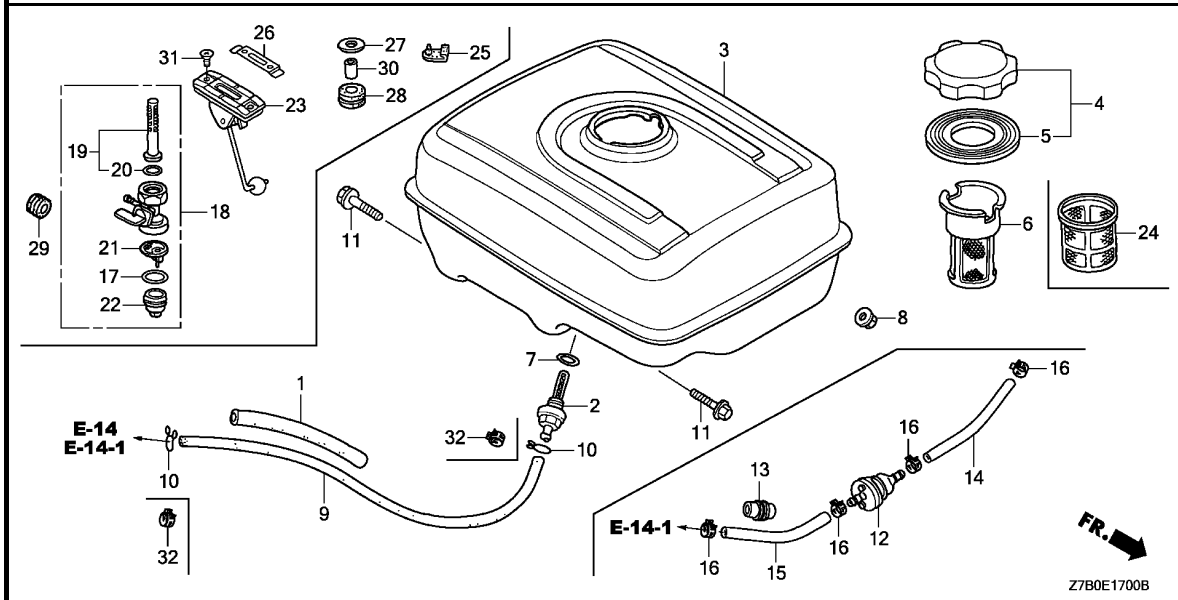


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(7)	
	3101H6	JOINT, FUEL STRAINER ·····	0.2
3	3101H7	TANK, FUEL ·····	0.2
4		(5)	
	3101M7	CAP, FUEL FILLER ·····	0.1
6		(24)	
	3101A6	FILTER, FUEL ·····	0.1
9	3101F1	TUBE, FUEL TANK ·····	0.2
12	3101H8	STRAINER, FUEL ·····	0.1
14	3101F6	TUBE, FUEL ·····	0.1
15	3101G0	TUBE, FUEL STRAINER ·····	0.1

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	16854-ZH8-000	RUBBER, SUPPORTER(107MM) ····	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSD4,VSP VX,VX1,VXK
2	16955-Z1T-010	JOINT, FUEL TANK ·····	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
3	17510-ZE2-801ZC	TANK COMP., FUEL					
		NH31.....MCKINLEY WHITE	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1 VXK
	17510-ZE2-801ZA	*NH1*.....BLACK	1	-	--------	--------	QXHQ,SD
	17510-ZE2-020ZA	*NH31*.....MCKINLEY WHITE	1	-	--------	--------	VSP
	17510-ZE2-020ZD	*NH1*.....BLACK	1	-	--------	--------	VSP
	17510-Z5K-000ZA	*NH1*.....BLACK	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
	17510-Z5K-000ZB	*NH31*.....MCKINLEY WHITE	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
4	17620-Z1T-800	CAP COMP., FUEL FILLER (CHROME PLATED)(TOYOSHA)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	17620-899-800	CAP COMP., FUEL FILLER ·····	1	-	--------	--------	VMT,VS4
	17620-ZOT-305	CAP COMP., FUEL FILLER (CHROME PLATED)(TOYOSHA)	1	-	--------	--------	VXP6,VXPE,VXPR
5	17631-Z1T-800	PACKING, FUEL FILLER CAP (39X62X3)(TOYOSHA)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
	17631-899-000	PACKING, FUEL FILLER CAP ····	1	-	--------	--------	VMT,VS4
	17631-ZOT-812	PACKING, FUEL FILLER CAP (39X62X3)(TOYOSHA)	1	-	--------	--------	VXP6,VXPE,VXPR

E-17 FUEL TANK

Ref. No.	Part No.	Description	Reqd. GX 270 H	QTY GX 270 H2	Serial No.		Parts catalogue code
6	17672-Z1T-000	FILTER, FUEL	1	1	--------	--------	LW,QN,QP
7	91353-671-004	O-RING, 14MM(NOK)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
8	94050-08000	NUT, FLANGE, 8MM	2	2	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
9	95001-45222-40	TUBE, FUEL, 4.5X222 (95001-45001-60M)	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QD,QD1,QDBR,QH,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX,VX1,VXK
	91424-Z5F-802	TUBE, FUEL, 4.5X222(FKM)	1	-	--------	--------	QBE1,QHB1
	95001-45430-40	TUBE, FUEL, 4.5X430 (95001-45001-60M)	1	-	--------	--------	VSD4
	95001-45210-40	TUBE, FUEL, 4.5X210 (95001-45001-60M)	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
10	95002-02080	CLIP, TUBE(B8)	2	2	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QD,QD1,QDBR,QH,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSD4,VSP,VX,VX1 VXK
11	95701-08025-00	BOLT, FLANGE, 8X25	2	2	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VSP,VX VX1,VXK
12	16910-GB2-005	STRAINER COMP., FUEL	1	1	--------	--------	VKK,VXP6,VXPE,VXPR
13	90854-ZB3-000	RUBBER, FUEL(9X15X20)	1	1	--------	--------	VKK,VXP6,VXPE,VXPR
14	91424-Z4J-802	TUBE, FUEL, 4.5X150(FKM)	1	-	--------	--------	VKK,VXP6,VXPE,VXPR
	91424-Z4J-803		-	1	--------	--------	VXP6,VXPR
15	91424-Z5J-802	TUBE, FUEL, 4.5X120(FKM)	1	-	--------	--------	VKK,VXP6,VXPE,VXPR
	91424-Z5J-803		-	1	--------	--------	VXP6,VXPR
16	95002-40800-08	CLAMP, TUBE(D8)	4	4	--------	--------	VKK,VXP6,VXPE,VXPR
17	16173-001-004	O-RING	1	-	--------	--------	VMT,VS4
18	16950-ZB4-015	COCK ASSY., FUEL	1	-	--------	--------	VMT,VS4
19	16952-ZB4-005	SCREEN SET, FUEL STRAINER	1	-	--------	--------	VMT,VS4
20	16958-397-771	O-RING, 9.0X1.3	1	-	--------	--------	VMT,VS4
21	16959-471-831	FILTER, CUP	1	-	--------	--------	VMT,VS4
22	16967-GA6-671	CUP, FUEL STRAINER	1	-	--------	--------	VMT,VS4
23	17630-Z8V-003	METER ASSY., FUEL	1	-	--------	--------	VMT,VS4
24	17672-899-000	FILTER, FUEL	1	-	--------	--------	VMT
	17670-899-000	FILTER COMP., FUEL	1	-	--------	--------	VS4
25	50319-ZB2-000	RUBBER, TANK MOUNTING	2	-	--------	--------	VMT
26	87565-ZB4-A00	PLATE, FUEL INDICATION	1	-	--------	--------	VMT
27	90503-898-000	WASHER, TANK CUSHION	4	-	--------	--------	VS4
28	90851-898-000	RUBBER, TANK CUSHION	2	-	--------	--------	VMT
			4	-	--------	--------	VS4
29	90854-ZB2-000	RUBBER, FUEL(9X15X10)	1	-	--------	--------	VMT,VS4
30	91551-898-000	COLLAR, TANK CUSHION	2	-	--------	--------	VMT
			4	-	--------	--------	VS4
31	93600-05010-0A	SCREW, FLAT, 5X10	2	-	--------	--------	VMT
32	95002-40800-08	CLAMP, TUBE(D8)	2	-	--------	--------	QBE1,QHB1


FLYWHEEL

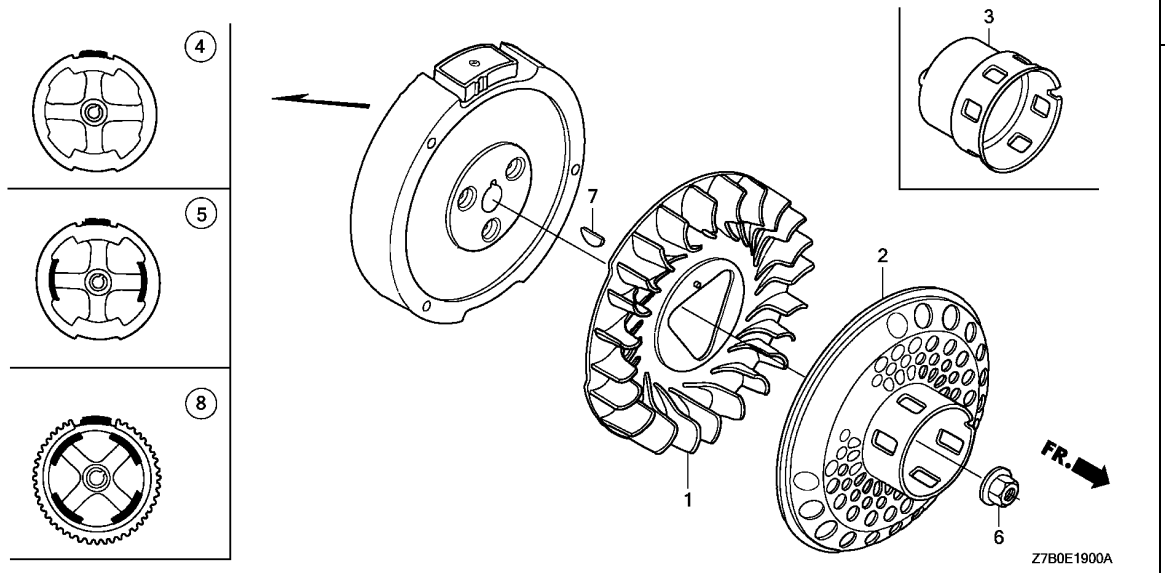

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G7	FAN, ENGINE COOLING ----------	0.2
2		(3)	
	1121A9	PULLEY, RECOIL STARTER -------	0.2
4		(5,8)	
	2161B5	FLYWHEEL ----------	0.3


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	19511-Z7B-000	FAN, COOLING ----------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VX1,VXK,VXP6,VXPE,VXPR
	19511-ZE2-000	----------	1	-	--------	0000154	VSP,VX
	19511-Z7B-000	----------	1	-	0000155	--------	VSP,VX
			-	1			
2	28450-Z7B-701	PULLEY COMP., STARTER -------	1	-	--------	--------	QXBR,SH8,SHH,VXP6
	28450-ZE2-W11	PULLEY COMP., STARTER (SCREEN GRID)	1	-	--------	0000721	VSP,VX
	28450-Z7B-000	PULLEY COMP., STARTER -------	1	-	--------	0082366	LH,LH1,LH2,LHB5,LW,PX,QBE1,QH,QHB1,QHB5,QHP1,QMH,QP,QX,QXC9,QXCK,QXE9 QXK,SH,SH1,SX,SXH,VKK,VSD4,VX1,VXK,VXPE,VXPR
			1	-	0000722	0082366	VSP,VX
	28450-Z7B-701	----------	1	-	0082367	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QH,QHB1,QHB5,QHP1,QMH,QP,QX,QXC9,QXCK,QXE9 QXK,SH,SH1,SX,SXH,VKK,VSD4,VSP,VX,VX1,VXK,VXPE,VXPR
			-	1	--------	--------	LH,LH1,PX,QH,QHP1,QMH,QX,SH,SH1,SHH,SX,VX,VX1,VXP6,VXPR
3	28451-Z7B-701	PULLEY, STARTER ----------	1	-	--------	--------	QDBR
	28451-Z7B-000	----------	1	-	--------	0082366	QD,QD1,QN,QXHQ,RD,SD,SD1,VMT,VS4
	28451-Z7B-701	----------	1	-	0082367	--------	QD,QD1,QN,QXHQ,RD,SD,SD1,VMT,VS4
			-	1	--------	--------	QD,QD1,QN,QXHQ,RD,SD1
4	31110-Z7B-602	FLYWHEEL COMP. ----------	1	-	--------	--------	LH1,LH2,LHB5,PX,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QX,QXBR,QXC9 QXCK,QXHQ,QXK,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VMT,VS4,VSD4,VSP,VX,VX1 VXK,VXP6,VXPR
	31110-Z7B-801	----------	1	-	--------	--------	LH1,LH2,LHB5,PX,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QX,QXBR,QXC9 QXCK,QXHQ,QXK,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VMT,VS4,VSD4,VX1,VXK,VXP6 VXPR
	31100-ZE2-010	----------	1	-	--------	0000721	VSP,VX
	31110-Z7B-801	----------	1	-	--------	0037157	LH,RD
			1	-	0000722	--------	VSP,VX
	31110-Z7B-602	----------	1	-	0037158	--------	LH,RD

FLYWHEEL

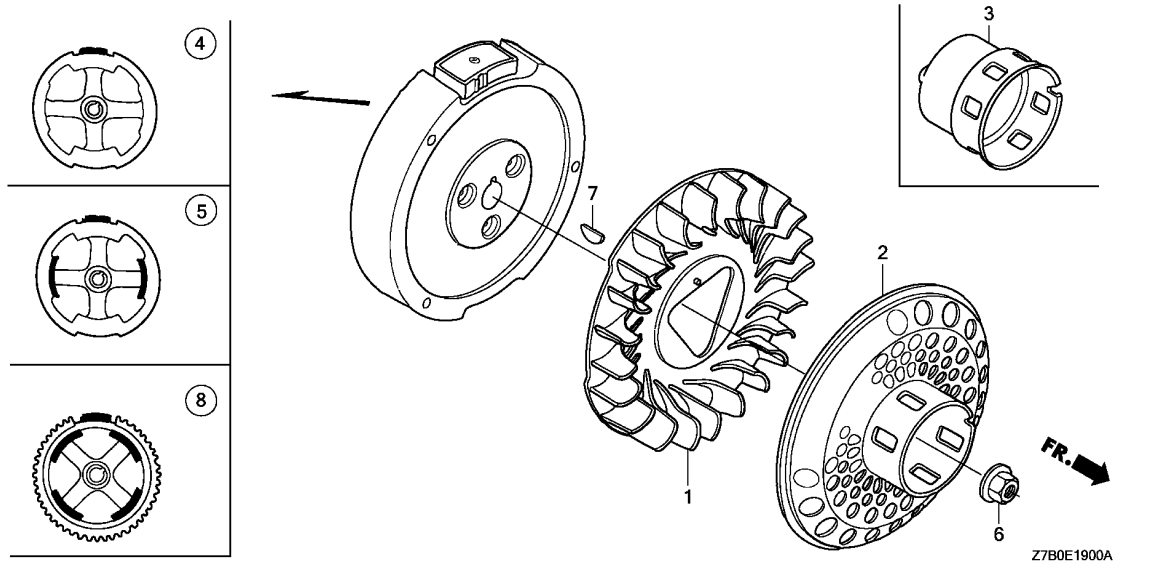

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
(4)	31110-Z7B-931	FLYWHEEL COMP. ----------	-	1		
5	31110-Z7B-612	FLYWHEEL COMP.(LAMP)(YUXIN) -	1	-	-------- --------	LW,QP
	31110-Z7B-811	FLYWHEEL COMP.(LAMP) --------	1	-	-------- --------	LW,QP
	31100-ZE2-822	FLYWHEEL COMP.(STARTER MOTOR)	1	-	-------- --------	QBE1,QXE9,VXPE
6	90201-ZE3-V00	NUT, SPECIAL, 16MM ----------	1	1		
7	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	1	1		
8	31100-ZE2-832	FLYWHEEL COMP.(4POLE) -------	1	-	-------- --------	VKK


IGNITION COIL

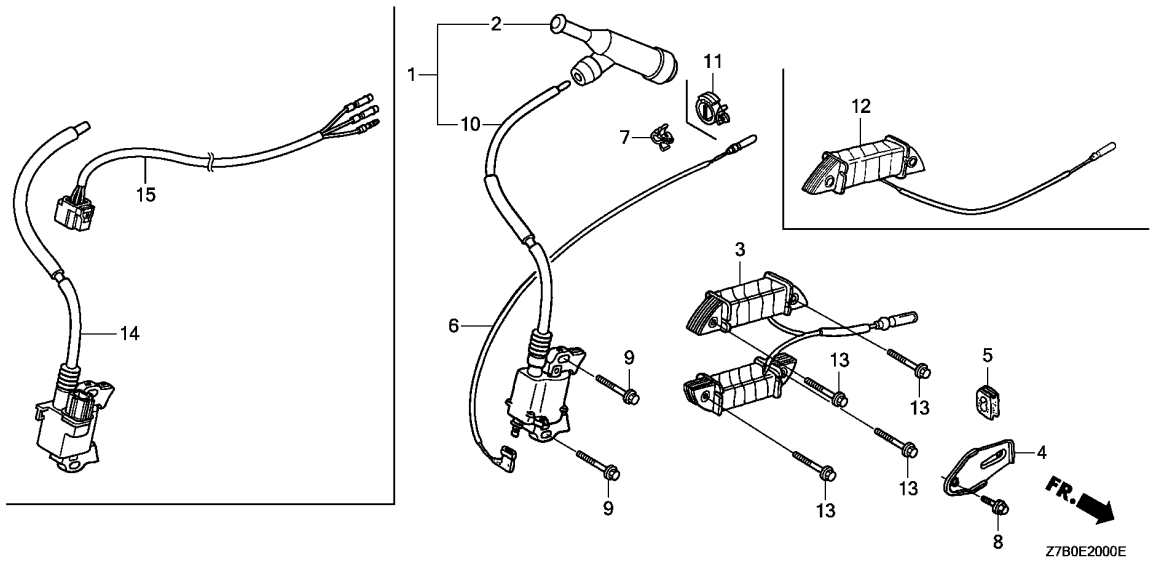

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(10,14)	
	6141A5	COIL, IGNITION(ONE) ----------	0.3
2	6141B8	TERMINAL, HIGH TENSION -------	0.1
3	6141A6	COIL, LAMP ------------------	0.3
6	6111B3	CORD, STOP SWITCH ------------	0.3
12	6131C3	COIL, CHARGE ----------------	0.3
15	6111C0	HARNESS, ENGINE WIRE ---------	0.4


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	30500-Z7E-003	COIL ASSY., IGNITION --------	1	-	--------	--------	VMT,VS4
			1	-	--------	0329821	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VSP,VX1,VXK,VXP6 VXPE,VXPR
			1	-	0001678	0329821	VX
2	30700-Z1T-601	CAP ASSY., NOISE SUPPRESSOR (TOYO)	1	-	--------	--------	SH8,SHH
	30700-ZF5-013	CAP ASSY., NOISE SUPPRESSOR -	1	-	--------	--------	VKK,VSD4
	30700-Z1T-003	CAP ASSY., NOISE SUPPRESSOR (TEC)	1	-	--------	--------	VMT,VS4
	30700-ZE1-013	CAP ASSY., NOISE SUPPRESSOR (NICHIWA Y-EZ RTFM256)	1	-	--------	0001677	VX
	30700-Z1T-003	CAP ASSY., NOISE SUPPRESSOR (TEC)	1	-	--------	0329821	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VSP,VX1,VXK,VXP6 VXPE,VXPR
			1	-	0001678	0329821	VX
	30700-Z1T-601	CAP ASSY., NOISE SUPPRESSOR (TOYO)	1	-	0329822	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VSP,VX,VX1,VXK VXP6,VXPE,VXPR
	30700-Z1T-701	CAP ASSY., NOISE SUPPRESSOR (KOKUSAN)	-	1			
3	31510-ZE2-811	COIL ASSY., LAMP(12V/50W) ---	1	-	--------	--------	LW,QP
4	31511-Z7B-000	CLAMPER, CORD ----------	1	-	--------	--------	LW,QBE1,QP,QXE9,VKK,VXPE
5	31512-ZE2-000	GROMMET, CORD ----------	1	1			

IGNITION COIL

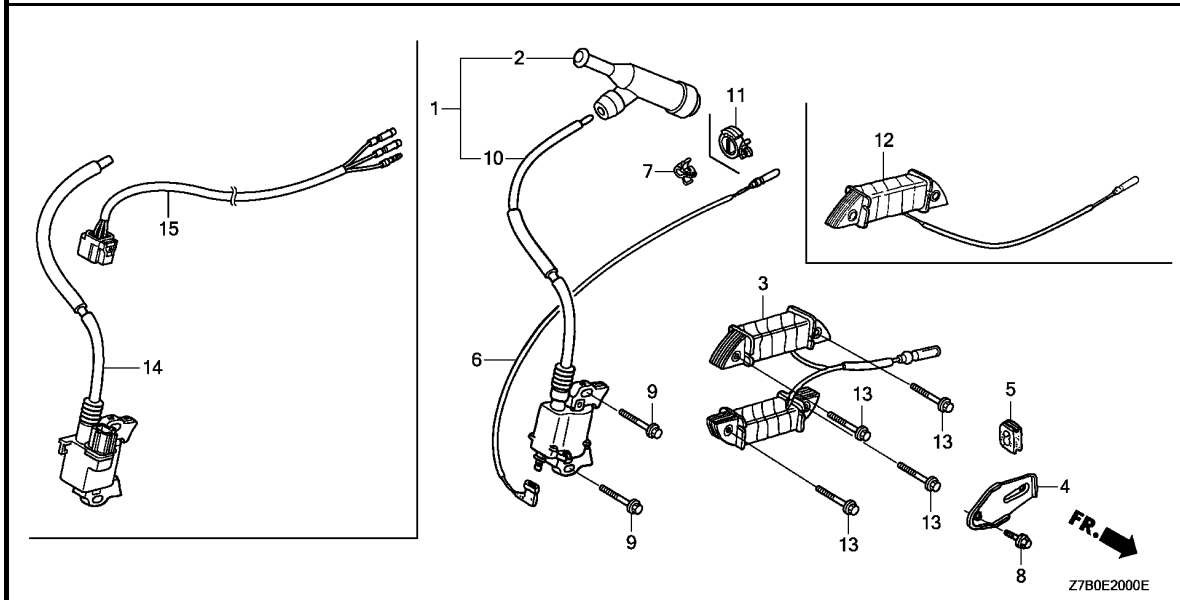

Ref. No.	Part No.	Description	Reqd. GX 270 H	Reqd. QTY GX 270 H2	Serial No.		Parts catalogue code
6	36101-ZE1-010	CORD, STOP SWITCH(370MM) ----	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VSD4 VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
	36101-ZE2-701	CORD, STOP SWITCH(430MM) ----	1	-	--------	--------	VMT,VS4
7	36103-V42-000	HOLDER, STOP SWITCH CORD ----	1	-	--------	--------	LH,LH1,LH2,QD,QD1,QDBR,QH,QHB1,QHP1,QMH,QN,RD,SD1,SH,SH1,SH8,SHH
	36103-ZE1-000	----------	1	-	--------	--------	LHB5,LW,QBE1,QHB5,QP,QXE9,SD,VKK,VMT,VS4
8	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	1	-	--------	--------	LW,QBE1,QP,QXE9,VKK,VXPE
9	90015-883-000	BOLT, FLANGE, 6X28(CT200) ---	2	2			
10	30500-Z7E-601	COIL ASSY., IGNITION -------	1	-	--------	--------	SH8,SHH
	30500-Z7E-801	----------	1	-	--------	--------	VKK,VSD4
	30500-Z1C-023	----------	1	-	--------	--------	VSP
	30500-ZF6-W03	----------	1	-	--------	0001677	VX
	30500-Z7E-601	----------	1	-	0329822	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SX,SXH,VSP,VX,VX1,VXK VXP6,VXPE,VXPR
11	90684-Z7E-000	CLIP, HARNESS -------------	1	-	--------	--------	PX,QX,QXBR,QXC9,QXCK,QXHQ,QXK,SX,SXH,VSD4,VSP,VX,VX1,VXK,VXP6,VXPE VXPR
			-	1			
12	31630-ZE1-013	COIL ASSY., CHARGE(1A) ------	1	-	--------	--------	QBE1,QXE9,VXPE
	31630-ZE2-842	COIL ASSY., CHARGE(3A) ------	1	-	--------	--------	VKK
13	90015-883-000	BOLT, FLANGE, 6X28(CT200) ---	4	-	--------	--------	LW,QP
			2	-	--------	--------	QBE1,QXE9,VXPE
	90017-883-000	BOLT, FLANGE, 6X32(CT200) ---	2	-	--------	--------	VKK
14	30500-Z7B-931	COIL ASSY., IGNITION -------	-	1			
15	32110-Z5K-800	HARNESS ASSY., ENGINE WIRE --	-	1	--------	--------	LH,LH1,QD,QD1,QH,QHP1,QMH,QN,RD,SD1,SH,SH1,SHH
	32110-Z5K-000	----------	-	1	--------	--------	PX,QX,QXHQ,SX,VX,VX1,VXP6,VXPR


E-21 STARTER MOTOR

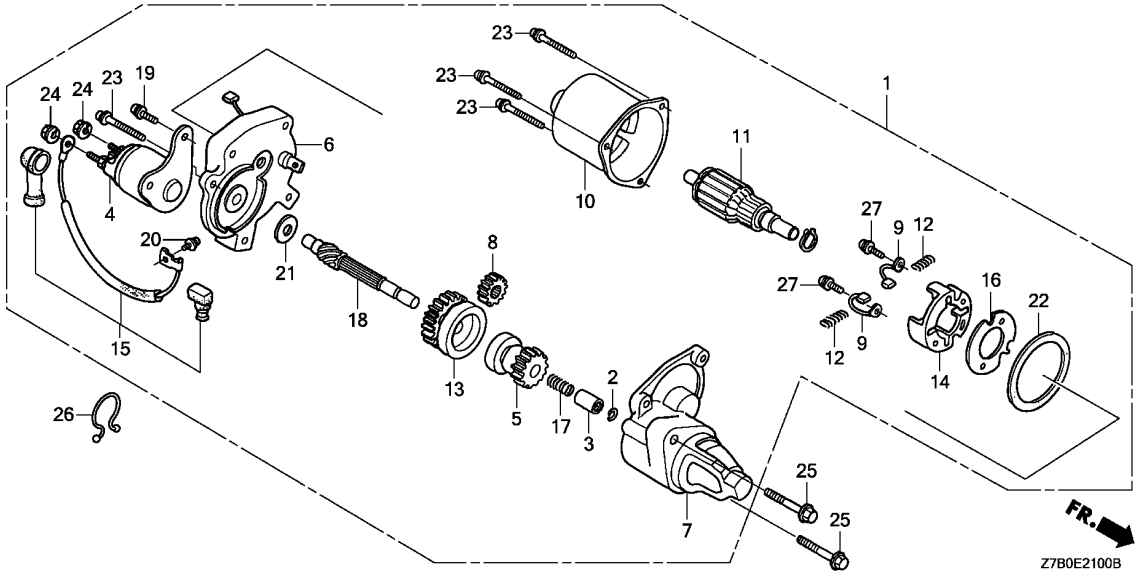

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6121D5	MOTOR, STARTER	0.2
4	6121E5	CONTACTOR, STARTER	0.2
5		(18)	
	6121B0	CLUTCH, OVERRUNNING	0.4
6	6121C3	BRACKET, STARTER :CENTER	0.4
7	6121D2	BRACKET, STARTER :FRONT	0.3
9	6121A9	BRUSH, STARTER	0.4
11	6121A0	ARMATURE, STARTER	0.4
13	6121B5	GEAR, STARTER REDUCTION	0.4


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	31200-ZH9-013	MOTOR ASSY., STARTER	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
2	31201-ZA1-003	RING, SNAP	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
3	31202-ZA1-003	COLLAR, CLUTCH STOP	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
4	31204-ZA0-003	CONTACTOR ASSY.	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
5	31207-ZH9-003	CLUTCH COMP., OVERRUNNING	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
6	31211-ZE2-003	BRACKET, CENTER	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
7	31212-ZE2-003	BRACKET, FR.	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
8	31213-ZE2-003	GEAR, DRIVE PINION	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
9	31215-ZE2-003	BRUSH	2	-	-------- --------	QBE1,QXE9,VKK,VXPE
10	31216-ZE2-003	YOKE COMP.	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
11	31217-ZE2-003	ARMATURE COMP.	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
12	31219-ZE2-003	SPRING, BRUSH RETURN	4	-	-------- --------	QBE1,QXE9,VKK,VXPE
13	31222-ZE3-791	GEAR, REDUCTION	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
14	31231-ZE2-003	HOLDER, BRUSH	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
15	31232-ZE3-003	WIRE, WATER COVER	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
16	31233-ZE2-003	INSULATOR	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
17	31244-ZH9-003	SPRING	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
18	31245-ZH9-003	SHAFT	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
19	90007-ZE2-003	BOLT-WASHER, 5X14	2	-	-------- --------	QBE1,QXE9,VKK,VXPE
20	90110-ZE2-003	SCREW-WASHER, 4X6	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
21	90403-ZH9-003	WASHER, SK	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
22	91601-ZE2-003	PACKING	1	-	-------- --------	QBE1,QXE9,VKK,VXPE
23	93892-05032-18	SCREW-WASHER, 5X32	4	-	-------- --------	QBE1,QXE9,VKK,VXPE
24	94070-06080	NUT-WASHER, 6MM	2	-	-------- --------	QBE1,QXE9,VKK,VXPE
25	95701-08040-00	BOLT, FLANGE, 8X40	2	-	-------- --------	QBE1,QXE9,VKK,VXPE

E-21 STARTER MOTOR

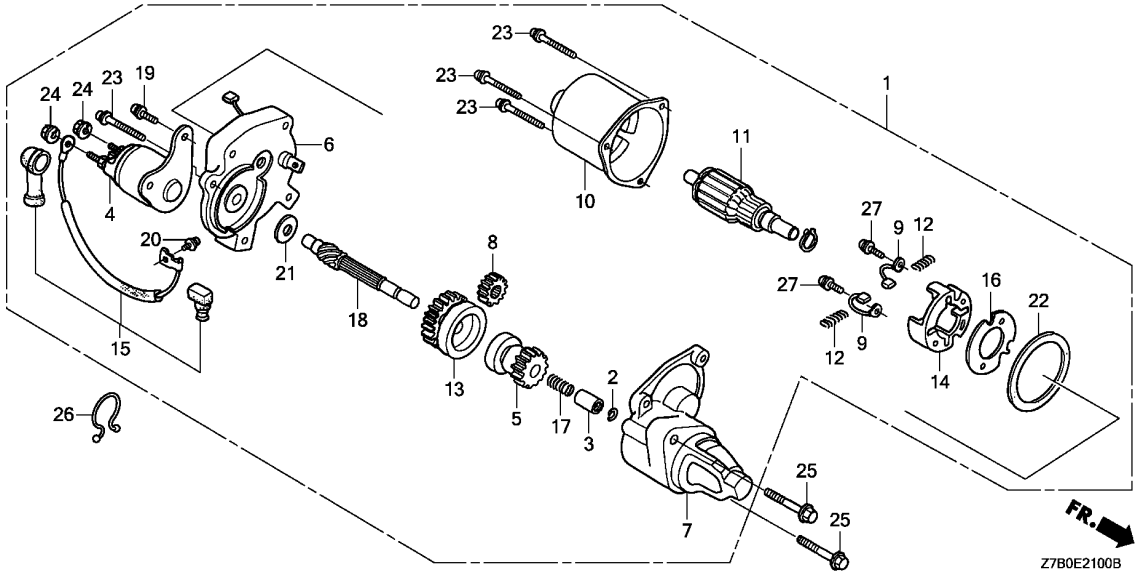

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
26	90630-751-000	CLIP, PURSE LOCK	1	-	-------- --------	QBE1,QXE9
27	31219-ZE3-003	SCREW-WASHER, 4X14	2	-	-------- --------	QBE1,QXE9,VKK,VXPE

CONTROL

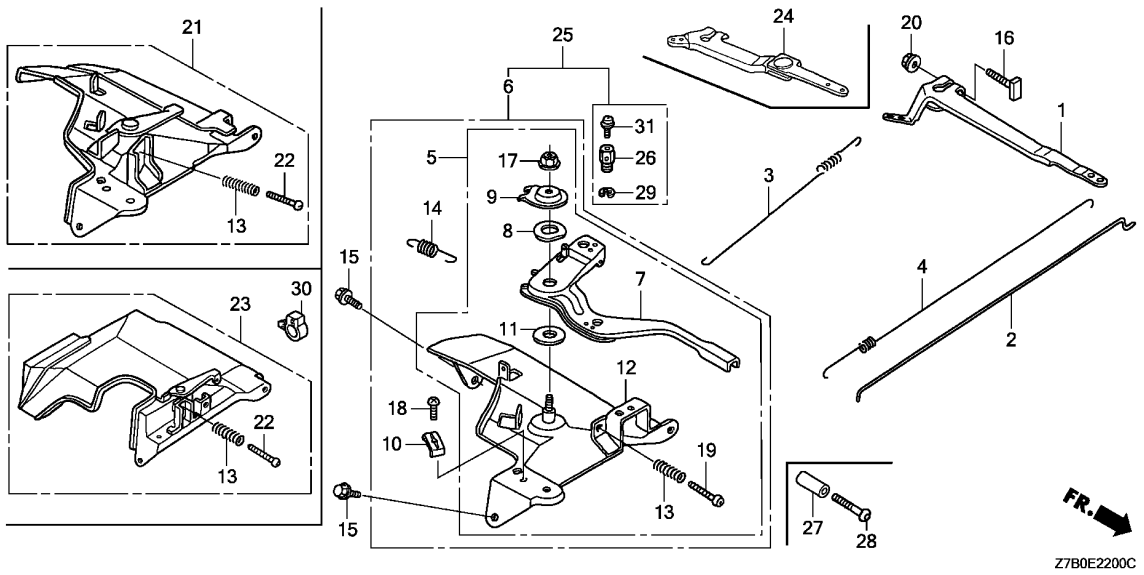


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(24)	
	1161A0	ARM, GOVERNOR ----------	0.2
2	1161B1	ROD, GOVERNOR ----------	0.3
3	1161C5	SPRING, GOVERNOR ----------	0.2
4	1161C2	SPRING, THROTTLE RETURN ------	0.3
5		(6,21,23,25)	
	1161A5	CONTROL, THROTTLE/GOVERNOR ---	0.2
7	1161A8	LEVER, CONTROL ----------	0.3
12	1161A2	BASE, CONTROL ----------	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	16551-ZE2-000	ARM, GOVERNOR ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VS4,VSD4 VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
2	16555-ZE2-000	ROD, GOVERNOR ----------	1	1			
3	16561-ZE2-000	SPRING, GOVERNOR(L=145.0MM) (WIRE DIAMETER 1.0MM)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT VS4,VSD4,VSP,VX,VX1,VXK
	16561-ZE3-710	SPRING, GOVERNOR(L=132.0MM) -	1	-	--------	--------	VXP6
	16561-ZK9-800	SPRING, GOVERNOR ----------	1	-	--------	--------	VXPE,VXPR
	16561-ZK6-D70	----------	-	1	--------	--------	VXP6,VXPR
4	16562-ZE2-000	SPRING, THROTTLE RETURN -----	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VS4 VSD4,VSP,VX,VX1,VXK,VXP6,VXPE,VXPR
	16562-ZE2-700	----------	1	-	--------	--------	VMT
5	16570-ZE2-W00	CONTROL ASSY. ----------	1	-	--------	--------	PX,QD,QD1,QDBR,QXHQ,RD,SD,SD1,VX,VX1
	16500-Z5K-000	----------	-	1	--------	--------	PX,QD,QD1,QXHQ,RD,SD1,VX,VX1
6	16570-ZE2-W20	CONTROL ASSY.(REMOTE) -------	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,QH,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK,QXE9,QXK SH,SH1,SH8,SX,SXH
	16500-Z5K-810	----------	-	1	--------	--------	LH,LH1,QH,QHP1,QMH,QN,QX,SH,SH1,SX
7	16571-ZE2-W00	LEVER, CONTROL ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
8	16574-ZE1-000	SPRING, LEVER ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
9	16575-ZE2-W00	WASHER, CONTROL LEVER -------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
10	16576-891-000	HOLDER, CABLE ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,QBE1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXK,SH,SH1,SH8,SHH,SX,SXH

E-22 CONTROL

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
11	16578-ZE1-000	SPACER, CONTROL LEVER	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
12	16581-ZE2-W00	BASE COMP., CONTROL(###)	1	-	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
	16580-Z5K-000	BASE COMP., CONTROL	-	1	--------	--------	LH,LH1,PX,QD,QD1,QH,QHP1,QMH,QN,QX,QXHQ,RD,SD1,SH,SH1,SHH,SX,VX,VX1
13	16584-883-300	SPRING, CONTROL ADJUSTING	1	1			
14	16592-883-310	SPRING, CABLE RETURN	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,QBE1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXK,SH,SH1,SH8,SHH,SX,SXH
15	90013-883-000	BOLT, FLANGE, 6X12(CT200)	2	2			
16	90015-ZE5-010	BOLT, GOVERNOR ARM	1	1			
17	90114-SA0-000	NUT, SELF-LOCK, 6MM	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
	90202-Z1T-000		1	-	--------	--------	LH1,LH2,LHB5,PX,QD1,QDBR,QH,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXCK,QXE9,QXK SD1,SH1,SH8,SX,VX1
			1	-	0046476	--------	QD,QXHQ,RD,SD,VX
			1	-	0047386	--------	LH,LW,QXC9,SH,SXH
18	93500-05016-0A	SCREW, PAN, 5X16	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,QBE1,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9,QXCK QXE9,QXK,SH,SH1,SH8,SHH,SX,SXH
19	93500-05028-0A	SCREW, PAN, 5X28	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QBE1,QD,QD1,QDBR,QH,QHB1,QHB5,QHP1,QMH,QN,QP,QX QXBR,QXC9,QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1
20	94050-06000	NUT, FLANGE, 6MM	1	1			
21	16570-ZE2-722	CONTROL ASSY.	1	-	--------	--------	VSP,VXK
22	93500-05035-0A	SCREW, PAN, 5X35	1	1	--------	--------	VKK,VMT,VS4,VSD4,VSP,VXK,VXP6,VXPE,VXPR
23	16570-ZE2-701	CONTROL ASSY.	1	-	--------	--------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
	16500-Z5K-880		-	1	--------	--------	VXP6,VXPR
24	16550-ZE2-700	ARM COMP., GOVERNOR	1	-	--------	--------	VKK,VMT
25	16570-ZE2-W50	CONTROL ASSY.(REMOTE)	1	-	--------	--------	QBE1,QHB1,SHH
	16500-Z5K-830		-	1	--------	--------	SHH
26	16594-883-010	HOLDER, WIRE	1	1	--------	--------	QBE1,QHB1,SHH
27	16599-ZG1-M10	COLLAR, STOPPER	1	-	--------	--------	QHB1,VSD4
28	90016-ZG9-N30	SCREW, RECESSED, 5X25	1	-	--------	--------	QHB1,VSD4
29	90605-230-000	CIRCLIP, 5MM	1	1	--------	--------	QBE1,QHB1,SHH
30	90650-SD9-003	CLIP, WIRE HARNESS	1	-	--------	--------	VMT,VS4
31	93500-04006-0H	SCREW, PAN, 4X6	1	1	--------	--------	QBE1,QHB1,SHH

AUTO THROTTLE

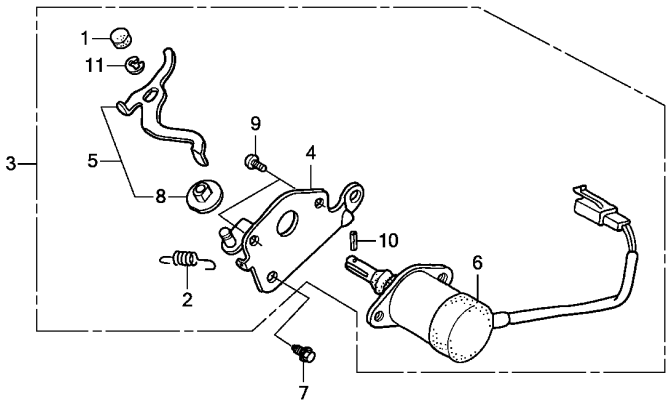


Z7B0E2210A

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	8101Q9	SPRING, CHOKE RETURN	0.2
3	8101S8	THROTTLE, AUTO	0.2
6		(4)	
	6211C5	SOLENOID, AUTO THROTTLE	0.3

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	16252-ZA1-010	CAP, CHOKE LEVER	1	-	--------	--------	VMT
2	16268-893-000	SPRING, CHOKE RETURN	1	-	--------	--------	VMT
3	16270-ZB4-010	AUTO-THROTTLE ASSY.	1	-	--------	--------	VMT
4	16271-ZB4-000	STAY, SOLENOID THROTTLE	1	-	--------	--------	VMT
5	16273-ZB4-000	LEVER COMP., SOLENOID THROTTLE	1	-	--------	--------	VMT
6	36160-ZB4-013	SOLENOID ASSY.	1	-	--------	--------	VMT
7	90013-883-000	BOLT, FLANGE, 6X12(CT200)	1	-	--------	--------	VMT
8	91502-ZB4-701	BUSH, AUTO-THROTTLE LEVER	1	-	--------	--------	VMT
9	93500-05008-0A	SCREW, PAN, 5X8	2	-	--------	--------	VMT
10	94305-20062	PIN, SPRING, 2X6	1	-	--------	--------	VMT
11	94540-04018	E-RING, 4MM	1	-	--------	--------	VMT


E-23 CONTROL BOX

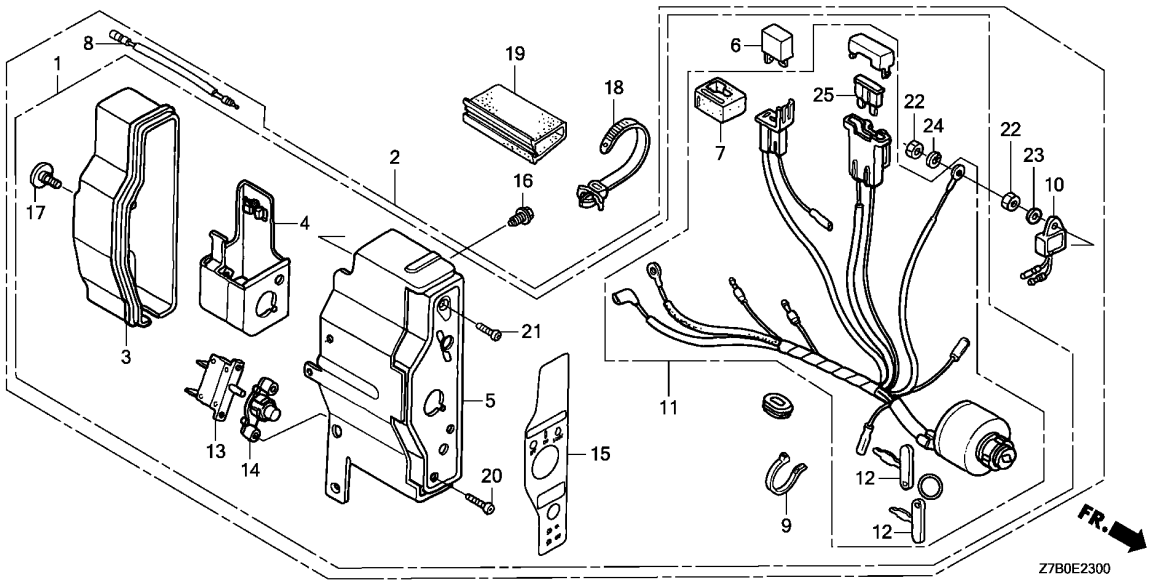

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1)	
	6221N7	BOX, ENGINE CONTROL ----------	0.1
5	6221P7	PANEL, ENGINE CONTROL --------	0.2
6	6131B8	RECTIFIER, SILICON ----------	0.2
10	6151K4	ALERT UNIT, ENGINE CONTROL OIL	0.2
11	6151E1	SWITCH, COMBINATION ----------	0.2
13	6221D4	PROTECTOR, CIRCUIT ----------	0.2
25	8121A7	FUSE, BLADE ----------	0.1


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	31610-Z5J-811ZA	BOX ASSY., CONTROL(EXTERNAL) *R280*.....POWER RED	1	-	-------- --------	QBE1
2	31610-ZE2-835ZE	BOX ASSY., CONTROL(EXP-ALERT) *R280*.....POWER RED	1	-	-------- --------	QXE9
3	31612-ZE2-003	CASE, CONTROL ----------	1	-	-------- --------	QBE1,QXE9
4	31614-ZE2-003	BRACKET, CASE MOUNTING ------	1	-	-------- --------	QBE1,QXE9
5	31615-ZE2-003ZG	PANEL COMP., CONTROL *R280*.....POWER RED	1	-	-------- --------	QBE1,QXE9
6	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	1	-	-------- --------	QBE1,QXE9,VKK
7	32127-738-700	SUSPENSION, COUPLER ---------	1	-	-------- --------	QBE1,QXE9,VKK
8	32197-ZE1-003	HARNESS, SUB WIRE ----------	1	-	-------- --------	QXE9
9	32902-892-003	BAND ----------	1	-	-------- --------	QBE1,QXE9
10	34150-ZH7-023	ALERT UNIT, OIL ----------	1	-	-------- --------	QXE9
11	35100-ZE2-033	SWITCH ASSY., COMBINATION ---	1	-	-------- --------	QBE1,QXE9
	35100-ZE2-843	SWITCH ASSY., COMBINATION (3A-CHARGE)	1	-	-------- --------	VKK
12	35111-880-013	KEY COMP.(HONDA LOCK) -------	2	-	-------- --------	QBE1,QXE9,VKK
13	38240-VA3-900	PROTECTOR, CIRCUIT(1.0A) ----	1	-	-------- --------	QBE1,QXE9
14	38250-ZA8-701	LENS ASSY., PROTECTOR -------	1	-	-------- --------	QBE1,QXE9
15	87529-Z4T-840	MARK, CONTROL BOX(EXTERNAL) -	1	-	-------- --------	QBE1
	87529-ZE2-812	MARK, CONTROL BOX(EXP) ------	1	-	-------- --------	QXE9
16	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	2	-	-------- --------	QBE1,QXE9
17	90380-MA6-010	SCREW, SPECIAL, 6X12 --------	1	-	-------- --------	QBE1,QXE9
18	90672-SA0-003	STRAP, CABLE, 118MM(BLACK) --	1	-	-------- --------	QBE1,QXE9
19	91406-ZE2-003	TUBE, FASTENER, 30MM --------	1	-	-------- --------	QBE1,QXE9

E-23 CONTROL BOX

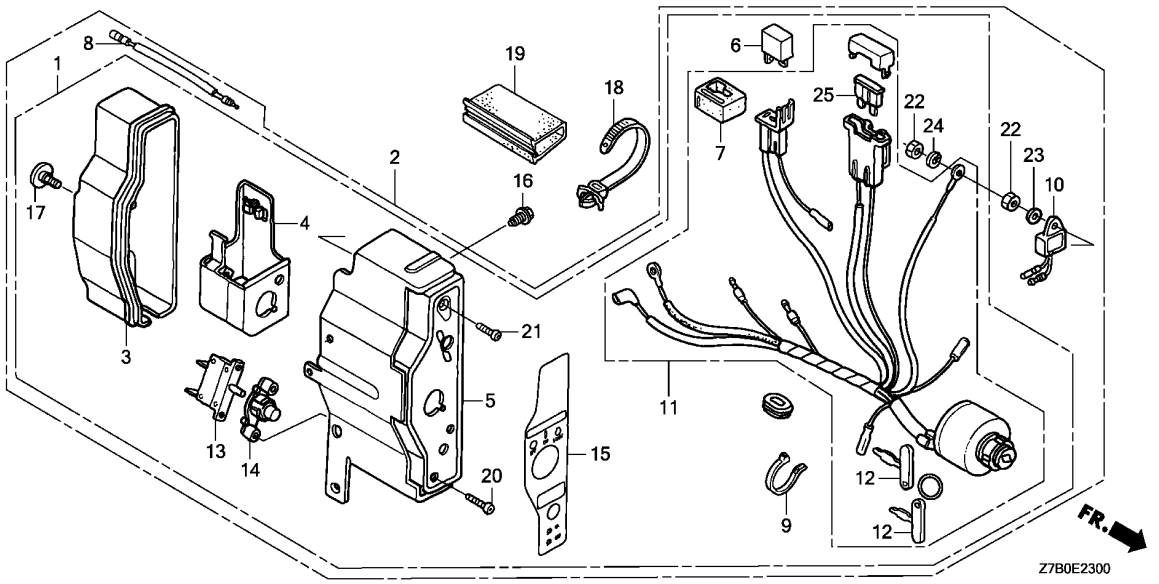

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
20	93500-03012-0H	SCREW, PAN, 3X12	2	-	-------- --------	QBE1,QXE9
21	93500-04012-0H	SCREW, PAN, 4X12	1	-	-------- --------	QBE1,QXE9
22	94001-04390-0S	NUT, HEX., 4MM	1	-	-------- --------	QBE1
			2	-	-------- --------	QXE9
23	94101-04800	WASHER, PLAIN, 4MM	1	-	-------- --------	QXE9
24	94111-04800	WASHER, SPRING, 4MM	1	-	-------- --------	QBE1,QXE9
25	98200-30500	FUSE, BLADE(5A)	1	-	-------- --------	QBE1,QXE9
	98200-31500	FUSE, BLADE(15A)	1	-	-------- --------	VKK


REDUCTION(1/2)

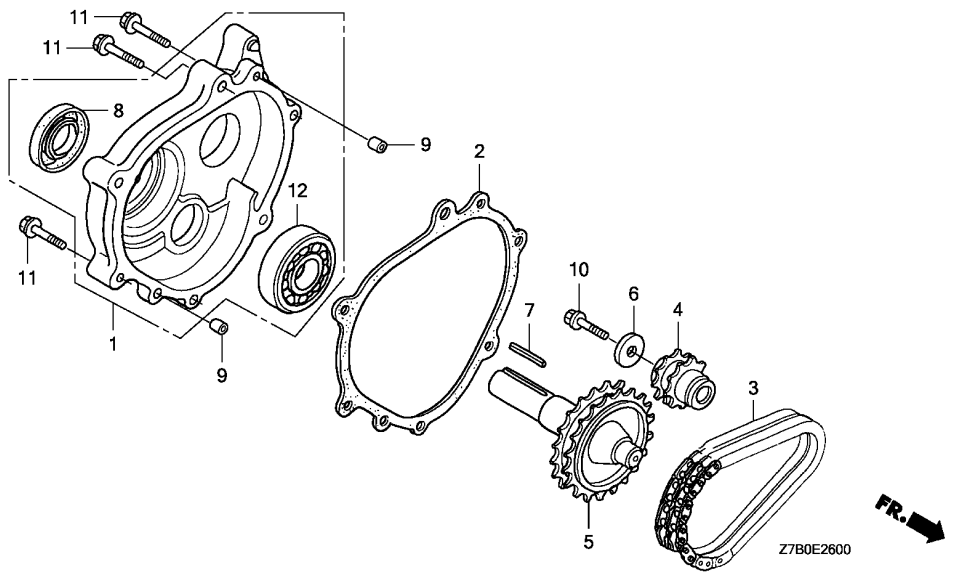

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2)	
	2141W9	CHAIN CASE COVER AND/OR PACKING(L-TYPE) ----------	0.2
3	2141W2	CHAIN, POWER TAKE OFF DRIVE (L-TYPE) ----------	0.2
4	2141X0	SPROCKET, POWER TAKE OFF DRIVE CHAIN(L-TYPE) ----------	0.2
5	2141V7	SHAFT, POWER TAKE OFF(L-TYPE)	0.2
8	2141X3	OIL SEAL, POWER TAKE OFF SHAFT (L-TYPE) :REAR ----------	0.3
12	2141X8	BEARING, POWER TAKE OFF SHAFT (L-TYPE) :REAR ----------	0.4

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	11500-Z7B-000	COVER ASSY., CHAIN CASE -----	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
2	11521-Z7B-701	PACKING, CHAIN CASE COVER (NINGBO SIL GASKET)	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
	11521-ZE2-800	PACKING, CHAIN CASE COVER ---	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
3	14411-ZE2-611	CHAIN, P.T.O. DRIVE ----------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
4	23110-ZE2-610	SPROCKET, DRIVE(14T) --------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
5	23710-ZE2-610	SHAFT, P.T.O.(28T) ----------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
6	90473-842-000	WASHER, 8MM ----------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
7	90741-805-000	KEY, 7X7X33 ----------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.) ---	(1)	(1)	-------- --------	LH,LH1,LH2,LHB5,LW
8	91001-Z7B-003	BEARING, RADIAL BALL, 6206 --	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
	91201-Z7B-003	OIL SEAL, 30X46X8 ----------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
9	94301-08140	DOWEL PIN, 8X14 ----------	2	2	-------- --------	LH,LH1,LH2,LHB5,LW
10	95701-08025-00	BOLT, FLANGE, 8X25 ----------	1	1	-------- --------	LH,LH1,LH2,LHB5,LW
11	95701-08040-00	BOLT, FLANGE, 8X40 ----------	6	6	-------- --------	LH,LH1,LH2,LHB5,LW
12	96100-62060-00	BEARING, RADIAL BALL, 6206 --	1	1	-------- --------	LH,LH1,LH2,LHB5,LW


E-26-1 REDUCTION(1/2)(CLUTCH)

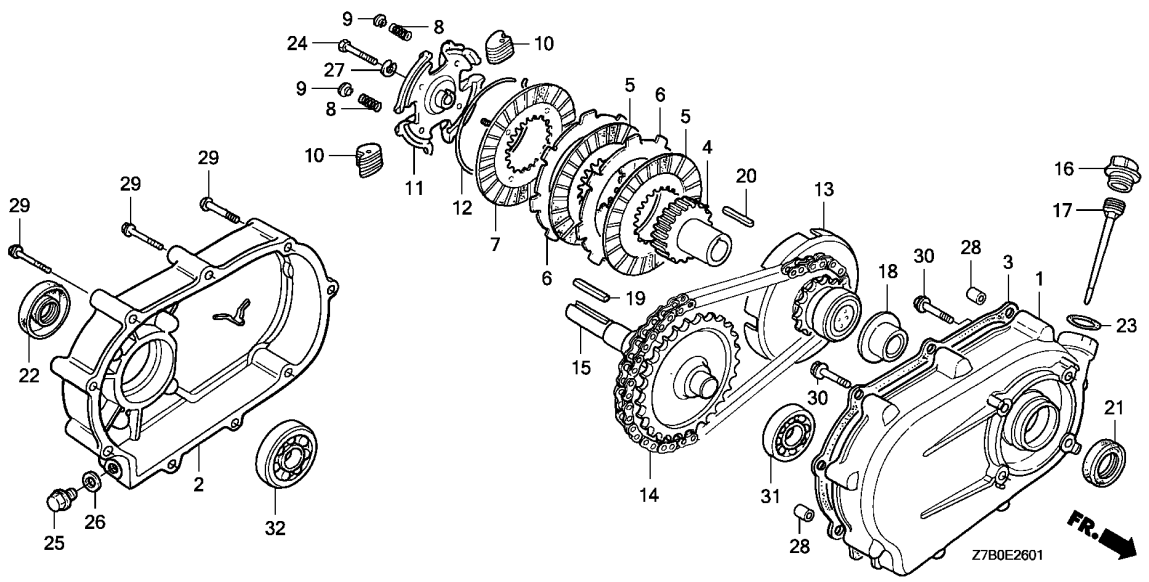

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2141Y6	CASE, REDUCTION(R-TYPE) ------	0.3
2	2141R1	COVER, REDUCTION ------------	0.3
3	2141R2	PACKING, REDUCTION COVER -----	0.2
5	2141Z0	DISC, REDUCTION CLUTCH FRICTION ------------------	0.2
6	2141Z1	PLATE, REDUCTION CLUTCH ------	0.2
7	2141Z2	PLATE, REDUCTION CLUTCH PRESSURE ------------------	0.3
13	2141X1	SPROCKET, POWER TAKE OFF DRIVE CHAIN(R-TYPE) -------------	0.3
14	2141W3	CHAIN, POWER TAKE OFF DRIVE (R-TYPE) ------------------	0.3
15	2141V8	SHAFT, POWER TAKE OFF(R-TYPE)	0.3
21	2141L4	OIL SEAL, POWER TAKE OFF SHAFT :FRONT -------------------	0.3
22	2141X4	OIL SEAL, POWER TAKE OFF SHAFT (R-TYPE) :REAR ------------	0.3
31	2141Y5	BEARING, POWER TAKE OFF SHAFT (R-TYPE) :FRONT ------------	0.4
32	2141X9	BEARING, POWER TAKE OFF SHAFT (R-TYPE) :REAR ------------	0.4


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	21510-889-750	CASE, REDUCTION ------------	1	1	-------- --------	RD
2	21610-889-750	COVER, REDUCTION ------------	1	1	-------- --------	RD
3	21691-889-750	PACKING, REDUCTION COVER ----	1	1	-------- --------	RD
	21691-Z7B-701	PACKING, REDUCTION COVER (NINGBO SIL GASKET)	1	1	-------- --------	RD
4	22121-889-750	CENTER, CLUTCH(28T) ---------	1	1	-------- --------	RD
5	22201-822-610	DISK, CLUTCH FRICTION -------	2	2	-------- --------	RD
6	22311-822-610	PLATE, CLUTCH ---------------	2	2	-------- --------	RD
7	22350-822-610	PLATE COMP., CLUTCH PRESSURE	1	1	-------- --------	RD
8	22411-822-611	SPRING, CLUTCH FREE ---------	4	4	-------- --------	RD
9	22421-822-610	HOLDER, CLUTCH SPRING -------	4	4	-------- --------	RD
10	22521-822-610	WEIGHT, CLUTCH --------------	48	48	-------- --------	RD
11	22531-889-750	HOLDER, CLUTCH WEIGHT -------	1	1	-------- --------	RD
12	22535-822-610	CENTER, CLUTCH WEIGHT -------	1	1	-------- --------	RD
13	23120-889-750	SPROCKET COMP., DRIVE(14T) --	1	-	-------- --------	RD
	23120-889-751	----------	-	1	-------- --------	RD
14	23161-822-611	CHAIN, DRIVE(RK428SH-36LE) --	1	1	-------- --------	RD
15	23711-822-610	SHAFT COMP., P.T.O.(28T) ----	1	1	-------- --------	RD
16	25620-805-612	CAP, REDUCTION OIL(GRAY) ----	1	1	-------- --------	RD
17	25651-889-750	GAUGE, OIL LEVEL ------------	1	1	-------- --------	RD
18	90403-889-000	WASHER, THRUST, 25MM --------	1	1	-------- --------	RD
19	90741-805-000	KEY, 7X7X33 -----------------	1	1	-------- --------	RD
	90741-889-810	KEY, 7X7X33(YELLOW)(O.S.) ---	(1)	(1)	-------- --------	RD
20	90741-889-000	KEY, CLUTCH CENTER ----------	1	1	-------- --------	RD
21	91201-890-003	OIL SEAL, 30X46X8 -----------	1	1	-------- --------	RD

E-26-1 REDUCTION(1/2)(CLUTCH)

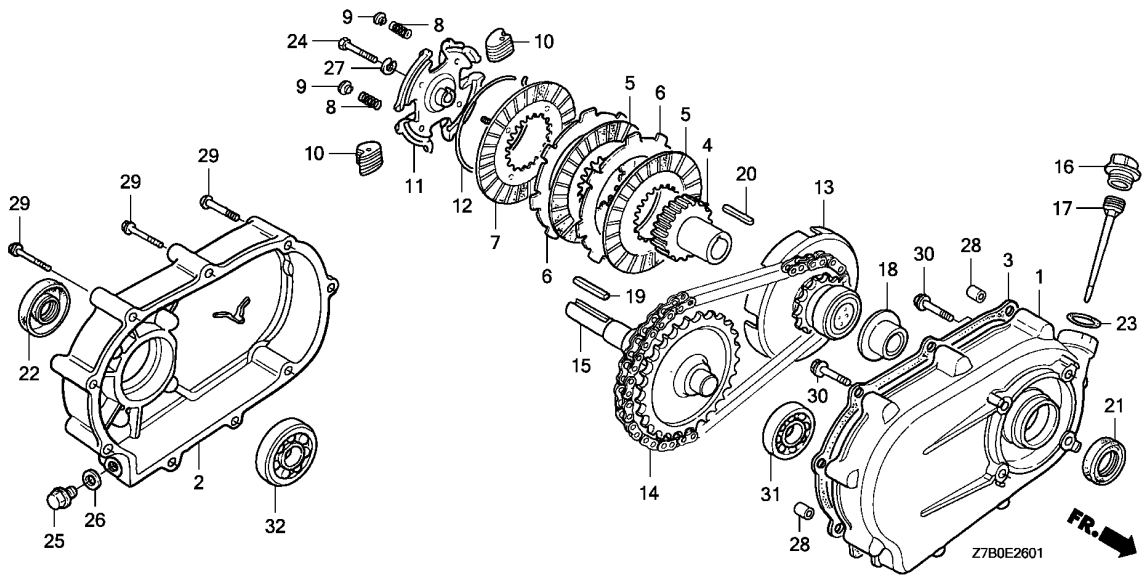

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
22	91202-Z2F-801	OIL SEAL, 30X50X7	1	1	-------- --------	RD
23	91301-805-000	O-RING, 26X2.7	1	1	-------- --------	RD
24	92101-08035-0A	BOLT, HEX., 8X35	1	1	-------- --------	RD
25	92800-12000	BOLT, DRAIN PLUG, 12MM	1	1	-------- --------	RD
26	94109-12000	WASHER, DRAIN PLUG, 12MM	1	1	-------- --------	RD
27	94111-08800	WASHER, SPRING, 8MM	1	1	-------- --------	RD
28	94301-08140	DOWEL PIN, 8X14	2	2	-------- --------	RD
29	95701-06050-08	BOLT, FLANGE, 6X50	9	9	-------- --------	RD
30	95701-08032-08	BOLT, FLANGE, 8X32	4	4	-------- --------	RD
31	96100-62050-00	BEARING, RADIAL BALL, 6205	1	1	-------- --------	RD
32	91001-Z7B-003	BEARING, RADIAL BALL, 6206	1	1	-------- --------	RD
	96100-62060-00		1	1	-------- --------	RD


LABEL

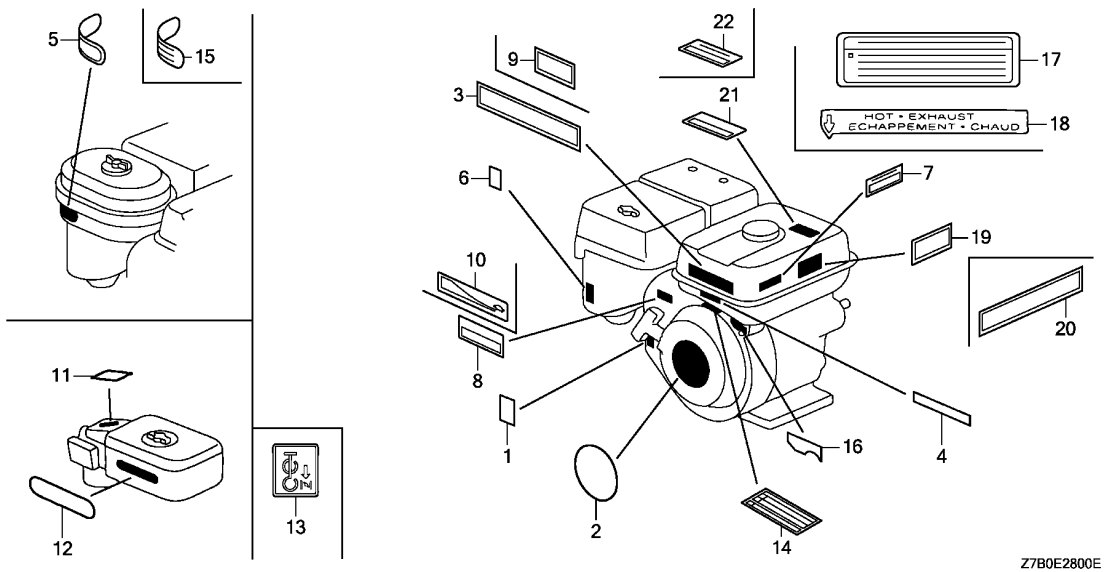

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			


Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	87114-ZH7-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QD,QD1,QDBR,QH,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VKK,VMT,VS4,VSD4 VX,VX1,VXK,VXP6,VXPE,VXPR
	87114-ZH7-840	----------	1	-	--------	--------	QBE1,QHB1,VSP
2	87521-ZH9-040	EMBLEM(GX270) ----------	1	1			
3	87522-ZH9-010	LABEL, CAUTION(ENGLISH, ETC.)	1	-	--------	--------	LH,QD,RD,SD,SH,VX
	87522-Z1T-G21	LABEL, CAUTION ----------	1	-	--------	--------	LH1,LHB5,PX,QD1,QH,QHB5,QHP1,QMH,QN,QP,QX,SD1,SH1,SX,VX1
	87516-Z1T-800	MARK, OPERATOR CAUTION(KOREAN)	1	-	--------	--------	QXCK,QXE9,QXK,VXK
	87522-Z7E-800	LABEL, CAUTION(ENGLISH, ETC.)	1	-	--------	0053888	LW
4	87522-Z1T-J00	LABEL, CAUTION(CHINESE) -----	1	-	--------	--------	LH,LW,QD,RD,SD,SH
			1	-	0000025	--------	VX
5	87524-Z7E-000	MARK, AIR CLEANER CAUTION (OIL BATH)	1	-	--------	--------	LW
6	87528-Z7E-000	MARK, CHOKE ----------	1	1	--------	--------	LH,LH1,LH2,LHB5,LW,PX,QD,QD1,QDBR,QH,QHB5,QHP1,QMH,QN,QP,QX,QXBR,QXC9 QXCK,QXE9,QXHQ,QXK,RD,SD,SD1,SH,SH1,SH8,SHH,SX,SXH,VX,VX1,VXK
	87528-ZH7-000	MARK, CHOKE(GRAY) ----------	1	-	--------	--------	QBE1,QHB1,VSP
7	87532-ZH8-810	MARK, OIL ALERT(ENGLISH) ----	1	-	--------	--------	PX,QX,QXCK,QXK,SX,VX,VX1,VXK
	87532-ZK7-800	MARK, OIL ALERT ----------	1	-	--------	--------	QXBR
	87532-Z7E-010	----------	1	-	--------	--------	SXH
8	87532-Z7E-010	MARK, OIL ALERT ----------	1	-	--------	--------	QXHQ
	87532-Z7E-000	----------	1	-	0000025	0005234	VX
	87532-Z7E-010	----------	1	-	0005235	--------	VX
9	87516-ZK6-810	MARK, OPERATOR CAUTION (CHINESE)(MADE IN CHINA)	1	-	--------	--------	LH,LW,QD,QXC9,QXHQ,RD,SD,SH,SH8,SHH,SX,SXH,VSP,VX,VXP6,VXPE,VXPR
	87516-Z1V-800	MARK, OPERATOR CAUTION ------	1	-	--------	--------	LH2
	87519-Z4N-000	MARK, OPERATOR CAUTION (PICTOGRAPH)	1	-	--------	--------	QBE1,QDBR,QHB1,QXBR,VSP

LABEL

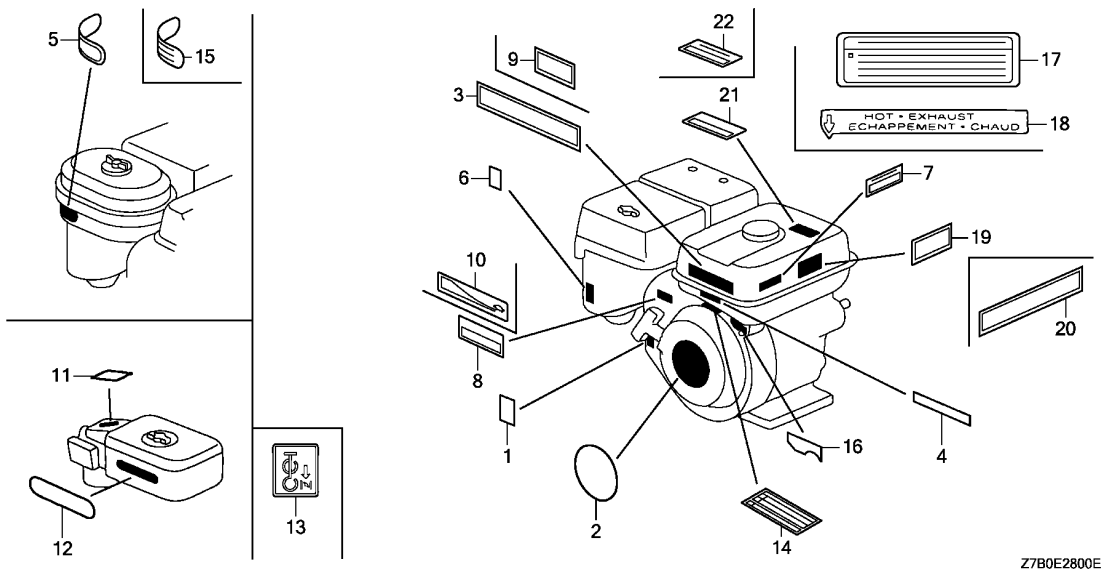

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
10	87532-ZH7-000	MARK, THROTTLE INDICATION ---	1	-	--------	--------	QBE1,QHB1,QXC9,QXCK
11	87534-ZE1-841	LABEL, AIR CLEANER CAUTION --	1	-	--------	--------	QXC9
12	87535-ZE1-841	MARK, AIR CLEANER SALES POINT	1	-	--------	--------	QXC9,QXCK
13	87528-898-620	MARK, CHOKE ----------	1	1	--------	--------	VKK,VMT,VS4,VSD4,VXP6,VXPE,VXPR
14	87516-Z1T-800	MARK, OPERATOR CAUTION(KOREAN)	1	-	--------	--------	VKK,VSD4
			(1)	-	--------	--------	VS4
15	87524-ZOT-800	MARK, AIR CLEANER CAUTION (OIL BATH)	1	-	--------	--------	QP
16	87532-ZH9-W41	MARK, ENGINE SWITCH ----------	1	-	--------	--------	VSD4
17	87533-ZCO-630	MARK, AIR CLEANER(ENGLISH) --	1	-	--------	--------	VMT,VS4
18	87539-898-620	MARK, EX. CAUTION (ENGLISH/FRENCH)	1	-	--------	--------	VMT,VS4
19	87516-ZK6-810	MARK, OPERATOR CAUTION (CHINESE)(MADE IN CHINA)	-	1	--------	--------	LH,QD,QXHQ,RD,SH,SHH,SX,VX,VXP6,VXPR
20	87522-Z1T-G21	LABEL, CAUTION ----------	-	1	--------	--------	LH1,PX,QD1,QH,QHP1,QMH,QN,QX,SD1,SH1,SX,VX1
21	87532-Z7E-010	MARK, OIL ALERT ----------	-	1	--------	--------	QXHQ,VX
22	87532-ZH8-810	MARK, OIL ALERT(ENGLISH) ----	-	1	--------	--------	PX,QX,SX,VX1


TOOL

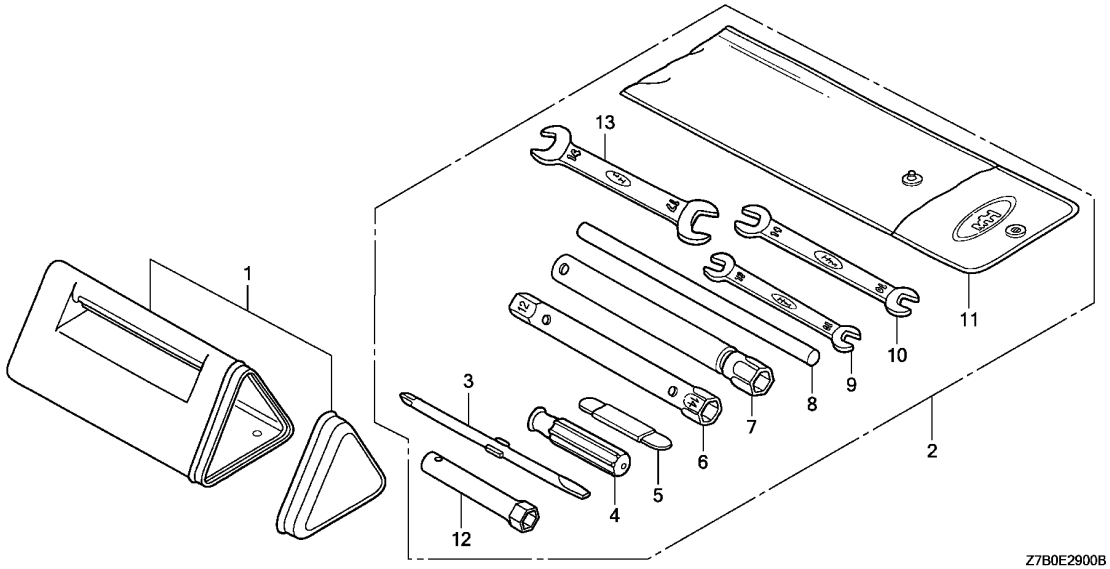

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	83501-ZF1-000	BOX, TOOL ----------	1	-	--------	--------	LW
2	89001-ZF1-000	BAG SET, TOOL ----------	1	-	--------	--------	LW
3	89102-538-000	DRIVER, SCREW(NO.2 + -) -----	1	-	--------	--------	LW
4	89103-538-000	GRIP ----------	1	-	--------	--------	LW
5	89210-ZF1-000	GAUGE ASSY., THICKNESS ------	1	-	--------	--------	LW
6	89216-ZF1-000	WRENCH, BOX ----------	1	-	--------	--------	LW
7	89218-ZE1-000	WRENCH COMP., SPARK PLUG ----	1	1	--------	--------	LHB5,LW,QHB5,QHP1,QMH,QN,QP,VKK
8	89219-805-000	HANDLE, BOX WRENCH ----------	1	1	--------	--------	LHB5,LW,QHB5,QHP1,QMH,QN,QP
9	99001-10120	SPANNER, 10X12 ----------	1	1	--------	--------	LW,QN
10	99001-10140	SPANNER, 10X14 ----------	1	-	--------	--------	LW
11	99008-02300	BAG, TOOL, 230MM ----------	1	-	--------	--------	LW
12	89216-ZB4-000	WRENCH, PLUG ----------	1	-	--------	--------	VMT,VS4
13	99001-14170	SPANNER, 14X17 ----------	1	1	--------	--------	QN

E-40 OTHER PARTS(1)

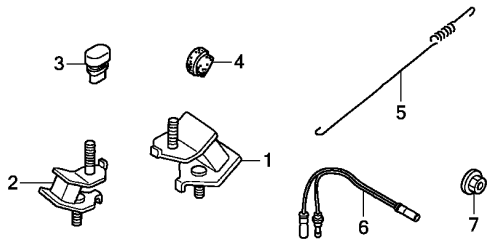


Z7B0E4000A

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.		Parts catalogue code
1	68325-899-000	RUBBER, BOTTOM ----------	2	-	--------	--------	VS4
2	68325-ZB4-000	RUBBER, BOTTOM ----------	2	-	--------	--------	VS4
3	76122-952-000	STOPPER, DISCHARGE GUARD ----	4	-	--------	--------	VS4
4	90855-ZB4-000	GROMMET, CRANKCASE ----------	1	-	--------	--------	VMT
5	16561-ZK9-800	SPRING, GOVERNOR ----------	1	1	--------	--------	VXP6
6	32197-Z1T-000	SUB HARNESS ----------	1	1	--------	--------	VXP6
7	94050-08000	NUT, FLANGE, 8MM ----------	2	2	--------	--------	VXP6

OTHER PARTS(2)

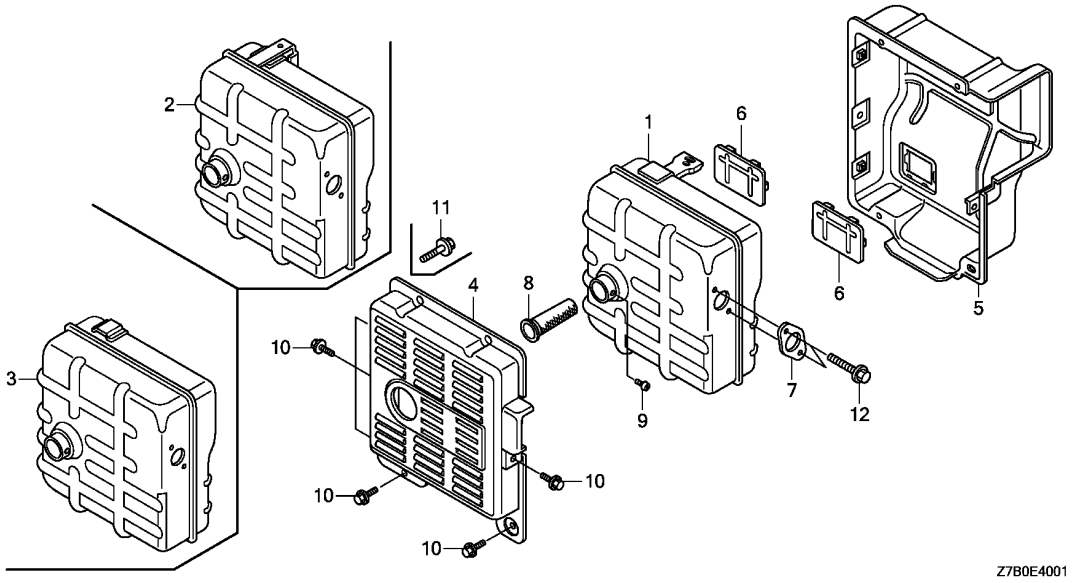

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			

Ref. No.	Part No.	Description	Reqd. QTY GX 270 H	GX 270 H2	Serial No.	Parts catalogue code
1	18310-Z1C-842	MUFFLER COMP. ----------	1	-	-------- --------	VMT
2	18310-Z1D-802	MUFFLER COMP. ----------	1	-	-------- --------	VSD4
3	18310-Z8W-V62	MUFFLER COMP.(TSURUMI) ------	1	-	-------- --------	VKK,VS4
4	18320-ZB4-000	PROTECTOR, MUFFLER OUTER ----	1	-	-------- --------	VKK,VMT,VS4
5	18325-ZB4-000	PROTECTOR, MUFFLER INNER ----	1	-	-------- --------	VKK,VMT,VS4
6	18329-ZB4-000	SEAL, MUFFLER PROTECTOR -----	2	-	-------- --------	VKK,VMT,VS4
7	18333-ZB4-801	GASKET, EX. PIPE ------------	1	-	-------- --------	VKK,VMT,VS4,VSD4
8	18355-ZB4-630	ARRESTER, SPARK -------------	1	-	-------- --------	VKK,VSD4
9	90002-ZE2-U91	SCREW, TAPPING, 4X8 ---------	1	-	-------- --------	VKK,VSD4
10	95701-06012-00	BOLT, FLANGE, 6X12 ----------	8	-	-------- --------	VKK,VS4
	95701-06010-00	BOLT, FLANGE, 6X10 ----------	8	-	-------- --------	VMT
11	95701-08016-08	BOLT, FLANGE, 8X16 ----------	2	-	-------- --------	VKK,VSD4
12	95701-08020-08	BOLT, FLANGE, 8X20 ----------	2	-	-------- --------	VKK
	95701-08020-00	----------	2	-	-------- --------	VMT,VSD4

PART NO. INDEX

Part Number	Page	Ref.
06000		
06280-Z7B-305	45	20
11000		
11300-Z1D-600	30	1
11300-Z1D-820	30	1
11300-Z7B-000	30	1
11300-Z7B-700	34	1
11300-Z7B-800	30	1
11300-Z7B-810	33	1
11300-Z7B-830	30	1
11300-ZE2-602	30	1
11315-ZE2-700	34	2
11381-Z5K-000	30	2
	33	2
11381-Z7B-701	30	2
	33	2
	34	3
11381-ZE2-801	30	2
	33	2
	34	3
11500-Z7B-000	85	1
11521-Z7B-701	85	2
11521-ZE2-800	85	2
12000		
12000-Z1D-406	28	1
12000-Z5K-405	28	1
12000-Z5K-406	28	1
12000-Z7B-405	28	1
12000-Z7B-406	28	1
12000-Z7B-407	28	1
12000-Z7B-408	28	1
12000-ZH9-406	28	1
12000-ZH9-407	28	1
12200-Z1D-405	25	1
12200-Z7B-000	25	1
12200-ZH9-405	25	1
12204-Z7E-305	25	2
12204-ZE2-306	25	2
12205-Z7E-305	25	3
12205-ZE2-305	25	3
12209-Z7E-003	40	1
12209-ZE8-003	40	1
12210-Z7B-405	25	1
12216-ZE2-300	25	4
12251-Z1D-801	25	5
12251-Z5K-003	25	5
12251-ZH9-000	25	5
12251-ZH9-010	25	5
12310-ZE2-020	25	6
12310-ZE3-791	26	6
12315-ZE3-840	26	13
12357-Z5T-020	26	13
12391-ZE2-020	26	7
13000		
13010-Z5H-004	36	1
	37	1
13010-Z5K-003	37	1
13010-Z7B-701	36	1
13010-Z7B-931	37	1
13010-ZE8-601	37	1
13010-ZE8-602	37	1
13011-Z5H-004	36	1
	37	1
13011-Z5K-003	37	1
13011-Z7B-701	36	1
13011-Z7B-931	37	1
13011-ZE8-601	37	1
13011-ZE8-602	37	1
13012-Z5H-004	36	1
	37	1
13012-Z5K-003	37	1
13012-Z7B-701	36	1
13012-Z7B-931	37	1
13012-ZE8-601	37	1
13012-ZE8-602	37	1
13013-Z5H-004	36	1
	37	1
13013-Z5K-003	37	1
13013-Z7B-701	36	1
13013-Z7B-931	37	1
13013-ZE8-601	37	1
13013-ZE8-602	37	1
13101-Z7B-800	37	2
	38	2
13101-Z7B-930	38	2
13101-ZH9-000	37	2
13101-ZH9-010	37	2
	38	2
13102-Z7B-800	37	2
	38	2
13102-Z7B-930	38	2
13102-ZH9-000	37	2
13102-ZH9-010	37	2
	38	2
13103-Z7B-800	37	2
	38	2
13103-Z7B-930	38	2
13103-ZH9-000	37	2
13103-ZH9-010	38	2
13104-Z7B-800	37	2
	38	2
13104-Z7B-930	38	2
13104-ZH9-000	37	2
13104-ZH9-010	38	2
13111-Z5K-000	38	3
13111-Z7B-000	38	3
13111-ZE2-000	38	3
13200-Z1D-000	39	4
13200-Z1D-305	39	4
13200-Z7B-000	38	4
	39	4
13200-Z7B-305	38	4
13200-ZE2-010	39	4
13200-ZE2-305	38	4
13310-Z7B-000	35	1
13310-Z7B-010	35	1
13310-Z7B-651	35	7
13310-Z7B-670	35	6
13310-Z7B-671	35	6
13310-Z7B-700	35	8
13310-Z7B-800	35	2
13310-Z7B-801	35	2
13310-Z7B-820	35	3
13310-Z7B-821	35	3
13310-Z7B-840	35	6
13310-Z7B-841	35	6
13310-ZH9-671	35	6
13310-ZH9-841	35	6
14000		
14100-Z7B-930	40	2
14100-ZE3-020	40	2
14100-ZH9-010	40	2
14410-Z1D-000	40	3
14410-Z7B-000	40	3
14410-ZE2-013	40	3
14411-ZE2-611	85	3
14431-ZE2-010	40	4
14441-Z7E-000	40	5
14441-ZE2-000	40	5
14451-Z7E-000	40	6
	41	6
14451-ZE1-013	40	6
14568-ZE1-000	41	7
14711-Z5K-900	41	8
14711-Z7B-000	41	8
14711-ZE2-000	41	8
14721-Z5K-900	41	9
14721-Z7B-000	41	9
14721-ZE2-000	41	9
14751-Z1C-000	41	10
14751-Z7E-000	41	10
14751-ZE2-003	41	10
14771-ZE2-000	41	11
		12
14773-ZE2-000	41	12
14775-ZE2-010	41	13
14781-Z7E-000	42	14
14781-ZE2-000	42	14
14791-Z7E-000	42	15
14791-ZE2-010	42	15
15000		
15600-735-003	30	4
15600-Z1C-000	30	4
15600-Z1T-600	30	3
	33	3
15600-Z7E-000	30	4
	33	4
15620-Z7E-800	34	4
15625-Z0T-800	31	5
	33	5
15625-Z1T-000	31	6
	33	6
15625-ZE1-003	31	5
15721-Z23-H60	27	17
15721-ZB4-000	27	17
16000		
16010-Z7B-931	57	1
16010-Z7E-971	53	1
16010-ZE2-812	53	1
16010-ZE3-701	57	1
16010-ZF5-900	57	1
16011-ZA0-931	53	2
	57	2
16013-Z1C-003	53	3
	57	3
16015-Z7E-971	53	4
	57	4
16015-ZA0-931	59	45
16015-ZE8-005	53	4
	57	4
16016-Z1E-V21	57	5
16016-ZA0-931	59	46
16016-ZH7-W01	53	5
16016-ZH8-W01	53	5
	57	5
16024-124-760	59	47
16024-Z5T-901	53	6
	57	6
16024-ZE1-811	53	6
	57	6
16028-Z1T-WA1	53	7
	57	7
16028-ZA0-931	59	48
16028-ZE0-005	53	7
	57	7
16044-ZE2-005	53	8
16100-Z5K-V01	57	8
16100-Z7B-811	54	9
16100-Z7B-821	54	9
16100-Z7B-921	54	9
16100-Z7B-931	57	8
16100-Z7B-D41	57	8
16100-Z7B-V01	57	8
16100-Z7B-V11	57	8
16100-Z7C-801	54	9
16124-ZE0-005	54	10
	57	9
16141-Z0S-003	56	28
	59	54
16148-141-881	57	10
16166-Z7B-921	54	11
16166-ZH9-820	54	11
	57	11
16166-ZH9-W00	54	11
16166-ZH9-W20	54	11
16172-ZE3-W10	54	12
	57	12
16173-001-004	54	13
	73	17
16211-Z7B-000	54	14
16211-Z7B-010	54	14
16211-Z7B-700	57	13
16211-ZE2-000	54	14
16211-ZE2-701	57	13
16212-Z5K-000	55	17
	58	15
16212-Z7B-701	55	17
	58	15
16220-ZA0-702	55	15
	59	55
16221-Z5K-000	55	16
	58	14
16221-Z7B-701	55	16
	57	14
16221-ZA0-800	55	16
	58	14
16223-ZA0-800	55	17
	58	15
16230-ZE3-702	59	49
16252-ZA1-010	82	1
16260-Z7E-000	58	16
16260-Z7E-800	58	16
16261-ZE2-702	58	17
16262-ZE2-711	58	18
16263-Z7B-000	58	19
16264-ZE2-701	58	20
16265-Z7E-000	58	21
16268-893-000	82	2
16268-ZE2-721	58	22
16270-ZB4-010	82	3
16271-ZB4-000	82	4
16271-ZE2-010	62	1
	63	1
	64	1
16273-ZB4-000	82	5
16400-ZE2-704	58	24
16500-Z5K-000	80	5
16500-Z5K-810	80	6
16500-Z5K-830	81	25
16500-Z5K-880	81	23
16500-ZE2-703	27	18
16510-Z7B-000	31	7
	33	7
	34	5
16510-ZE2-000	31	7
16510-ZE3-000	31	7
16511-ZE2-000	31	8
	33	8
	34	6
16511-ZE8-000	31	8
16512-Z7B-000	31	9
	33	9
	34	7
16512-ZE2-000	31	9
16512-ZE3-000	31	9
16513-ZE2-000	31	10
	33	10
	34	8
16531-Z0A-000	31	11
	33	11
	34	9
16541-Z7B-000	28	2
16541-ZE2-010	28	2
16550-ZE2-700	81	24
16551-ZE2-000	80	1
16555-ZE2-000	80	2
16561-ZE2-000	80	3
16561-ZE3-710	80	3
16561-ZK6-D70	80	3
16561-ZK9-800	80	3
	91	5
16562-ZE2-000	80	4
16562-ZE2-700	80	4
16570-ZE2-701	81	23
16570-ZE2-722	81	21
16570-ZE2-W00	80	5
16570-ZE2-W20	80	6
16570-ZE2-W50	81	25
16571-ZE2-W00	80	7
16574-ZE1-000	80	8
16575-ZE2-W00	80	9
16576-891-000	80	10
16578-ZE1-000	81	11
16580-Z5K-000	81	12
16581-ZE2-W00	81	12
16584-883-300	81	13
16592-883-310	81	14
16594-883-010	81	26
16599-ZG1-M10	81	27
16610-Z1T-000	55	18
16611-ZE2-711	58	25
16611-ZE3-D21	58	25
16613-893-000	58	26
16615-893-000	58	27
16731-Z7E-000	50	1
16731-ZE2-003	50	1
16854-ZH8-000	72	1
16910-GB2-005	73	12
16950-ZB4-015	73	18
16952-ZB4-005	73	19
16953-ZDK-003	55	19
16953-ZE1-812	55	19
16954-ZE1-812	55	20
16955-Z1T-010	72	2
16956-ZE1-811	55	21
16957-ZE1-812	55	22
16958-397-771	73	20
16959-471-831	73	21
16967-GA6-671	73	22
16967-ZE0-811	55	23

PART NO. INDEX

Part Number	Page	Ref.
17000		
17210-Z7B-931	66	1
17210-ZE2-822	63	2
17210-ZE3-010	64	2
17211-899-000	65	1
17211-Z7B-003	60	1
17211-ZE2-000	60	1
17212-Z7B-003	60	2
17212-ZB4-003	65	2
17212-ZE2-000	60	2
17212-ZE2-810	62	2
17218-ZE2-821	63	3
17218-ZE3-000	64	3
17219-ZE3-840	64	4
17220-Z23-S30	65	13
17220-ZB4-013	65	3
17222-Z21-F60	65	4
17222-ZB4-000	65	4
17223-Z23-000	65	14
17223-ZBH-000	65	15
17228-Z5T-000	58	23
	59	55
17229-Z23-H60	65	16
17230-ZE3-841	64	5
17231-899-000	65	5
17231-Z7B-003	60	3
17231-Z7B-930	66	2
17231-ZBH-000	65	17
17231-ZE2-000	60	3
17231-ZE2-810	62	3
17231-ZH9-820	63	4
17232-891-000	63	5
	64	6
17232-Z1V-601	66	3
17233-896-701	68	10
17233-Z23-H60	65	18
17235-899-000	65	6
17235-Z7B-930	66	4
17235-ZE2-820	63	12
17236-899-000	65	7
17238-Z7B-003	60	4
	66	5
17238-ZE2-310	60	4
	62	4
	63	6
	64	7
17238-ZE7-710	65	19
17238-ZG9-M00	65	20
17239-Z1T-601	60	5
	66	6
17239-ZE1-000	60	5
	62	5
	63	7
17239-ZE3-840	64	8
17252-899-000	65	8
17316-611-000	27	16
17367-413-690	65	9
17402-ZE2-810	62	6
17403-ZE2-810	62	7
17410-Z7B-003	60	6
17410-Z7B-013	60	6
17410-Z7B-930	66	7
17410-ZE2-020	60	6
	62	8
	63	8
17410-ZE2-030	62	8
	63	8
17410-ZE3-841	64	9
17417-Z5T-000	66	8
17420-ZE2-000	60	7
	62	9
17421-Z7B-003	60	7
17470-ZE3-842	64	10
17475-ZE3-841	64	11
17476-ZE3-841	64	12
17510-Z5K-000ZA	72	3
17510-Z5K-000ZB	72	3
17510-ZE2-020ZA	72	3
17510-ZE2-020ZD	72	3
17510-ZE2-801ZA	72	3
17510-ZE2-801ZC	72	3
17620-899-800	72	4
17620-Z0T-305	72	4
17620-Z1T-800	72	4
17630-Z8V-003	73	23
17631-899-000	72	5
17631-Z0T-812	72	5
17631-Z1T-800	72	5
17670-899-000	73	24
17672-899-000	73	24
17672-Z1T-000	73	6
18000		
18310-Z1C-842	92	1
18310-Z1D-802	92	2
18310-Z7B-930	69	27
18310-Z8W-V62	92	3
18310-ZE2-W00	67	1
18310-ZE2-W01	67	1
18310-ZE2-W61	70	1
18310-ZE2-W62	70	1
18320-Z5K-000	69	28
18320-ZB4-000	92	4
18320-ZE2-W01	67	2
18320-ZE2-W02	67	2
18320-ZE2-W62	70	2
18325-ZB4-000	92	5
18329-ZB4-000	92	6
18330-ZE2-700	71	1
18330-ZE2-W00	67	3
18330-ZH9-D40	71	1
18330-ZH9-N00	70	3
18331-Z5T-000	67	3
18331-ZE2-810	67	4
18331-ZE3-811	67	4
18333-Z7B-701	67	5
18333-ZB4-801	92	7
18333-ZE3-800	67	5
18333-ZE3-801	67	5
18333-ZF6-W01	67	5
	70	4
	71	2
18336-ZE3-000	69	29
18355-ZB4-630	92	8
18355-ZE2-010	68	11
18355-ZE2-W00	70	9
18381-Z1C-801	67	6
	68	6
	70	5
18381-ZE2-800	67	6
	70	5
18381-ZE2-801	67	6
	68	6
	70	5
18381-ZE2-W10	69	26
	70	10
18433-ZK9-W41	68	12
18434-ZK9-W41	68	13
18436-ZH8-W41	68	14
18437-Z5T-000	68	15
18466-ZH8-W40	68	16
19000		
19511-Z7B-000	74	1
19511-ZE2-000	74	1
19610-Z5K-000ZA	50	2
19610-Z5K-000ZC	50	2
19610-Z7B-000ZA	50	2
19610-Z7B-000ZB	50	2
19610-Z7B-D10ZB	52	1
19610-Z7B-D40ZA	50	2
19610-ZE2-010ZL	50	2
19619-ZL8-300	68	17
19631-Z5K-000	50	3
19631-ZE2-D00	50	3
	52	2
21000		
21510-889-750	86	1
21610-889-750	86	2
21691-889-750	86	3
21691-Z7B-701	86	3
22000		
22121-889-750	86	4
22201-822-610	86	5
22311-822-610	86	6
22350-822-610	86	7
22411-822-610	86	8
22421-822-610	86	9
22521-822-610	86	10
22531-889-750	86	11
22535-822-610	86	12
23000		
23110-ZE2-610	85	4
23120-889-750	86	13
23120-889-751	86	13
23161-822-611	86	14
23710-ZE2-610	85	5
23711-822-610	86	15
25000		
25620-805-612	86	16
25651-889-750	86	17
28000		
28400-Z7B-003ZA	43	1
28400-Z7B-003ZB	43	1
28400-Z7B-701ZA	45	14
28400-Z7B-701ZB	45	14
28400-Z7B-702ZA	47	1
28400-Z7B-702ZB	47	1
28400-ZE2-W01ZN	46	1
28410-Z7B-003ZA	43	2
28410-Z7B-003ZB	43	2
28410-Z7B-701ZA	43	2
	47	2
28410-Z7B-701ZB	43	2
	47	2
28410-ZE2-W01ZN	46	2
28420-Z7B-003	43	3
28420-Z7B-702	47	3
28421-ZE2-W01	46	3
28422-Z7E-701	45	15
	47	4
28422-ZE2-W01	46	4
28422-ZH8-801	43	4
28431-Z2E-003	48	5
28431-ZH8-801	43	5
28433-Z2E-003	44	6
28433-Z7B-702	48	6
28441-Z2E-003	44	7
	48	7
28441-ZE2-W01	46	5
28442-Z7E-003	44	8
	48	8
28442-ZE2-W01	46	6
28443-Z1T-701	45	18
	48	9
28443-ZE2-W01	46	7
28443-ZH8-801	44	9
28444-ZE2-W01	46	8
28450-Z7B-000	74	2
28450-Z7B-701	74	2
28450-ZE2-W11	74	2
28451-Z7B-000	74	3
28451-Z7B-701	74	3
28461-Z2E-003	44	10
	49	10
28461-ZE2-W02	46	9
28462-Z7B-003	44	11
28462-Z7B-701	44	11
	45	11
	49	11
28462-ZE2-W11	46	10
30000		
30500-Z1C-023	77	10
30500-Z7B-931	77	14
30500-Z7E-003	76	1
30500-Z7E-601	77	10
30500-Z7E-801	77	10
30500-ZF6-W03	77	10
30700-Z1T-003	76	2
30700-Z1T-601	76	2
30700-Z1T-701	76	2
30700-ZE1-013	76	2
30700-ZF5-013	76	2
31000		
31100-ZE2-010	74	4
31100-ZE2-822	75	5
31100-ZE2-832	75	8
31110-Z7B-602	74	4
31110-Z7B-612	75	5
31110-Z7B-801	74	4
31110-Z7B-811	75	5
31110-Z7B-931	75	4
31161-ZE2-000	29	15
31200-ZH9-013	78	1
31201-ZA1-003	78	2
31202-ZA1-003	78	3
31204-ZA0-003	78	4
31207-ZH9-003	78	5
31211-ZE2-003	78	6
31212-ZE2-003	78	7
31213-ZE2-003	78	8
31215-ZE2-003	78	9
31216-ZE2-003	78	10
31217-ZE2-003	78	11
31219-ZE2-003	78	12
31219-ZE3-003	79	27
31222-ZE3-791	78	13
31231-ZE2-003	78	14
31232-ZE3-003	78	15
31233-ZE2-003	78	16
31244-ZH9-003	78	17
31245-ZH9-003	78	18
31510-ZE2-811	76	3
31511-Z7B-000	76	4
31512-ZE2-000	76	5
31610-Z5J-811ZA	83	1
31610-ZE2-835ZE	83	2
31612-ZE2-003	83	3
31614-ZE2-003	83	4
31615-ZE2-003ZG	83	5
31630-ZE1-013	77	12
31630-ZE2-842	77	12
31700-124-008	83	6
32000		
32110-Z5K-000	77	15
32110-Z5K-800	77	15
32127-738-700	83	7
32197-Z1T-000	91	6
32197-ZE1-003	83	8
32902-892-003	83	9
34000		
34150-ZH7-013	29	9
34150-ZH7-023	29	9
	83	10
35000		
35100-ZE2-033	83	11
35100-ZE2-843	83	11
35111-880-013	83	12
35120-Z0D-V81	50	4
35120-Z7E-931	51	11
35480-Z7E-003	29	8
36000		
36100-ZF6-P82	50	6
36100-ZH9-V03	51	8
36101-ZE1-010	77	6
36101-ZE2-701	77	6
36103-V42-000	77	7
36103-ZE1-000	77	7
36135-ZF6-D41	58	28
36160-ZB4-013	82	6
36170-ZB4-013	59	50
38000		
38240-VA3-900	83	13
38250-ZA8-701	83	14
50000		
50319-ZB2-000	73	25
53000		
53149-964-003	58	29
68000		
68325-899-000	91	1
68325-ZB4-000	91	2

PART NO. INDEX

Part Number	Page	Ref.
76000		
76122-952-000	91	3
81000		
81329-567-020	50	7
83000		
83501-ZF1-000	90	1
87000		
87114-ZH7-000	88	1
87114-ZH7-840	88	1
87516-Z1T-800	88	3
	89	14
87516-Z1V-800	88	9
87516-ZK6-810	88	9
	89	19
87519-Z4N-000	88	9
87521-ZH9-040	88	2
87522-Z1T-G21	88	3
	89	20
87522-Z1T-J00	88	4
87522-Z7E-800	88	3
87522-ZH9-010	88	3
87524-Z0T-800	89	15
87524-Z7E-000	88	5
87528-898-620	89	13
87528-Z7E-000	88	6
87528-ZH7-000	88	6
87529-Z4T-840	83	15
87529-ZE2-812	83	15
87532-Z7E-000	88	8
87532-Z7E-010	88	7
		8
	89	21
87532-ZH7-000	89	10
87532-ZH8-810	88	7
	89	22
87532-ZH9-W41	89	16
87532-ZK7-800	88	7
87533-ZC0-630	89	17
87534-ZE1-841	89	11
87535-ZE1-841	89	12
87539-898-620	89	18
87565-ZB4-A00	73	26
88000		
88911-MJ3-000	58	30
89000		
89001-ZF1-000	90	2
89102-538-000	90	3
89103-538-000	90	4
89210-ZF1-000	90	5
89216-ZB4-000	90	12
89216-ZF1-000	90	6
89218-ZE1-000	90	7
89219-805-000	90	8
90000		
90001-Z7E-000	39	5
90001-ZE8-000	39	5
90002-ZE2-U91	92	9
90003-ZH8-801	45	12
	49	12
90004-Z5T-000	51	12
90004-ZE2-W01	46	11
90005-ZM3-000	65	21
90006-Z5T-000	68	18
90006-ZE2-000	69	30
	70	6
90007-ZE2-003	78	19
90008-Z1T-000	45	13
	49	13
90008-ZE2-003	46	12
90009-Z1C-000	60	8
	62	10
	63	9
	64	13
	66	9
90009-ZE2-003	60	8
	62	10
	63	9
	64	13
90012-ZE0-010	42	16
90013-883-000	29	10
	50	5
	51	9
	52	3
	77	8
	81	15
	82	7
	83	16
90014-ZE2-000	26	8
90015-883-000	77	9
		13
90015-ZE5-010	81	16
90016-ZG9-N30	81	28
90017-883-000	77	13
90019-883-000	34	10
90042-ZE2-000	26	9
90042-ZE2-700	26	9
90042-ZK2-D60	26	9
90050-ZE1-000	68	7
		19
	70	7
90050-ZH8-W40	68	20
90055-ZE1-000	68	8
		21
	70	11
90110-ZE2-003	78	20
90114-SA0-000	81	17
90131-883-000	28	3
90142-MB0-000	64	14
90201-Z1T-601	61	9
90201-ZE3-V00	75	6
90202-Z1T-000	81	17
90202-Z2E-000	66	10
90206-ZE1-000	42	17
90301-782-000	68	22
90302-KF9-900	68	23
90325-044-000	61	9
	62	11
	63	10
	64	15
	66	11
90380-MA6-010	83	17
90403-889-000	86	18
90403-ZH9-003	78	21
90431-ZE2-700	58	31
90432-ZE2-700	58	32
90433-ZE2-700	59	33
90434-ZE2-700	59	34
90441-ZE2-010	26	10
90446-KE1-000	28	4
90446-Z7E-000	28	4
90473-147-000	32	18
90473-842-000	85	6
90473-Z7B-000	32	18
90503-898-000	73	27
90551-ZE1-000	39	6
90601-Z7E-000	59	35
90602-Z7E-000	59	36
90602-ZE1-000	31	12
	33	12
	34	11
90603-Z7E-000	59	37
90605-230-000	81	29
90630-751-000	29	14
	79	26
90650-SD9-003	81	30
90654-SA4-003	51	10
	52	4
90672-SA0-003	83	18
90684-Z7E-000	77	11
90701-HC4-000	31	13
90701-Z7E-000	31	13
	33	13
	34	12
90741-805-000	35	4
	85	7
	86	19
90741-889-000	86	20
90741-889-810	35	4
	85	7
	86	19
90741-ZE2-000	75	7
90745-ZE2-600	35	4
90802-Z6L-000	65	22
90851-898-000	73	28
90854-ZB2-000	73	29
90854-ZB3-000	73	13
90855-ZB4-000	91	4
91000		
91001-Z7B-003	32	17
	33	17
	34	17
	85	8
	87	32
91001-ZH9-003	35	5
91002-Z7B-003	35	5
91201-890-003	28	5
	31	14
91201-Z1D-003	28	5
	29	5
	31	14
91201-Z7B-003	28	5
	29	5
	31	14
	34	13
	85	8
91202-Z2F-801	87	22
91301-805-000	34	14
	87	23
91353-671-004	73	7
91353-Z7E-003	29	11
91406-ZE2-003	83	19
91424-Z4J-802	73	14
91424-Z4J-803	73	14
91424-Z5F-802	73	9
91424-Z5J-802	73	15
91424-Z5J-803	73	15
91502-ZB4-701	82	8
91551-898-000	73	30
91601-ZE2-003	78	22
92000		
92101-08035-0A	87	24
92800-12000	87	25
92900-08032-0E	26	11
93000		
93500-03006-1H	55	24
93500-03012-0H	84	20
93500-04006-0H	81	31
93500-04012-0H	84	21
93500-05008-0A	82	9
93500-05012-0A	59	38
93500-05016-0A	81	18
93500-05028-0A	81	19
93500-05035-0A	81	22
93600-05010-0A	73	31
93891-06020-07	68	24
93892-05012-18	59	51
93892-05032-18	78	23
94000		
94001-04390-0S	84	22
94050-05000	65	10
94050-06000	61	10
	62	12
	63	11
	64	16
	65	11
	66	12
	63	11
	81	20
94050-06080	65	12
94050-08000	68	9
	70	8
	71	3
	73	8
	91	7
94050-10000	29	12
94070-06080	78	24
94101-04800	84	23
94101-06800	31	15
	33	14
	34	15
94103-05000	59	39
94103-05700	68	25
94109-12000	29	6
	87	26
94111-04800	84	24
94111-08800	87	27
94251-10000	29	7
94301-08140	85	9
	87	28
94301-12200	26	12
94305-20062	82	10
94305-20122	55	25
94540-04018	82	11
95000		
95001-45150-40	59	52
95001-45210-40	73	9
95001-45222-40	73	9
95001-45250-40	59	52
95001-45430-40	73	9
95002-02070	59	40
95002-02080	59	53
	73	10
95002-40800-08	73	16
		32
95005-11100-30	26	13
95005-35055-10	59	41
95005-35065-10	59	41
95005-35075-10	59	42
95005-35130-10	59	42
95701-06010-00	49	13
	92	10
95701-06012-00	29	13
95701-06032-08	65	23
95701-06050-08	87	29
95701-08016-08	92	11
95701-08020-00	92	12
95701-08020-08	92	12
95701-08025-00	73	11
	85	10
95701-08032-08	87	30
95701-08035-00	32	16
	33	15
	34	16
95701-08040-00	78	25
	85	11
95701-10080-00	26	14
95725-10080-00	26	14
96000		
96100-62040-00	33	16
96100-62050-00	87	31
96100-62060-00	32	17
	33	17
	34	17
	85	12
	87	32
98000		
98079-55841	27	15
98079-55846	26	15
	27	15
98079-55854	27	15
98079-55855	27	15
98079-55876	27	15
98079-56846	26	15
	27	15
98079-56855	27	15
98200-30500	84	25
98200-31500	84	25
99000		
99001-10120	90	9
99001-10140	90	10
99001-14170	90	13
99008-02300	90	11
99101-ZDK-0820	56	26
99101-ZDK-0850	56	26
99101-ZDK-0880	56	26
	59	43
99101-ZDK-0900	59	43
99101-ZDK-0920	59	43
99101-ZH8-0800	55	26
99101-ZH8-0820	55	26
99101-ZH8-0850	55	26
	59	43
99101-ZH8-0880	55	26
	59	43

PART NO. INDEX

Part Number	Page	Ref.
99101-ZH8-0900	55	26
	59	43
99101-ZH8-0920	55	26
	59	43
99204-ZE0-0380	56	27
99204-ZE2-0400	56	27
	59	44

PART NAME INDEX

Part name	Page	Ref.
[A]		
ALERT UNIT, OIL	29	9
	83	10
ARMATURE COMP.	78	11
ARM COMP., GOVERNOR	81	24
ARM, GOVERNOR	80	1
ARM, VALVE ROCKER	40	4
ARRESTER, SPARK	68	11
	70	9
	92	8
AUTO-THROTTLE ASSY.	82	3
[B]		
BAG SET, TOOL	90	2
BAG, TOOL, 230MM	90	11
BAND	83	9
BARREL ASSY., CYLINDER	28	1
BASE COMP., AIR CLEANER	65	15
BASE COMP., CONTROL	81	12
BASE COMP., MUFFLER COVER	68	14
BEARING, BALL RADIAL, 6206SH2	35	5
BEARING, RADIAL BALL	35	5
BEARING, RADIAL BALL, 6204	33	16
BEARING, RADIAL BALL, 6205	87	31
BEARING, RADIAL BALL, 6206	32	17
	33	17
	34	17
	85	8
		12
	87	32
BOLT-WASHER, 5X14	78	19
BOLT-WASHER, 6X22	60	8
	62	10
	63	9
	64	13
	66	9
BOLT, CONNECTING ROD	39	5
BOLT, DRAIN PLUG, 12MM	87	25
BOLT, DRAIN PLUG, 12X15	28	3
BOLT, FLANGE, 10X80	26	14
BOLT, FLANGE, 5X10	34	10
BOLT, FLANGE, 5X18	65	21
BOLT, FLANGE, 6X10	45	13
	46	12
	49	13
	92	10
BOLT, FLANGE, 6X12	29	10
		13
	50	5
	51	9
	52	3
	77	8
	81	15
	82	7
	83	16
	92	10

Part name	Page	Ref.
BOLT, FLANGE, 6X28	77	9
		13
BOLT, FLANGE, 6X32	65	23
	77	13
BOLT, FLANGE, 6X50	87	29
BOLT, FLANGE, 8X16	92	11
BOLT, FLANGE, 8X20	92	12
BOLT, FLANGE, 8X25	73	11
	85	10
BOLT, FLANGE, 8X32	87	30
BOLT, FLANGE, 8X35	32	16
	33	15
	34	16
BOLT, FLANGE, 8X40	78	25
	85	11
BOLT, GOVERNOR ARM	81	16
BOLT, HEAD COVER	26	8
BOLT, HEX., 8X35	87	24
BOLT, PIVOT, 8MM	42	16
BOLT, STUD, 8X106	26	9
BOLT, STUD, 8X123	26	9
BOLT, STUD, 8X32	26	11
BOLT, STUD, 8X98	26	9
BOX ASSY., CONTROL	83	1
		2
BOX, TOOL	90	1
BRACKET, CASE MOUNTING	83	4
BRACKET, CENTER	78	6
BRACKET, FR.	78	7
BRUSH	78	9
BUSH, ARM PIVOT	58	29
BUSH, AUTO-THROTTLE LEVER	82	8
[C]		
CAMSHAFT ASSY.	40	2
CAP ASSY., NOISE SUPPRESSOR	76	2
CAP ASSY., OIL FILLER	30	3
		4
	33	3
		4
CAP COMP., AIR CLEANER	60	7
	62	9
CAP COMP., FUEL FILLER	72	4
CAP, AIR CLEANER	60	7
CAP, CHOKE DUST	57	10
CAP, CHOKE LEVER	82	1
CAP, MUFFLER	67	4
CAP, OIL FILLER	34	4
CAP, PRE AIR CLEANER	64	11
CAP, REDUCTION OIL	86	16
CAP, SEALING	65	22
CARBURETOR ASSY.	54	9
	57	8
CASE COMP., AIR CLEANER	65	3
		13
CASE COMP., PRE AIR CLEANER	64	10

Part name	Page	Ref.
CASE COMP., RECOIL STARTER	43	2
	46	2
	47	2
CASE, CONTROL	83	3
CASE, REDUCTION	86	1
CENTER, CLUTCH	86	4
CENTER, CLUTCH WEIGHT	86	12
CHAIN, DRIVE	86	14
CHAIN, P.T.O. DRIVE	85	3
CHAMBER SET, FLOAT	53	4
	57	4
	59	45
CHOKE SET	53	8
CIRCLIP, 5MM	81	29
CLAMPER, CORD	76	4
CLAMP, TUBE	73	16
		32
CLIP A, AIR CLEANER WIRE	65	6
CLIP B, AIR CLEANER WIRE	65	7
CLIP, BREATHER TUBE	27	16
CLIP, GOVERNOR HOLDER	31	12
	33	12
	34	11
CLIP, HARNESS	77	11
CLIP, PISTON PIN, 18MM	39	6
CLIP, PURSE LOCK	29	14
	79	26
CLIP, TUBE	50	1
	59	40
		53
	73	10
CLIP, VALVE GUIDE	25	4
CLIP, WIRE HARNESS	81	30
CLIP, WIRE HARNESS, 6MM	51	10
	52	4
CLUTCH COMP., OVERRUNNING	78	5
COCK ASSY., FUEL	73	18
COIL ASSY., CHARGE	77	12
COIL ASSY., IGNITION	76	1
	77	10
		14
COIL ASSY., LAMP	76	3
COLLAR B, AIR CLEANER	60	5
	62	5
	63	7
	64	8
	66	6
COLLAR, AIR CLEANER	60	4
	62	4
	63	6
	64	7
	65	19
		20
	66	5
COLLAR, AIR CLEANER CASE	68	10
COLLAR, CLUTCH STOP	78	3
COLLAR, FAN COVER	68	17
COLLAR, LEVER	59	34

PART NAME INDEX

Part name	Page	Ref.
COLLAR, SETTING	54	12
	57	12
COLLAR, STOPPER	81	27
COLLAR, TANK CUSHION	73	30
CONTACTOR ASSY.	78	4
CONTROL ASSY.	80	5
		6
	81	21
		23
		25
CORD, EARTH	29	15
CORD, STOP SWITCH	77	6
COVER ASSY., CHAIN CASE	85	1
COVER ASSY., CRANKCASE	30	1
	33	1
	34	1
COVER COMP., AIR CLEANER	64	5
	65	5
COVER COMP., FAN	50	2
	52	1
COVER COMP., HEAD	25	6
	26	6
COVER COMP., MUFFLER	68	12
COVER COMP., RR. MUFFLER	68	13
COVER, AIR CLEANER	60	3
	62	3
	63	4
	65	17
	66	2
COVER, DUCT	34	2
COVER, REDUCTION	86	2
CRANKSHAFT COMP.	35	1
		2
		3
		6
		7
		8
CUP, FUEL STRAINER	55	23
	73	22
[D]		
DIAPHRAGM ASSY.	58	24
DISK, CLUTCH FRICTION	86	5
DOWEL PIN, 12X20	26	12
DOWEL PIN, 8X12	31	13
	33	13
	34	12
DOWEL PIN, 8X14	85	9
	87	28
DRIVER, SCREW	90	3
[E]		
ELBOW COMP., AIR CLEANER	60	6
	62	8
	63	8
	64	9
	66	7
ELEMENT, AIR CLEANER	60	1
	62	7
	63	2
	64	2
	65	1
	66	1
EMBLEM	88	2
E-RING, 2MM	59	35
E-RING, 4MM	59	36
	82	11
E-RING, 7MM	59	37
[F]		
FAN, COOLING	74	1
FILTER COMP., FUEL	73	24
FILTER, CUP	73	21
FILTER, DRAIN TUBE	65	9
FILTER, FUEL	73	6
		24
FILTER, OUTER	63	3
	64	3
FLANGE COMP., BAFFLE	69	29
FLOAT SET	53	3
	57	3
FLYWHEEL COMP.	74	4
	75	4
		5
		8
FUSE, BLADE	84	25
[G]		
GASKET SET	53	1
	57	1
GASKET, CYLINDER HEAD	25	5
GASKET, EX. PIPE	67	5
	70	4
	71	2
	92	7
GASKET, MUFFLER	67	6
	68	6
	69	26
	70	5
		10
GAUGE ASSY., THICKNESS	90	5
GAUGE, OIL LEVEL	86	17
GEAR, DRIVE PINION	78	8
GEAR, REDUCTION	78	13
GOVERNOR ASSY.	31	7
	33	7
	34	5
GRID, AIR CLEANER	60	2
	62	2
GRIP	90	4
GRIP, STARTER	44	10
	46	9
	49	10
GROMMET, AIR CLEANER	63	5
	64	6
	66	3
GROMMET, CHOKE ROD	58	26
GROMMET, CORD	76	5
GROMMET, CRANKCASE	91	4
GROMMET, DRAIN HOLE	50	7
GROMMET, FENDER	58	30
GUIDE, CHOKE ROD	58	27
GUIDE, EX. VALVE	25	3
GUIDE, IN. VALVE	25	2
GUIDE, PRE AIR CLEANER	64	12
GUIDE, PUSH ROD	42	15
GUIDE, RATCHET	44	6
	48	6
[H]		
HANDLE, BOX WRENCH	90	8
HARNESS ASSY., ENGINE WIRE	77	15
HARNESS, SUB WIRE	83	8
HEAD COMP., CYLINDER	25	1
HOLDER, BRUSH	78	14
HOLDER, CABLE	80	10
HOLDER, CLUTCH SPRING	86	9
HOLDER, CLUTCH WEIGHT	86	11
HOLDER, GOVERNOR WEIGHT	31	9
	33	9
	34	7
HOLDER, STOP SWITCH CORD	77	7
HOLDER, WIRE	81	26
[I]		
INSULATOR	78	16
INSULATOR, CARBURETOR	54	14
	57	13
[J]		
JET SET, PILOT, #38	56	27
JET SET, PILOT, #40	56	27
	59	44
JET, MAIN, #80	55	26
JET, MAIN, #82	55	26
	56	26
JET, MAIN, #85	55	26
	56	26
	59	43
JET, MAIN, #88	55	26
	56	26
	59	43
JET, MAIN, #90	55	26
	59	43
JET, MAIN, #92	55	26
	59	43
JOINT, FUEL TANK	72	2
JOINT, ROD	58	19

PART NAME INDEX

Part name	Page	Ref.
[K]		
KEY COMP.	83	12
KEY, 6.3X6.3X43	35	4
KEY, 7X7X33	35	4
	85	7
	86	19
KEY, CLUTCH CENTER	86	20
KEY, SPECIAL WOODRUFF, 25X18	75	7
[L]		
LABEL, AIR CLEANER CAUTION	89	11
LABEL, CAUTION	88	3
		4
	89	20
LABEL, WARNING	88	1
LENS ASSY., PROTECTOR	83	14
LEVER COMP., CHOKE	55	18
LEVER COMP., SOLENOID THROTTLE	82	5
LEVER, CHOKE	58	18
LEVER, COCK	55	19
LEVER, CONTROL	80	7
LIFTER, VALVE	40	5
[M]		
MARK, AIR CLEANER	89	17
MARK, AIR CLEANER CAUTION	88	5
	89	15
MARK, AIR CLEANER SALES POINT	89	12
MARK, CHOKE	88	6
	89	13
MARK, CONTROL BOX	83	15
MARK, ENGINE SWITCH	89	16
MARK, EX. CAUTION	89	18
MARK, OIL ALERT	88	7
		8
	89	21
		22
MARK, OPERATOR CAUTION	88	3
		9
	89	14
		19
MARK, THROTTLE INDICATION	89	10
METER ASSY., FUEL	73	23
MOTOR ASSY., STARTER	78	1
MUFFLER COMP.	67	1
	69	27
	70	1
	92	1
		2
		3
[N]		
NOSE, SILENCER	63	12
	66	4
NOZZLE, MAIN	54	11
	57	11
NUT-WASHER, 6MM	78	24
NUT, AIR CLEANER COVER	66	10
NUT, FLANGE, 10MM	29	12
NUT, FLANGE, 5MM	65	10
NUT, FLANGE, 6MM	61	10
	62	12
	63	11
	64	16
	65	11
		12
	66	12
	81	20
NUT, FLANGE, 8MM	68	9
	70	8
	71	3
	73	8
	91	7
NUT, HEX., 4MM	84	22
NUT, HEX., 5MM	68	23
NUT, PIVOT ADJUSTING	42	17
NUT, SELF-LOCK, 6MM	81	17
NUT, SPECIAL, 16MM	75	6
NUT, TOOL BOX SETTING	61	9
	62	11
	63	10
	64	15
	66	11
NUT, U, 6MM	68	22
[O]		
OIL SEAL, 30X46X8	28	5
	29	5
	31	14
	34	13
	85	8
	86	21
OIL SEAL, 30X50X7	87	22
O-RING	54	13
	73	17
O-RING, 14MM	29	11
	73	7
O-RING, 26X2.7	34	14
	87	23
O-RING, 9.0X1.3	73	20
[P]		
PACKING	78	22
PACKING, AIR CLEANER	58	23
	59	55
PACKING, AIR CLEANER CASE	66	8
PACKING, AIR CLEANER COVER	64	4
PACKING, CARBURETOR	55	16
	57	14
	58	14
PACKING, CASE COVER	30	2
	33	2
	34	3
PACKING, CHAIN CASE COVER	85	2
PACKING, ELBOW	62	1
	63	1
	64	1
PACKING, FUEL COCK	55	22
PACKING, FUEL FILLER CAP	72	5
PACKING, HEAD COVER	26	7
PACKING, INSULATOR	55	17
	58	15
PACKING, OIL FILLER CAP	31	5
		6
	33	5
		6
PACKING, REDUCTION COVER	86	3
PANEL COMP., CONTROL	83	5
PAN, CLEANER OIL	62	6
PIN, GOVERNOR WEIGHT	31	10
	33	10
	34	8
PIN, LOCK, 10MM	29	7
PIN, PISTON	38	3
PIN, SPRING, 2X12	55	25
PIN, SPRING, 2X6	82	10
PIPE, EX.	67	3
	70	3
	71	1
PISTON	37	2
	38	2
PIVOT, ROCKER ARM	40	6
	41	6
PLATE COMP., CLUTCH PRESSURE	86	7
PLATE, CLUTCH	86	6
PLATE, FRICTION	43	5
	48	5
PLATE, FUEL INDICATION	73	26
PLATE, LEVER SETTING	55	20
PLUG, SPARK	26	15
	27	15
PROTECTOR COMP., MUFFLER	67	2
	69	28
	70	2
PROTECTOR, CIRCUIT	83	13
PROTECTOR, MUFFLER INNER	92	5
PROTECTOR, MUFFLER OUTER	92	4
PULLEY COMP., STARTER	74	2
PULLEY, RECOIL STARTER	46	3
PULLEY, STARTER	74	3
[R]		
RATCHET, STARTER	43	4
	45	15
	46	4
	47	4
RECTIFIER ASSY., SILICON	83	6

PART NAME INDEX

Part name	Page	Ref.
REEL, RECOIL STARTER	43	3
	47	3
RETAINER, EX. VALVE SPRING	41	12
RETAINER, IN. VALVE SPRING	41	11
		12
RETAINER, SPRING	46	8
RING SET, PISTON	36	1
	37	1
RING, SNAP	78	2
ROD ASSY., CONNECTING	38	4
	39	4
ROD, CHOKE	58	20
ROD, CHOKE CONTROL	58	25
ROD, GOVERNOR	80	2
ROD, PUSH	40	3
ROPE, RECOIL STARTER	44	11
	45	11
	46	10
	49	11
ROTATOR, VALVE	42	14
RUBBER, BOTTOM	91	1
		2
RUBBER, FUEL	73	13
		29
RUBBER, SUPPORTER	72	1
RUBBER, TANK CUSHION	73	28
RUBBER, TANK MOUNTING	73	25
[S]		
SCREEN SET, FUEL STRAINER	73	19
SCREW-WASHER, 4X14	79	27
SCREW-WASHER, 4X6	78	20
SCREW-WASHER, 5X12	59	51
SCREW-WASHER, 5X32	78	23
SCREW-WASHER, 6X20	68	24
SCREW SET	53	5
		7
	57	5
		7
	59	48
SCREW SET, DRAIN	53	6
	57	6
	59	47
SCREW SET, PILOT	53	5
	59	46
SCREW, CENTER	46	11
SCREW, FLAT, 5X10	73	31
SCREW, PAN, 3X12	84	20
SCREW, PAN, 3X6	55	24
SCREW, PAN, 4X12	84	21
SCREW, PAN, 4X6	81	31
SCREW, PAN, 5X12	59	38
SCREW, PAN, 5X16	81	18
SCREW, PAN, 5X16.5	64	14
SCREW, PAN, 5X28	81	19
SCREW, PAN, 5X35	81	22
SCREW, PAN, 5X8	82	9
SCREW, RECESSED, 5X25	81	28
SCREW, SETTING	45	12
	49	12
SCREW, SPECIAL, 6X12	83	17
SCREW, TAPPING, 3X6	51	12
SCREW, TAPPING, 4X6	68	8
		21
	70	11
SCREW, TAPPING, 4X8	92	9
SCREW, TAPPING, 5X25	68	20
SCREW, TAPPING, 5X8	68	7
		19
	70	7
SCREW, TAPPING, 6X10	69	30
	70	6
SCREW, TAPPING, 6X25	68	18
SCREW, THROTTLE STOP	54	10
	57	9
SEAL, AIR CLEANER	65	8
SEAL, AIR CLEANER CASE	65	16
SEAL, AIR CLEANER COVER	65	18
SEAL, CHOKE LEVER	58	32
SEAL, MUFFLER PROTECTOR	92	6
SEAL, VALVE STEM	40	1
SEAT, VALVE SPRING	41	13
SEPARATOR, AIR CLEANER	65	2
SHAFT	78	18
SHAFT COMP., P.T.O.	86	15
SHAFT, GOVERNOR ARM	28	2
SHAFT, P.T.O.	85	5
SHROUD	50	3
	52	2
SLIDER, GOVERNOR	31	11
	33	11
	34	9
SOLENOID ASSY.	82	6
SPACER COMP., CARBURETOR	55	15
	59	55
SPACER, CONTROL LEVER	81	11
SPACER, MUFFLER COVER	68	16
SPANNER, 10X12	90	9
SPANNER, 10X14	90	10
SPANNER, 14X17	90	13
SPRING	78	17
SPRING, AIR CLEANER CASE LID	65	14
SPRING, BRUSH RETURN	78	12
SPRING, CABLE RETURN	81	14
SPRING, CHOKE RETURN	82	2
SPRING, CLUTCH FREE	86	8
SPRING, COCK LEVER	55	21
SPRING, CONTROL ADJUSTING	81	13
SPRING, FRICTION	44	7
	46	5
	48	7
SPRING, GOVERNOR	80	3
	91	5
SPRING, LEVER	80	8
SPRING, MANUAL CHOKE	58	22
SPRING, RATCHET	46	7
SPRING, RECOIL STARTER	44	8
	48	8
SPRING, RETURN	44	9
	45	18
	48	9
SPRING, STARTER RETURN	46	6
SPRING, THROTTLE RETURN	80	4
SPRING, VALVE	41	10
SPRING, WEIGHT RETURN	41	7
SPROCKET COMP., DRIVE	86	13
SPROCKET, DRIVE	85	4
STARTER ASSY., RECOIL	43	1
	45	14
	46	1
	47	1
STARTER SET, RECOIL	45	20
STAY ASSY., MANUAL CHOKE	58	16
STAY COMP., SOLENOID	58	17
STAY, AIR CLEANER	65	4
STAY, MUFFLER COVER	68	15
STAY, SOLENOID THROTTLE	82	4
STOPPER, CHOKE ROD	58	21
STOPPER, DISCHARGE GUARD	91	3
STRAINER COMP., FUEL	73	12
STRAP, CABLE, 118MM	83	18
SUB HARNESS	91	6
SUSPENSION, COUPLER	83	7
SWITCH ASSY., COMBINATION	83	11
SWITCH ASSY., ENGINE STOP	50	4
		6
	51	8
		11
SWITCH ASSY., OIL LEVEL	29	8
SWITCH, THERMO	27	18
[T]		
TANK COMP., FUEL	72	3
TUBE, 11X100	26	13
TUBE, 3.5X130	59	42
TUBE, 3.5X55	59	41
TUBE, 3.5X65	59	41
TUBE, 3.5X75	59	42
TUBE, BREATHER	26	13
	27	17
TUBE, FASTENER, 30MM	83	19
TUBE, FUEL, 4.5X120	73	15
TUBE, FUEL, 4.5X150	59	52
	73	14
TUBE, FUEL, 4.5X210	73	9
TUBE, FUEL, 4.5X222	73	9
TUBE, FUEL, 4.5X250	59	52
TUBE, FUEL, 4.5X430	73	9
[V]		
VALVE ASSY., SOLENOID	59	49
		50

PART NAME INDEX

Part name	Page	Ref.
VALVE SET, FLOAT	53	2
	57	2
VALVE, DASHPOT CHECK	58	28
VALVE, EX.	41	9
VALVE, IN.	41	8
[W]		
WASHER COMP., HEAD COVER	26	10
WASHER, 6X16	32	18
WASHER, 8MM	85	6
WASHER, 8.2X17X0.8	28	4
WASHER, CHOKE LEVER	58	31
WASHER, CONTROL LEVER	80	9
WASHER, DRAIN PLUG, 12MM	29	6
	87	26
WASHER, PLAIN	56	28
	59	54
WASHER, PLAIN, 4MM	84	23
WASHER, PLAIN, 5MM	59	39
	68	25
WASHER, PLAIN, 6MM	31	15
	33	14
	34	15
WASHER, SK	78	21
WASHER, SPRING, 4MM	84	24
WASHER, SPRING, 8MM	87	27
WASHER, TANK CUSHION	73	27
WASHER, THRUST, 25MM	86	18
WASHER, THRUST, 2.7X8	59	33
WEIGHT, CLUTCH	86	10
WEIGHT, GOVERNOR	31	8
	33	8
	34	6
WIRE, WATER COVER	78	15
WRENCH COMP., SPARK PLUG	90	7
WRENCH, BOX	90	6
WRENCH, PLUG	90	12
[Y]		
YOKE COMP.	78	10

1 FOREWORD INDEX

2 ENGINE GROUP

3 PART NUMBER INDEX

4 PART NAME INDEX

HONDA

E.2019.12

Published by Honda Motor Co., Ltd.
Printed in Japan